


User's Manual

802.11n 300Mbps Outdoor Wireless CPE

▶ WBS-202N/WBS-502N

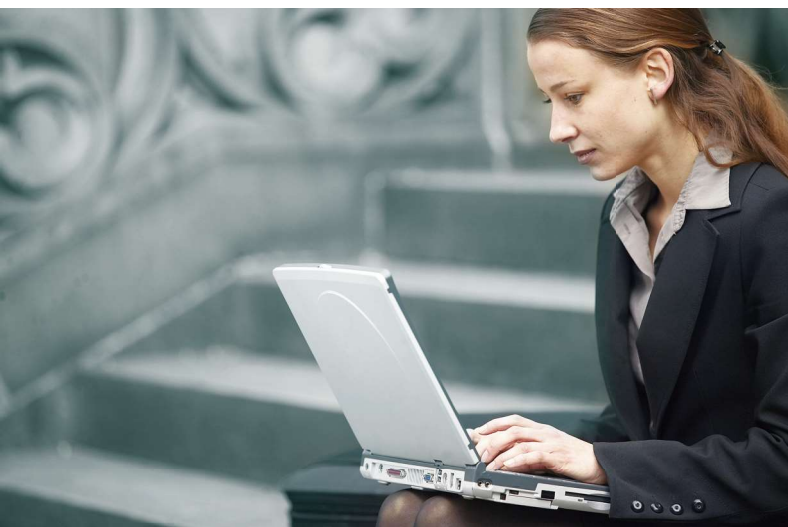

Copyright

Copyright © 2018 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

To assure continued compliance, use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 26cm between the radiator & your body.

CE Compliance Statement

This device meets the RED 2014/53/EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection. The device complies with RF specifications when it is used at a safe distance of 20 cm from your body.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

National Restrictions

This device is intended for home and office use in all EU countries (and other countries following the EU directive 1999/5/EC) without any limitation except for the countries mentioned below:

Country	Restriction	Reasons/remarks
Bulgaria	None	General authorization required for outdoor use and public service
France	Outdoor use; limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz	Military Radiolocation use. Refarming of the 2.4 GHz band has been ongoing in recent years to allow current relaxed regulation. Full implementation planned 2012
Italy	None	If used outside of own premises, general authorization is required
Luxembourg	None	General authorization required for network and service supply(not for spectrum)
Norway	Implemented	This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund
Russian Federation	None	Only for indoor applications

Note: Please don't use the product outdoors in France.

WEEE regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

User Manual of PLANET 802.11n 300Mbps Outdoor Wireless CPE

Model: WBS-202N / WBS-502N

Rev: 1.0 (June, 2018)

Part No. EM-WBS-202N_WBS-502N _v1.0 (2081-E10730-000)

CONTENTS

Chapter 1.Product Introduction	1
1.1 Package Contents	1
1.2 Product Description	2
1.3 Product Features	6
1.4 Product Specifications	7
Chapter 2.Hardware Installation	10
2.1 Product Outlook	10
2.1.1 Port and Button	12
2.1.2 Hardware Description	12
Chapter 3.Connecting to the CPE	13
3.1 System Requirements	13
3.2 Installing the CPE	13
Chapter 4.Quick Installation Guide	15
4.1 Manual Network Setup -- TCP/IP Configuration	15
4.1.1 Configuring the IP Address Manually	15
4.2 Starting Setup in the Web UI	19
Chapter 5.Configuring the CPE	20
5.1 Wizard	20
5.2 Gateway Mode	21
5.2.1 WAN Settings.....	22
5.2.2 Wireless	23
5.3 Repeater Mode	24
5.4 WISP Mode	26
5.5 AP Mode	27
5.6 Super WDS Mode	28
5.7 Advanced	30
5.7.1 Device Status.....	30
5.7.2 Wireless	34
5.7.3 Network.....	39
5.7.4 Firewall.....	45
5.7.5 Management.....	48
Chapter 6.Quick Connection to a Wireless Network	55
6.1 Windows XP (Wireless Zero Configuration)	55
6.2 Windows 7 (WLAN AutoConfig)	57
6.3 Mac OS X 10.x	60

6.4 iPhone/iPod Touch/iPad	64
Appendix A: Planet Smart Discovery Utility	67
Appendix B: FAQs.....	68
Q1: How to set up the AP Client Connection.....	68
Q2: How to set up the WDS Connection	72
Appendix B: Troubleshooting.....	78
Appendix C: Glossary.....	80

FIGURE


FIGURE 2-1 WBS-202N/502N FRONT SIDE	10
FIGURE 2-2 WBS-202N/502N REAR SIDE	10
FIGURE 2-3 WBS-202N RIGHT SIDE	11
FIGURE 2-4 WBS-502N RIGHT SIDE	11
FIGURE 2-5 WBS-202N/WBS-502N INTERFACE	12
FIGURE 3-1 CONNECT THE ANTENNA	13
FIGURE 3-2 CONNECT THE ETHERNET CABLE	14
FIGURE 3-3 CONNECT THE POE INJECTOR	14
FIGURE 4-1 TCP/IP SETTING	16
FIGURE 4-2 WINDOWS START MENU	17
FIGURE 4-3 SUCCESSFUL RESULT OF PING COMMAND	17
FIGURE 4-4 FAILED RESULT OF PING COMMAND	18
FIGURE 4-5 LOGIN BY DEFAULT IP ADDRESS	19
FIGURE 4-6 LOGIN WINDOW	19
FIGURE 5-1 MAIN MENU	20
FIGURE 5-2 OPERATION MODE	21
FIGURE 5-3 GATEWAY MODE	21
FIGURE 5-4 GATEWAY- STATIC IP	22
FIGURE 5-5 GATEWAY – PPPoE (ADSL)	22
FIGURE 5-6 GATEWAY – DHCP	23
FIGURE 5-7 GATEWAY – WIRELESS	23
FIGURE 5-8 REPEATER MODE	24
FIGURE 5-9 REPEATER MODE - SCAN AP	25
FIGURE 5-10 REPEATER MODE - SELECT AP	25
FIGURE 5-11 WISP MODE	26
FIGURE 5-12 WISP MODE – SELECT AP	26
FIGURE 5-13 WISP MODE – SELECT WAN TYPE	27
FIGURE 5-14 AP MODE	27
FIGURE 5-15 SUPER WDS MODE	28
FIGURE 5-16 SUPER WDS MODE – AP1	29
FIGURE 5-17 SUPER WDS MODE – AP2	29
FIGURE 5-18 ADVANCED	30
FIGURE 5-19 STATUS	30
FIGURE 5-20 WIRELESS STATUS	31
FIGURE 5-21 LAN STATUS	32
FIGURE 5-22 WAN STATUS	33
FIGURE 5-23 BASIC SETTINGS	34
FIGURE 5-24 VIRTUAL AP	35
FIGURE 5-25 ACCESS CONTROL - ACCESS ALL	35
FIGURE 5-26 ACCESS CONTROL – ALLOW LISTED	36
FIGURE 5-27 ADVANCED SETTINGS	37
FIGURE 5-28 LAN SETTINGS	39

FIGURE 5-29 IP-MAC BIND	39
FIGURE 5-30 VLAN.....	40
FIGURE 5-31 SNMP	41
FIGURE 5-32 STATIC IP.....	41
FIGURE 5-33 PPPoE (ADSL).....	42
FIGURE 5-34 DHCP	43
FIGURE 5-35 WAN ADVANCED SETTINGS	44
FIGURE 5-36 IP/PORT FILTERING	45
FIGURE 5-37 MAC FILTERING	46
FIGURE 5-38 URL FILTERING	46
FIGURE 5-39 PORT FORWARDING.....	47
FIGURE 5-40 DMZ	48
FIGURE 5-41 SYSTEM TIME.....	48
FIGURE 5-42 SIGNAL TRACKING	49
FIGURE 5-43 DDNS SETTINGS.....	50
FIGURE 5-44 QoS.....	51
FIGURE 5-45 LOGS.....	52
FIGURE 5-46 UPGRADE FIRMWARE	53
FIGURE 5-47 SYSTEM.....	53
FIGURE 5-48 USER.....	54
FIGURE 6-1 SYSTEM TRAY – WIRELESS NETWORK ICON	55
FIGURE 6-2 CHOOSING A WIRELESS NETWORK.....	55
FIGURE 6-3 ENTERING THE NETWORK KEY	56
FIGURE 6-4 CHOOSING A WIRELESS NETWORK -- CONNECTED	56
FIGURE 6-5 NETWORK ICON.....	57
FIGURE 6-6 WLAN AUTOCONFIG.....	57
FIGURE 6-7 TYPING THE NETWORK KEY	58
FIGURE 6-8 CONNECTING TO A NETWORK.....	58
FIGURE 6-9 CONNECTED TO A NETWORK	59
FIGURE 6-10 MAC OS – NETWORK ICON.....	60
FIGURE 6-11 HIGHLIGHTING AND SELECTING THE WIRELESS NETWORK	60
FIGURE 6-12 ENTER THE PASSWORD	61
FIGURE 6-13 CONNECTED TO THE NETWORK.....	61
FIGURE 6-14 SYSTEM PREFERENCES.....	62
FIGURE 6-15 SYSTEM PREFERENCES -- NETWORK	62
FIGURE 6-16 SELECTING THE WIRELESS NETWORK	63
FIGURE 6-17 IPHONE – SETTINGS ICON	64
FIGURE 6-18 WI-FI SETTING.....	64
FIGURE 6-19 WI-FI SETTING – NOT CONNECTED	65
FIGURE 6-20 TURNING ON WI-FI	65
FIGURE 6-21 IPHONE -- ENTERING THE PASSWORD.....	66
FIGURE 6-22 IPHONE -- CONNECTED TO THE NETWORK	66

Chapter 1. Product Introduction

1.1 Package Contents

Thank you for choosing PLANET WBS-202N or WBS-502Ne Wireless AP. Please verify the contents inside the package box.

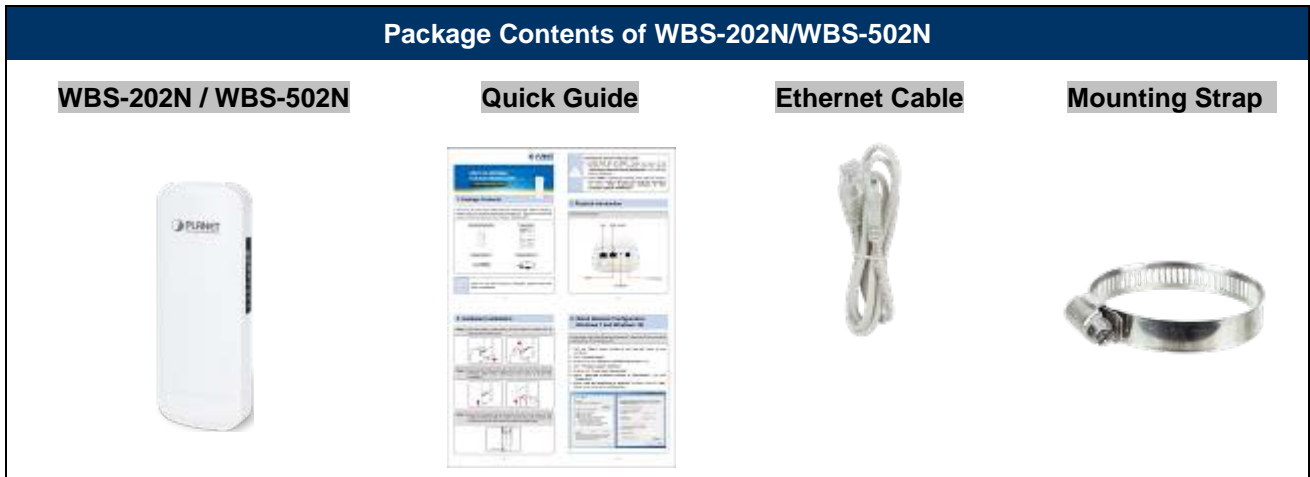

If there is any item missing or damaged, please contact the seller immediately.








1.2 Product Description

Flexible and Reliable Outdoor Characteristics

With the standard **IEEE 802.3at** Power over Ethernet (PoE) design, the WBS-202N and WBS-502N (outdoor wireless CPE) can be easily installed in the areas where power outlets are not available. The outdoor wireless CPE is definitely suitable for wireless IP surveillance, and bridge link of building to building and backbone of public service. Additionally, the **self-healing** capability keeps connection alive all the time. With the **IP55-rated** outdoor enclosure, the outdoor wireless CPE can perform normally under rigorous weather conditions, meaning it can be installed in any harsh, outdoor environments


Designed for Various Requirements

The outdoor wireless CPE is specially designed for long-distance outdoor surveillance and wireless backhaul solutions that are capable of establishing stable bridge connection through the embedded antenna. To provide maximum performance, the outdoor wireless CPE can implement up to 8 operation modes where a multitude of applications in communities, warehouses, campuses, harbors, etc. can be made.

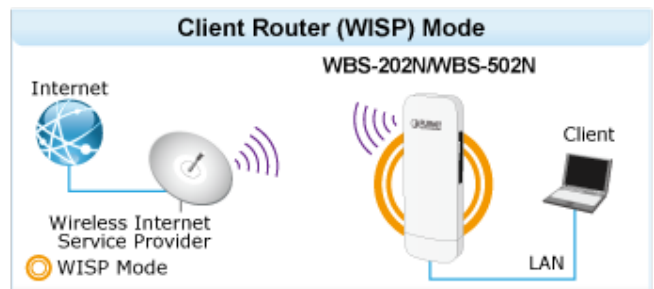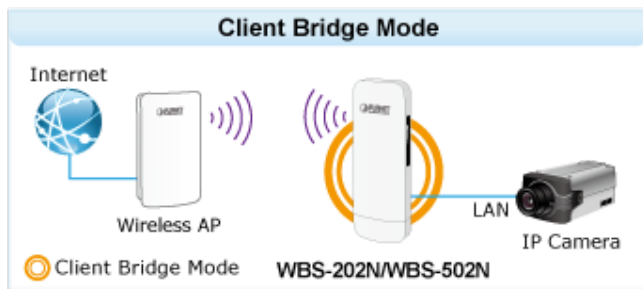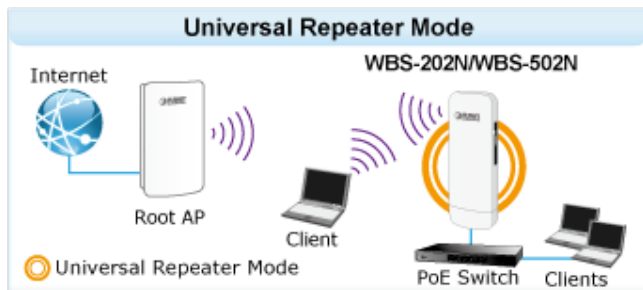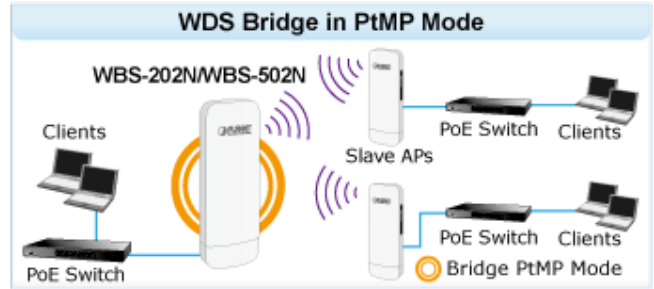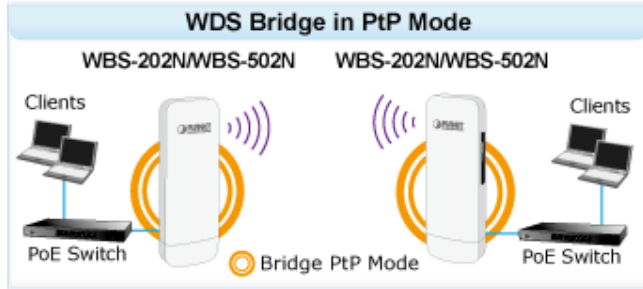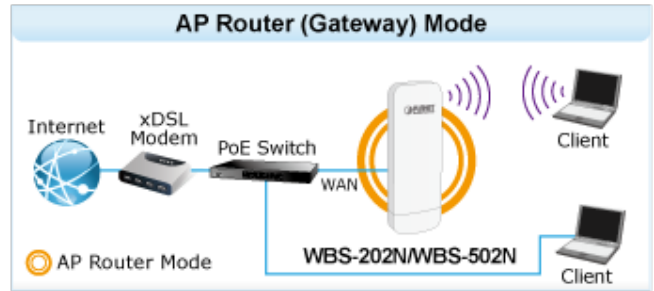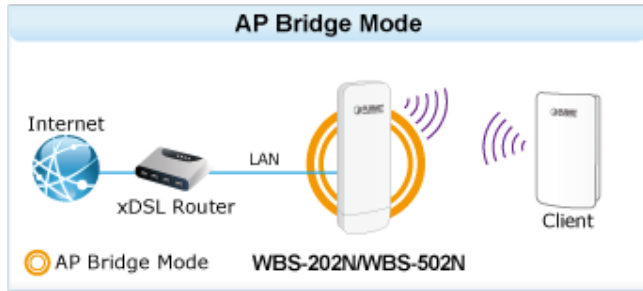

Multiple SSIDs with VLAN Tagging

The outdoor wireless CPE supports WPA/WPA2, and the 802.1X RADIUS authentication to secure the wireless connection. Besides, the supported IEEE 802.1Q VLAN allows multiple VLAN tags to be mapped to multiple SSIDs to distinguish the wireless access. This makes it possible for the outdoor wireless CPE to work with managed Ethernet switches to have VLANs assigned to a different access level and authority.

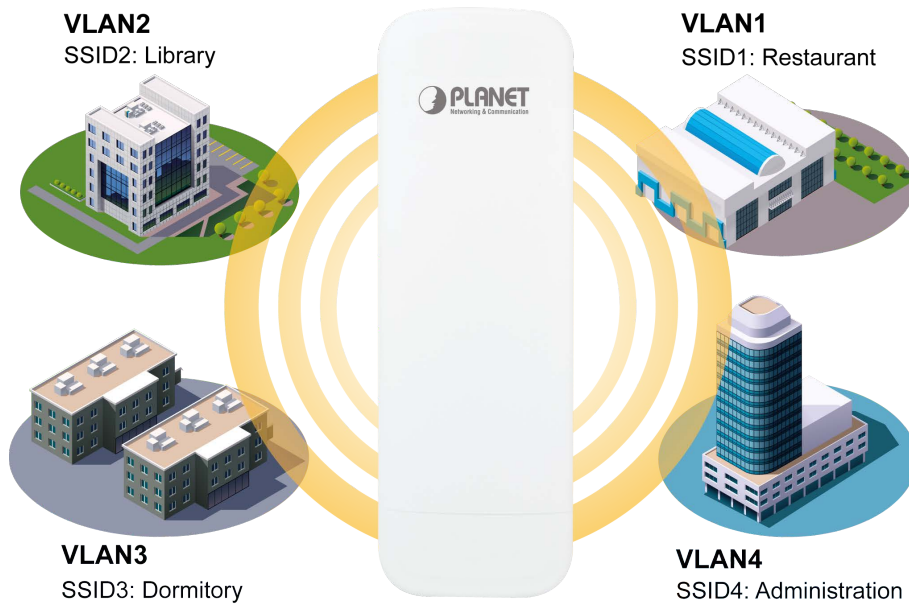


Multi-SSIDs + VLANs

3 Simple Steps to Set Up WDS

Without needing to enter the Web interface for configuration, the outdoor wireless CPE needs three simple steps to establish the WDS PtP connection without any difficulty. By just clicking the **Pair** button on the WBS-202N and within 2 minutes, you can connect two WBS-202Ns without complicated configuration.

3-Steps to Set Up PtP WDS

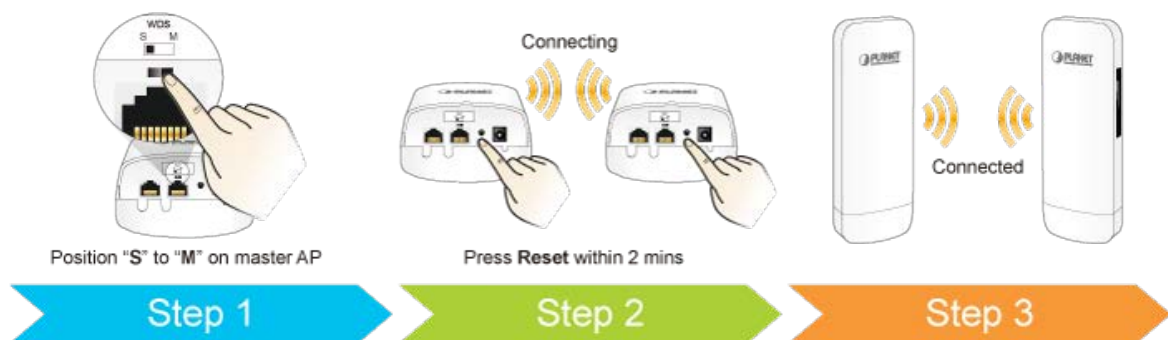

Optimized Efficiency in AP Management

The brand-new GUI configuration wizard helps the system administrator easily set up the outdoor wireless CPE step by step. Besides, the built-in Wi-Fi analyzer provides real-time channel utilization to prevent channel overlapping to assure greater performance. With the automatic transmission power mechanism, distance control and scheduling reboot setting, the outdoor wireless CPE is easier for the administrator to deploy and manage without on-site maintenance. Moreover, you can simply use PLANET AP controller and **SAPC (Smart AP Control)**, to deliver wireless profiles to multiple APs simultaneously, thus making the central management simple.

Multiple OP Modes
Fits various applications

Wi-Fi Signal Tracking
Accelerates antenna alignment

Wi-Fi Channel Analyzer
Prevents Wi-Fi congestion

1.3 Product Features

- **Industrial Compliant Wireless LAN and LAN**
 - Compliant with the IEEE 802.11b/g/n and IEEE 802.11a/n wireless technology
 - 2T2R architecture with data rate of up to 300Mbps
 - Equipped with two 10/100Mbps RJ45 ports with auto MDI/MDI-X supported
- **Fixed Network Broadband Router**
 - Supported WAN connection types: DHCP, Static IP, PPPoE
 - Supports Port Forwarding and DMZ for various networking applications
 - Supports DHCP server in Gateway/WISP mode
- **RF Interface Characteristics**
 - Built-in 14dBi dual-polarization antenna (WBS-202N)
 - Built-in 15dBi dual-polarization antenna (WBS-502N)
 - High output power with multiply-adjustable transmit power control
- **Outdoor Environmental Characteristics**
 - IP55 rating
 - IEEE 802.3at Power over Ethernet design
 - Operating temperature: -20~70 degrees C
- **Multiple Operation Modes and Wireless Features**
 - Multiple operation modes: AP, Gateway, Repeater, WDS, WISP
 - WMM (Wi-Fi multimedia) provides higher priority to multimedia transmitting over wireless
 - Coverage threshold to limit the weak signal of clients occupying session
 - Real-time Wi-Fi channel analysis chart and client limit control for better performance
- **Secure Network Connection**
 - Full encryption supported: WPA/WPA2, WPA-PSK/WPA2-PSK and 802.1X RADIUS authentication
 - Supports 802.1Q VLAN and SSID-to-VLAN mapping
 - Supports IP/Port/MAC address/URL filtering, DoS, SPI Firewall
 - Supports DMZ and Port Forwarding
 - Bandwidth control per IP address to increase network stability
- **Easy Installation and Management**
 - 3 simple steps to establish WDS connection easily
 - Supports PLANET AP Controllers in AP mode
 - Easy discovery by PLANET Smart Discovery
 - Self-healing mechanism through system auto reboot setting
 - System status monitoring through remote Syslog Server
 - Supports PLANET DDNS/ Easy DDNS

1.4 Product Specifications

Model Name	WBS-202N		WBS-502N			
Description	WBS-202N: 2.4GHz 802.11n 300Mbps Outdoor Wireless CPE WBS-502N: 5GHz 802.11n 300Mbps Outdoor Wireless CPE					
Hardware Features						
Interfaces	Wireless IEEE802.11b/g/n, 2T2R		Wireless IEEE 802.11a/n, 2T2R			
	PoE: 1 x 10/100BASE-TX, auto-MDI/MDIX, 802.3at PoE In LAN: 1x 10/100BASE-TX, auto-MDI/MDIX					
Antennas	Built-in 14dBi directional antenna with dual polarization		Built-in 15dBi directional antenna with dual polarization			
Button	Reset/Pair button, WDS Switch					
Dimensions	87 x 38 x 260mm					
Weight	405g					
Power Requirements	48V 0.5A, IEEE 802.3at PoE+					
Power Consumption	< 13W					
Wireless Interface Specifications						
Standard	IEEE 802.11b/g/n IEEE 802.11i IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control		IEEE 802.11a/n IEEE 802.11i IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control			
Media Access Control	CSMA/CA					
Modulation	802.11g/n: OFDM (BPSK/ QPSK/ 16QAM/ 64QAM) 802.11b: DSSS (DBPSK/ DQPSK/ CCK)		802.11a/n: OFDM (BPSK/ QPSK/ 16QAM/ 64QAM)			
Frequency Band	FCC: 2.412~2.462GHz ETSI: 2.412~2.472GHz		FCC: 5.180~5.240GHz, 5.745~5.825GHz ETSI: 5.180~5.700GHz			
Operating Channels	FCC: 1~11 Channels ETSI: 1~13 Channels		FCC: 36, 40, 44, 48, 149, 153, 157, 161, 165 (9 channels) ETSI: 36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140 (16 channels) 5GHz channel list will vary in different countries according to their regulations.			
Max. Transmit Power (dBm)	FCC: up to 29 ± 1dBm ETSI: < 20dBm (EIRP)		FCC: up to 27 ± 2dBm ETSI: < 20dBm (EIRP)			
	Network Mode	Data Rate	Receive Sensitivity (dBm)	Network Mode	Data Rate	Receive Sensitivity (dBm)

	802.11b	1Mbps	-95			
		11Mbps	-90			
	802.11g	6Mbps	-90	802.11a	6Mbps	-92
		54Mbps	-72		54Mbps	-75
	802.11n HT20	MCS0/MCS 8	-90	802.11n HT20	MCS0/MCS S8	-91
		MCS7/MCS 15	-72/-68		MCS7/MCS S15	-72
	802.11n HT40	MCS0/MCS 8	-90	802.11n HT40	MCS0/MCS S8	-88
		MCS7/MCS 15	-72/-68		MCS7/MCS S15	-70

Environment & Certification

Operating Temperature	-20 ~ 70 degrees C
Operating Humidity	5 ~ 90% (non-condensing)
IP Level	IP55
ESD Protection	± 8kV air-gap discharge ± 4kV contact discharge
Surge Protection	± 4kV
Regulatory	CE, RoHS

Software

LAN	Static IP
	Supports IP-MAC binding
WAN Type (GW/WISP mode)	<ul style="list-style-type: none"> ■ Static IP ■ Dynamic IP ■ PPPoE
Wireless Modes	<ul style="list-style-type: none"> ■ Access Point ■ Gateway ■ Repeater ■ WDS (AP/Bridge/Station) ■ WISP
Channel Width	20MHz, 40MHz
Encryption Type	WPA, WPA-PSK, WPA2, WPA2-PSK, 802.1X
Wireless Security	Enable/Disable SSID Broadcast
	Wireless MAC address filtering
	User Isolation
Max. SSIDs	4

Max. Wireless Clients	64 per radio (50 is suggested, depending on usage)
Max. WDS Peers	4 (Up to 3 peers by using "One-click WDS")
Wireless QoS	Supports Wi-Fi Multimedia (WMM)
Wireless Advanced	Auto Channel Selection
	5-level Transmit Power Control (100%, 75%, 50%, 25%, 12.5%)
	Client Limit Control, Coverage Threshold
	Distance control (Auto Ack Timeout)
	Wi-Fi channel analysis chart
	Fast Roaming
Status Monitoring	Device status, wireless client List
	PLANET Smart Discovery
	DHCP client table
	System Log supports remote syslog server
VLAN	IEEE 802.1Q VLAN (VID: 3~4094)
	SSID-to-VLAN mapping up to 4 SSIDs
Self-healing	Supports auto reboot settings per day/hour
Management	Remote management through PLANET DDNS/ Easy DDNS
	Configuration backup and restore
	Supports UPnP
	Supports IGMP Proxy
	Supports PPTP/L2TP/IPSec VPN Pass-through
	SNMP v1/v2c/v3 support, MIB I/II, Private MIB
Central Management	Applicable controllers: WAPC-500, WAPC-1000 and Smart AP Control(SAPC)

Chapter 2. Hardware Installation

2.1 Product Outlook

WBS-202N/502N

- Dimensions: 87 x 38 x 260mm
- Front Side :



Figure 2-1 WBS-202N/502N Front Side

Rear Side



Figure 2-2 WBS-202N/502N Rear Side

RightSide



Figure 2-3 WBS-202N Right Side



Figure 2-4 WBS-502N Right Side

LED Definition

LED	State	Meaning
Power	On	The device is powered on
	Off	The device is powered off
WAN Port	On	Port linked
	Blinking	Data is transmitting or receiving data
	Off	No link
LAN Port	On	Port linked
	Blinking	Data is transmitting or receiving data
	Off	No link
WLAN	On	The wireless radio is on
	Blinking	Data is transmitting or receiving over wireless
	Off	The wireless radio is off

2.1.1 Port and Button

It provides a simple interface monitoring the AP. Figure 2-5 shows the hardware interface of the WBS-202N/502N.

WBS-202N/502N Hardware Interface:

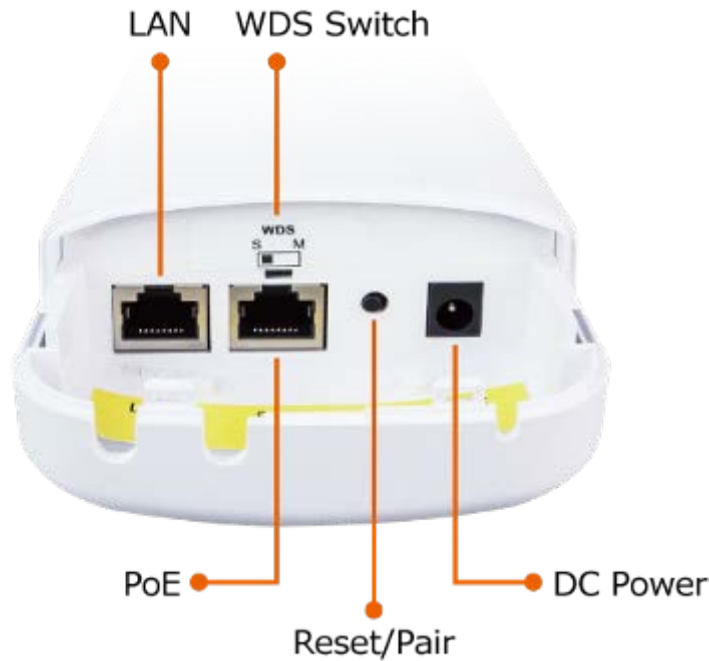


Figure 2-5 WBS-202N/WBS-502N Interface

2.1.2 Hardware Description

Hardware Interface Definition

Object	Description
PoE LAN Port	10/100Mbps RJ45 port, auto MDI/MDI-X
LAN Port	10/100Mbps RJ45 port, auto MDI/MDI-X
WDS Switch	Position "S" to "M" on the master AP. Stay in "S" on the slave AP.
Reset/Pair Button	Press and hold the Reset button on the device for over 15 seconds to return to the factory default setting. Press the Pair button within 2 minutes on both sides to establish WDS PtP connection.

Chapter 3. Connecting to the CPE

3.1 System Requirements

- Broadband Internet Access Service (Cable/xDSL/Ethernet connection)
- One IEEE 802.3at PoE switch (supply power to the WBS-202N/502N)
- PCs with a working Ethernet adapter and an Ethernet cable with RJ45 connectors
- PCs running Windows 98/ME, NT4.0, 2000/XP, Windows Vista / Win 7, MAC OS 9 or later, Linux, UNIX or other platforms compatible with **TCP/IP** protocols



1. The CPE in the following instructions refers to PLANET WBS-202N/WBS-502N.
2. It is recommended to use Internet Explorer 11, Firefox or Chrome to access the CPE.

3.2 Installing the CPE

Before installing the CPE, make sure your PoE switch is connected to the Internet through the broadband service successfully at this moment. If there is any problem, please contact your local ISP. After that, please install the AP according to the following steps. Don't forget to pull out the power plug and keep your hands dry.

Please install the AP according to the following steps. Don't forget to pull out the power plug and keep your hands dry.

Step 1. Push the latch on the bottom of the Outdoor Wireless CPE to remove the sliding cover.

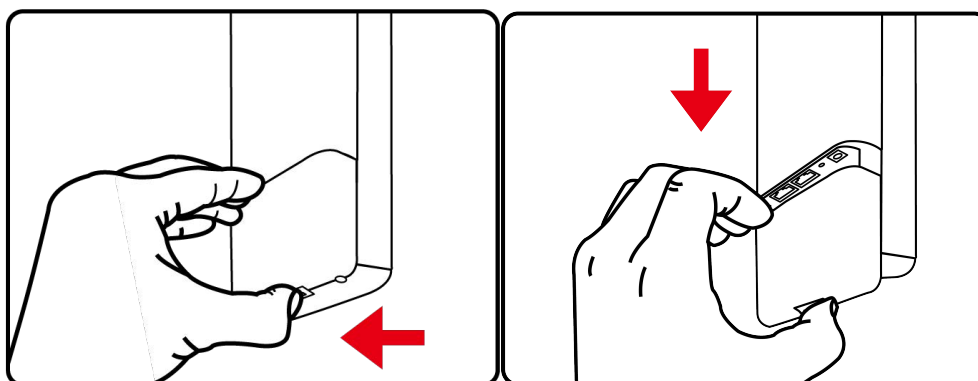


Figure 3-1 Connect the Antenna

Step 2. Plug the RJ45 Ethernet cable into the PoE Port of the Outdoor Wireless CPE. Then, slide back the cover to finish the installation.

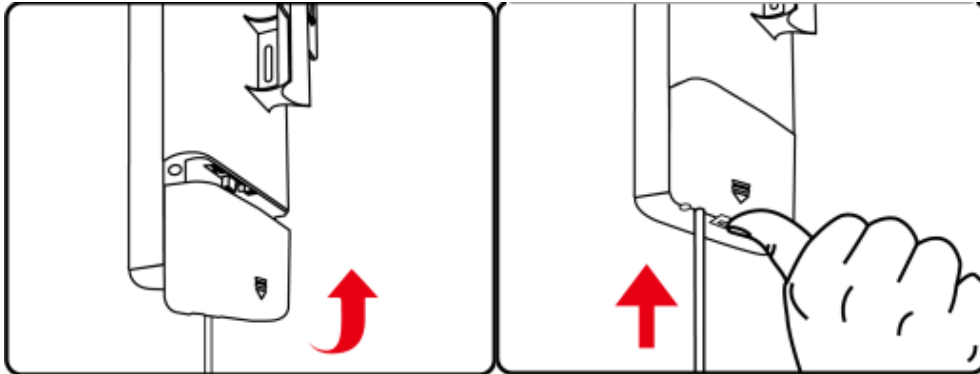


Figure 3-2 Connect the Ethernet cable

Step 3. Place the mounting strap through the slot on the back of the Outdoor Wireless CPE and then around the pole. Tighten the mounting strap to secure the Outdoor Wireless CPE.

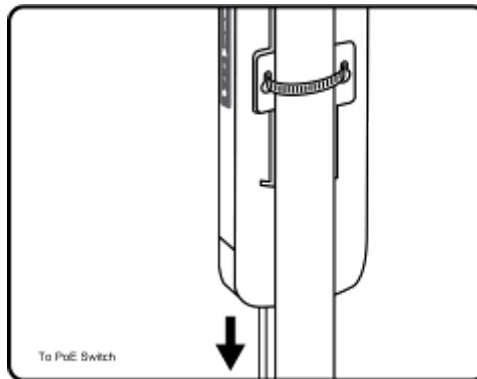


Figure 3-3 Connect the PoE injector

Chapter 4. Quick Installation Guide

This chapter will show you how to configure the basic functions of your CPE within minutes.



A computer with wired Ethernet connection to the Wireless CPE is required for the first-time configuration.

4.1 Manual Network Setup -- TCP/IP Configuration

The default IP address of the WBS-202N/WBS-502N is **192.168.1.253**. And the default Subnet Mask is 255.255.255.0. These values can be changed as you want. In this guide, we use all the default values for description.

Connect the WBS-202N/WBS-502N with your PC by an Ethernet cable plugging in LAN port on one side and in LAN port of PC on the other side. Please power on the WBS-202N/WBS-502N by PoE switch through the PoE port.

In the following sections, we'll introduce how to install and configure the TCP/IP correctly in **Windows 10**. And the procedures in other operating systems are similar. First, make sure your Ethernet Adapter is working, and refer to the Ethernet adapter manual if needed.

4.1.1 Configuring the IP Address Manually

Summary:

- Set up the TCP/IP Protocol for your PC.
 - Configure the network parameters. The IP address is 192.168.1.xxx (If the default IP address of the WBS-202N/WBS-502N is 192.168.1.253, and the DSL router is 192.168.1.254, the "xxx" can be configured to any number from 1 to 252.) and subnet mask is 255.255.255.0.
- 1 Select **Use the following IP address**, and then configure the IP address of the PC.
 - 2 For example, as the default IP address of the WBS-202N/WBS-502N is 192.168.1.253 and the DSL router is 192.168.1.254, you may choose from 192.168.1.1 to 192.168.1.252.

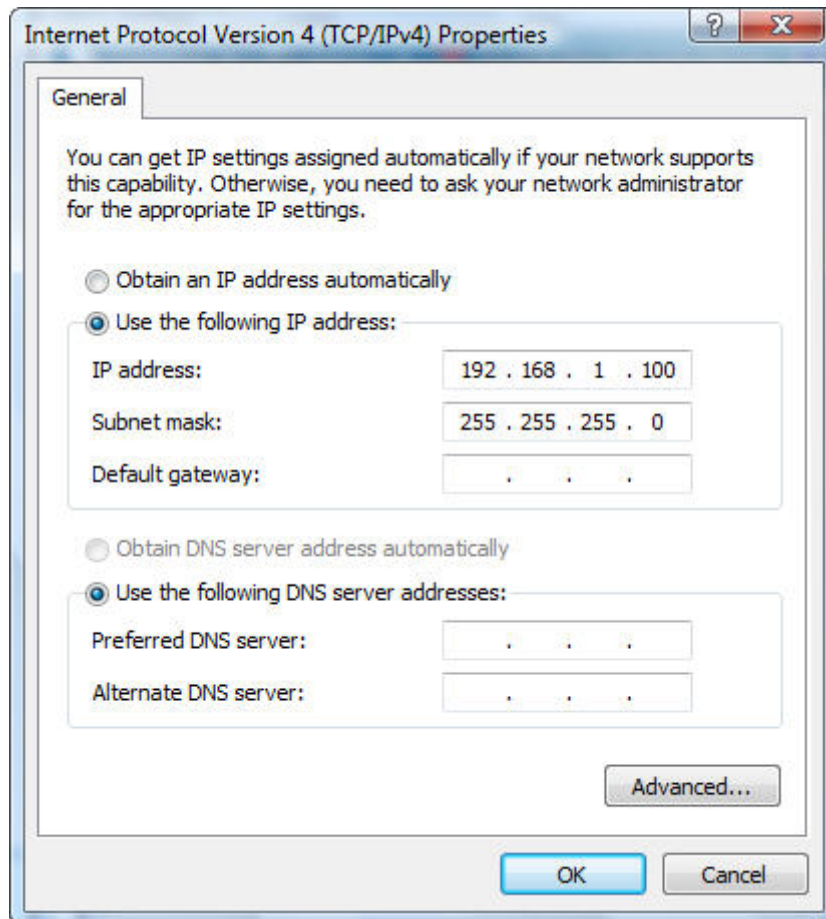


Figure 4-1 TCP/IP Setting

Now click **OK** to save your settings.

Now, you can run the ping command in the **command prompt** to verify the network connection between your PC and the AP. The following example is in **Windows 10** OS. Please follow the steps below:

1. Click on **Start > Run**.
2. Type "**cmd**" in the Search box.

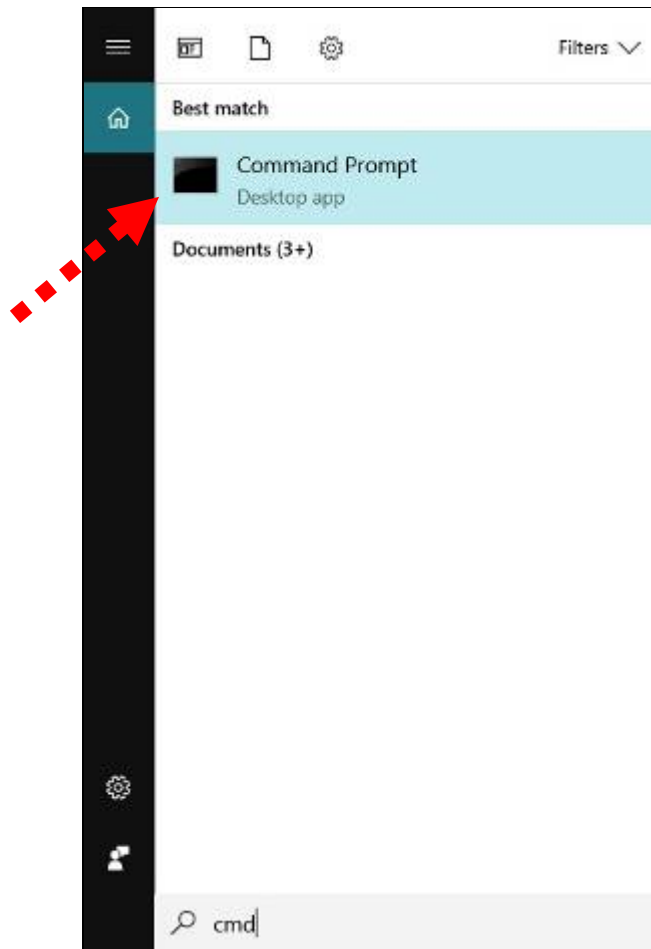


Figure 4-2 Windows Start Menu

3. Open a command prompt, type ping **192.168.1.253** and then press **Enter**.
 - ◆ If the result displayed is similar to **Figure 4-3**, it means the connection between your PC and the AP has been established well.


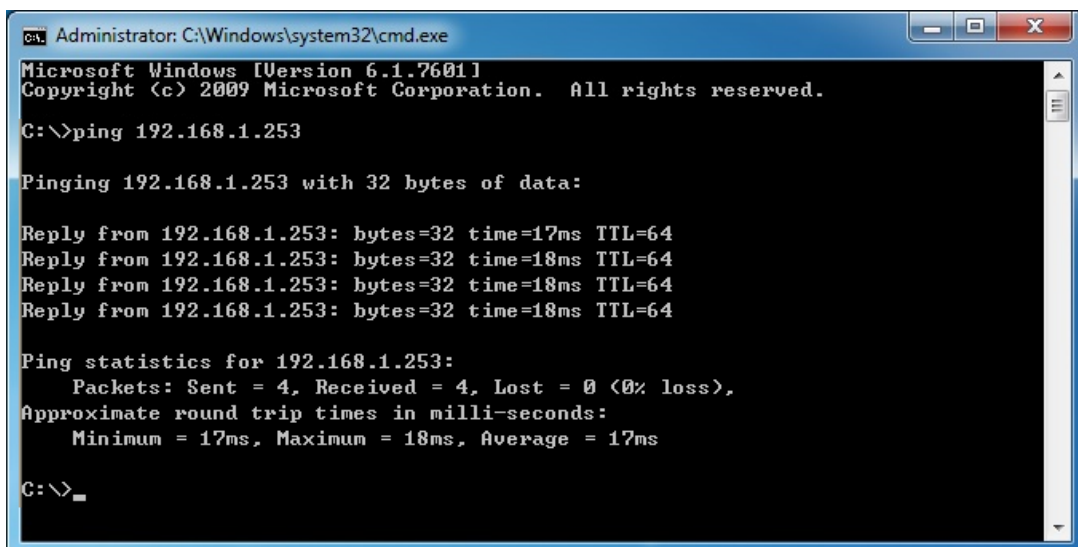


Figure 4-3 Successful Result of Ping Command

- ◆ If the result displayed is similar to **Figure 4-4**, it means the connection between your PC and the AP has failed.

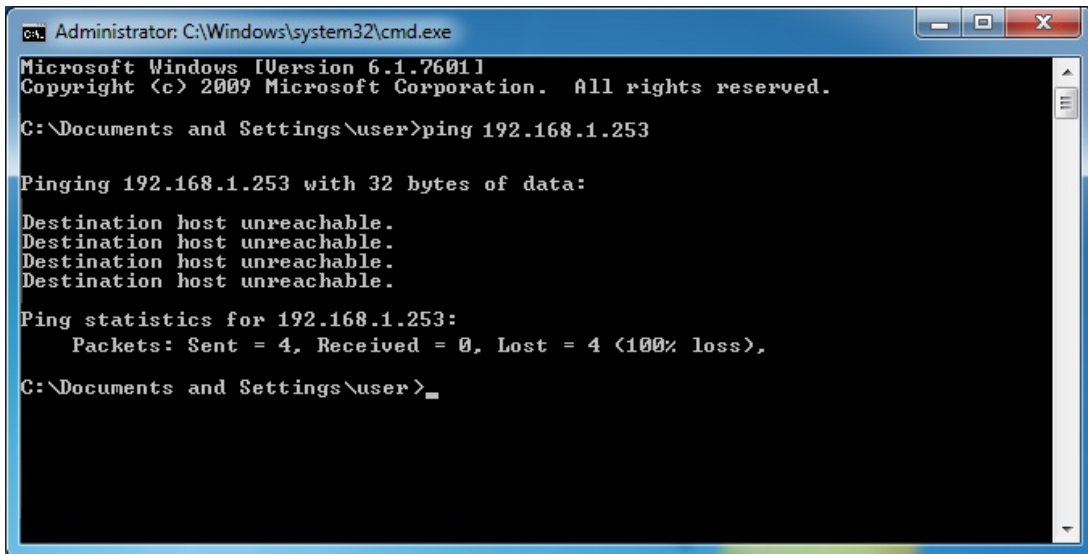

```
cs: Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Documents and Settings\user>ping 192.168.1.253

Pinging 192.168.1.253 with 32 bytes of data:

Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.1.253:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),

C:\Documents and Settings\user>
```

Figure 4-4 Failed Result of Ping Command

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your AP. Some firewall software programs may block a DHCP request on newly installed adapters.

4.2 Starting Setup in the Web UI

It is easy to configure and manage the CPE with the web browser.

Step 1. To access the configuration utility, open a web-browser and enter the default IP address <http://192.168.1.253> in the web address field of the browser.

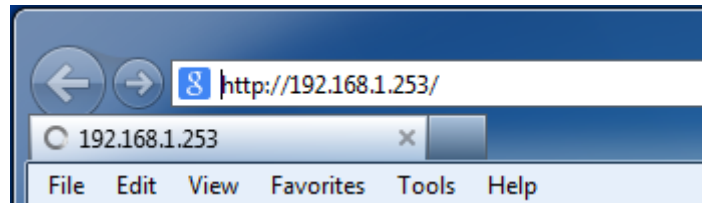


Figure 4-5 Login by Default IP Address

After a moment, a login window will appear. Enter **admin** for the password in lower case letters. Then click **LOGIN** or press the **Enter** key.



Figure 4-6 Login Window

Default IP Address: **192.168.1.253**

Default Password: **admin**



If the above screen does not pop up, it may mean that your web-browser has been set to a proxy. Go to Tools menu> Internet Options> Connections> LAN Settings on the screen that appears, uncheck **Using Proxy** and click **OK** to finish it.

Chapter 5. Configuring the CPE

This chapter delivers a detailed presentation of CPE’s functionalities and features 3 main items below, allowing you to manage the CPE with ease. The screen shots use the WBS-202N as an example.



Figure 5-1 Main Menu

The page includes the following fields:

Object	Description
CPU Usage	It shows the CPU usage
Wireless Settings	Enter the Wireless settings to enable or disable wireless LAN
LAN Settings	Enter the LAN settings to change the LAN IP address.
Super WDS Settings	Enter the page to configure the WDS settings

5.1 Wizard

The Wizard guides you to configuring the WBS-202N/WBS-502N in a different mode, including Gateway, Repeater, WISP, AP and Super WDS mode.



Figure 5-2 Operation Mode



The default operation mode is Super WDS.

5.2 Gateway Mode

Click “Wizard” → “Gateway Mode” and the following page will be displayed. This section allows you to configure the Gateway mode.

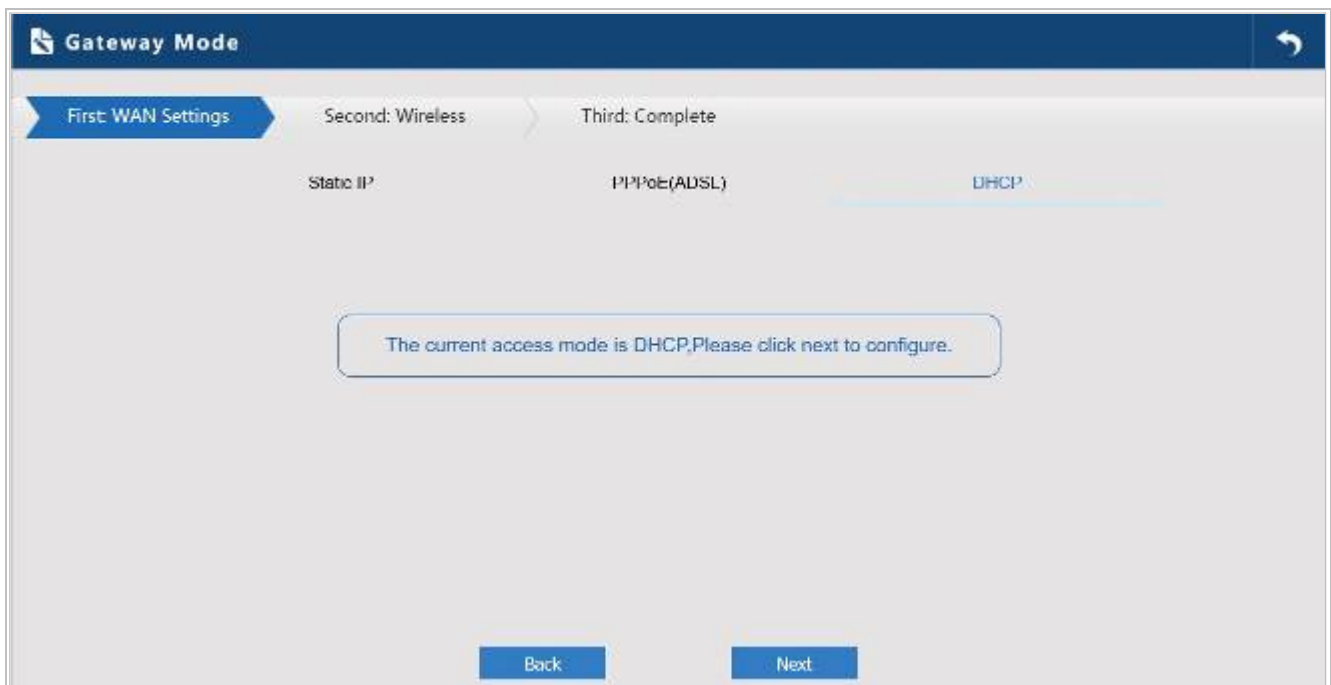


Figure 5-3 Gateway Mode

5.2.1 WAN Settings

Static IP

If your ISP offers you static IP Internet connection type, select “**Static IP**” and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.



Figure 5-4 Gateway- Static IP

The page includes the following fields:

Object	Description
IP Address	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
Subnet Mask	Enter WAN Subnet Mask provided by your ISP
Default Gateway	Enter the WAN Gateway address provided by your ISP
Primary DNS	Enter the necessary DNS address provided by your ISP

PPPoE (ADSL)

Select **PPPOE** if your ISP is using a PPPoE connection and provide you with PPPoE user name and password info.



Figure 5-5 Gateway – PPPoE (ADSL)

The page includes the following fields:

Object	Description
PPPoE Name	Enter the User Name provided by your ISP
PPPoE Password	Enter the password provided by your ISP

DHCP

Choose “DHCP” and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

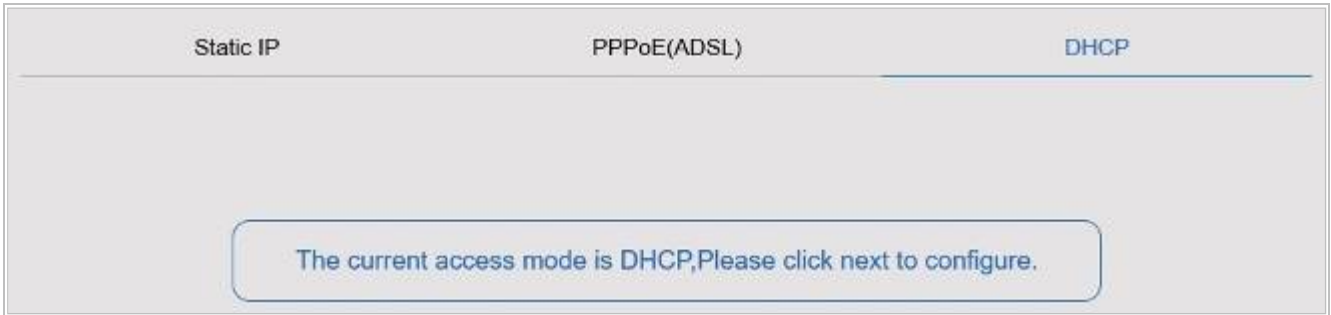


Figure 5-6 Gateway – DHCP

5.2.2 Wireless

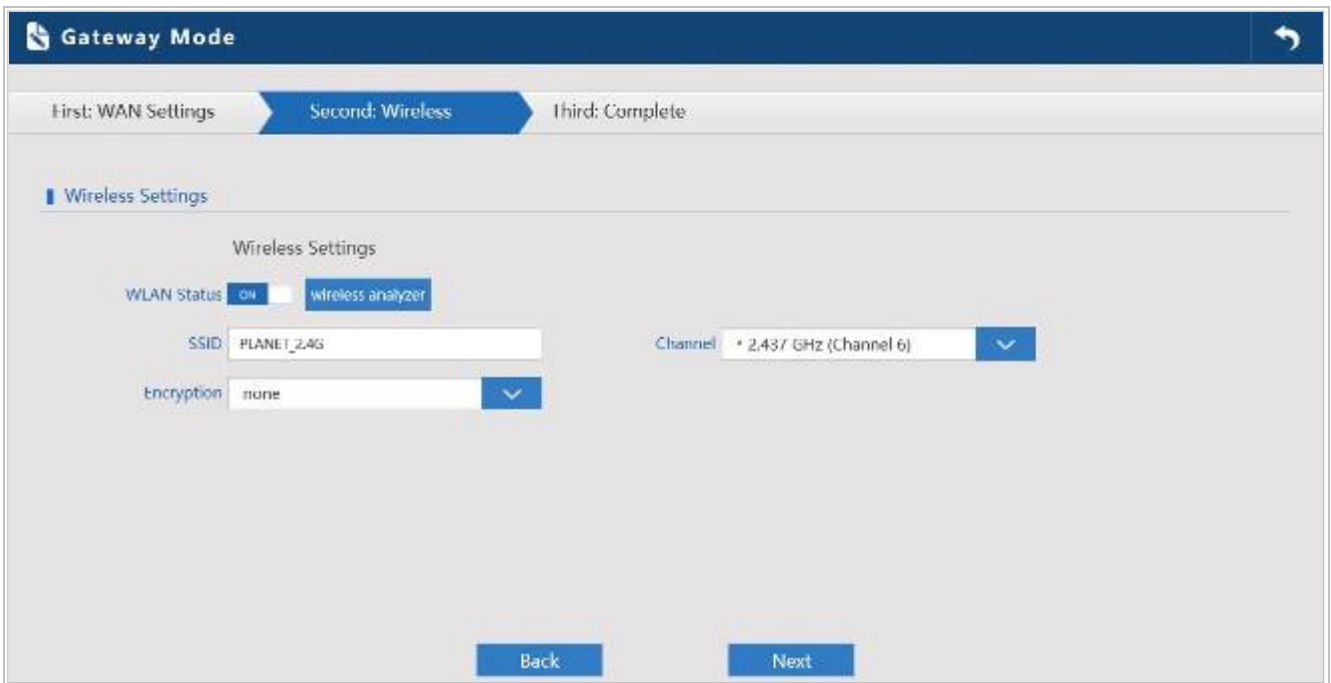


Figure 5-7 Gateway – Wireless

The page includes the following fields:

Object	Description
WLAN Status	Select ON or OFF to enable or disable wireless LAN
Wireless Analyzer	Press the button to check your wireless environment
SSID	It is the wireless network name. The default SSID is PLANET_2.4G or PLANET_5G
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
Encryption	Select the wireless encryption. The default is None

5.3 Repeater Mode

Click “Wizard” → “Repeater Mode” and the following page will be displayed. This section allows you to configure the Repeater mode.

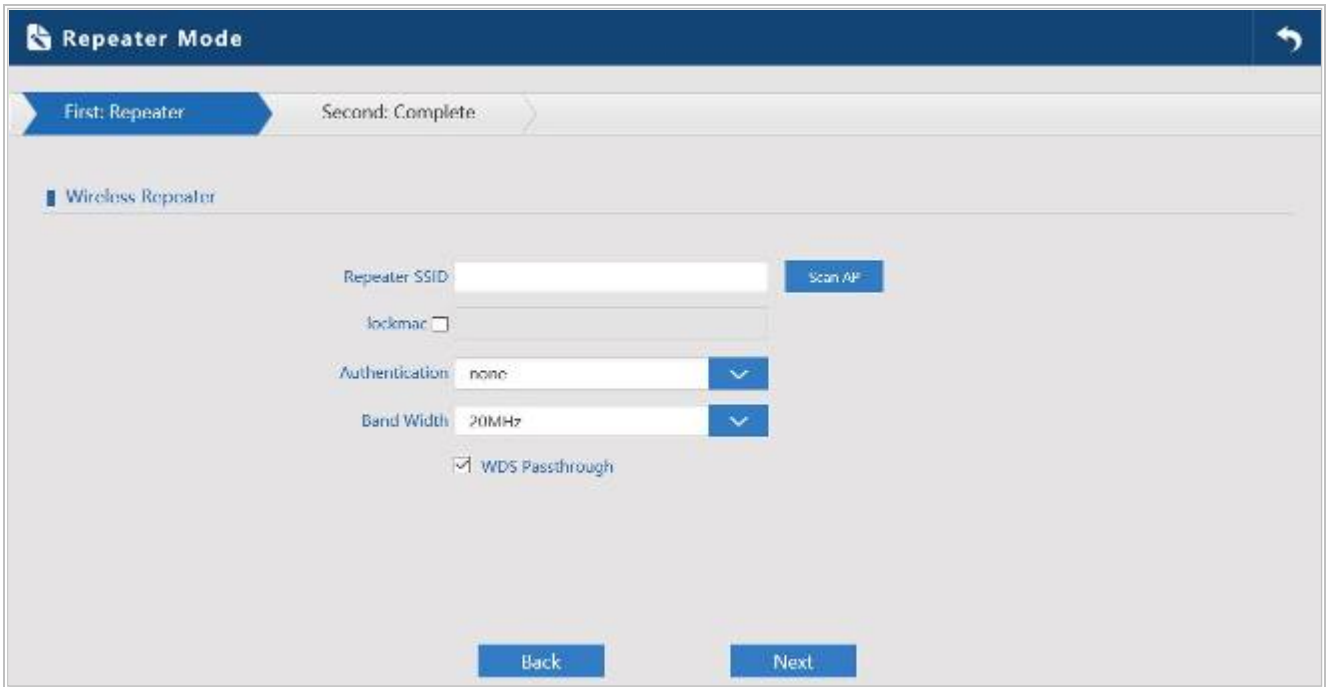


Figure 5-8 Repeater Mode

The page includes the following fields:

Object	Description
Repeater SSID	Enter the root AP’s SSID or press “Scan AP” to select
Lockmac	Check to lock the root AP’ MAC address
Authentication	Select the wireless encryption of root AP
Bandwidth	Select the operating channel width, “20MHz” or “40MHz”
WDS Passthrough	Check to enable WDS pass through if the root AP is the same model as client

Press **Scan AP** to show the root AP that you need to repeat and press **Choice** to select the AP.

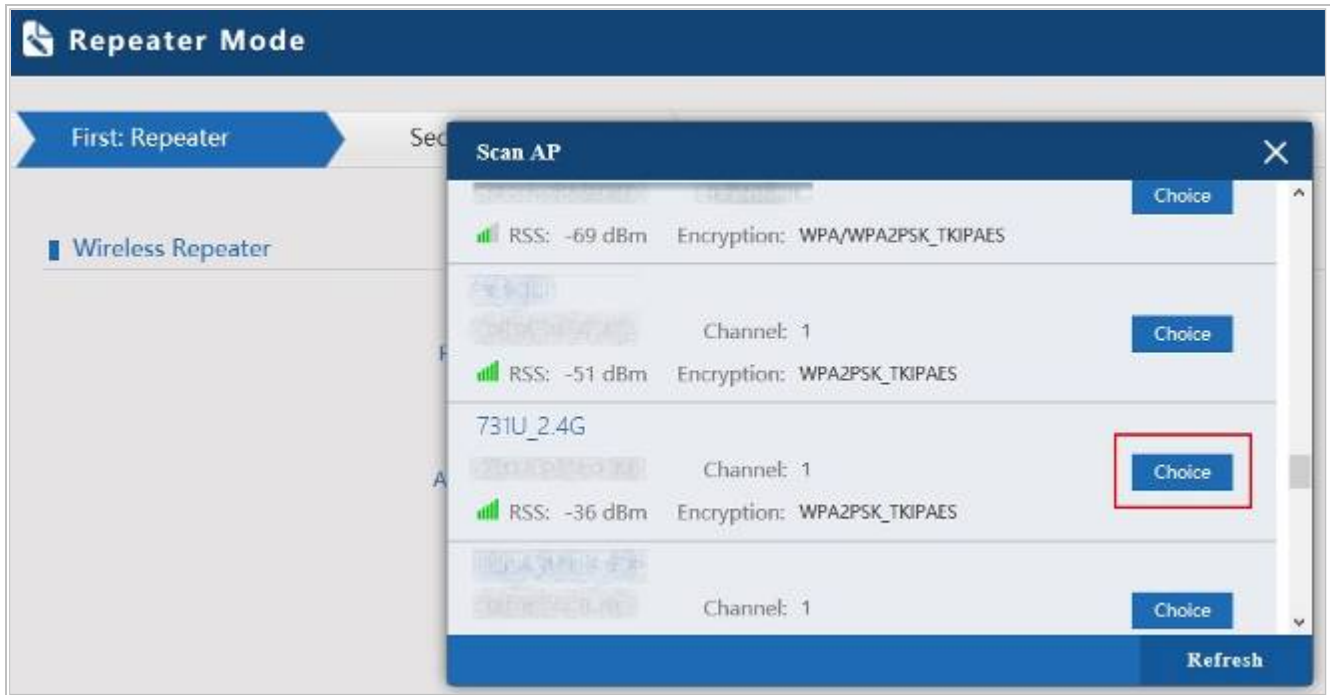


Figure 5-9 Repeater Mode - Scan AP

Select the authentication and bandwidth which are the same as root AP to establish the connection.

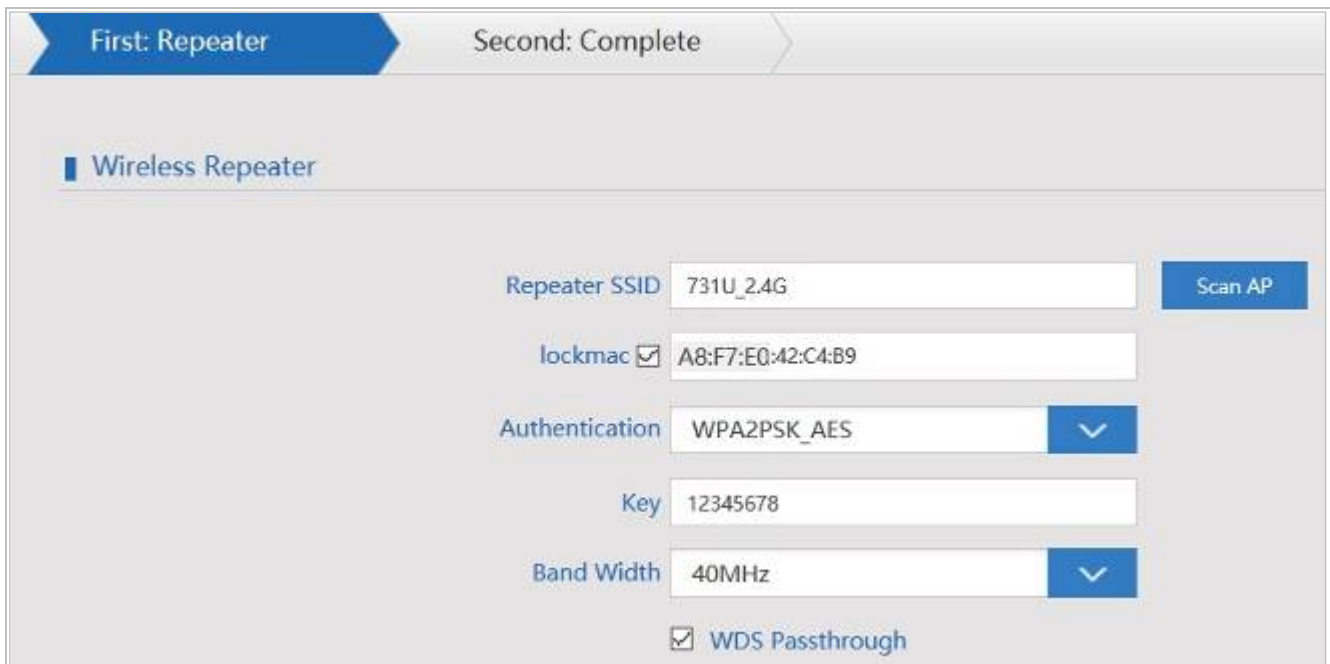


Figure 5-10 Repeater Mode - Select AP

5.4 WISP Mode

Click “Wizard” → “WISP Mode” and the following page will be displayed. This section allows you to configure the WISP mode.

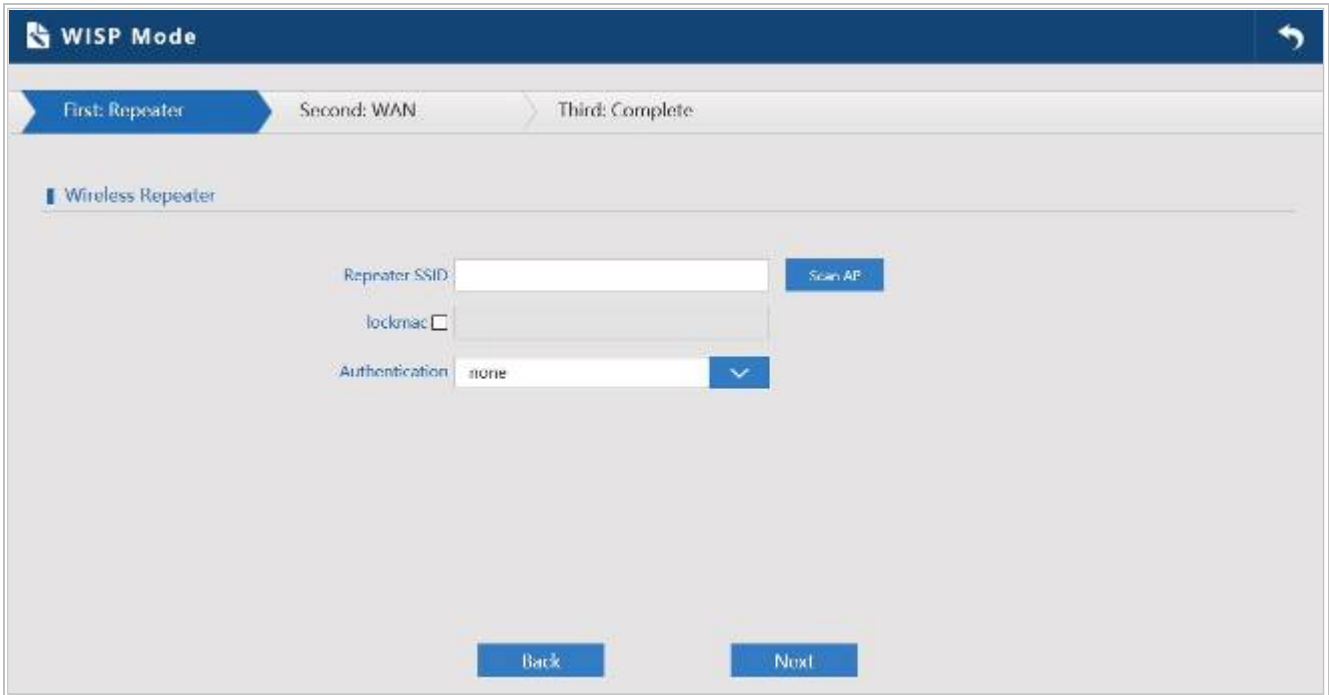


Figure 5-11 WISP Mode

The page includes the following fields:

Object	Description
Repeater SSID	Enter the root AP’s SSID or press “Scan AP” to select
Lockmac	Check to lock the root AP’ MAC address
Authentication	Select the wireless encryption of root AP

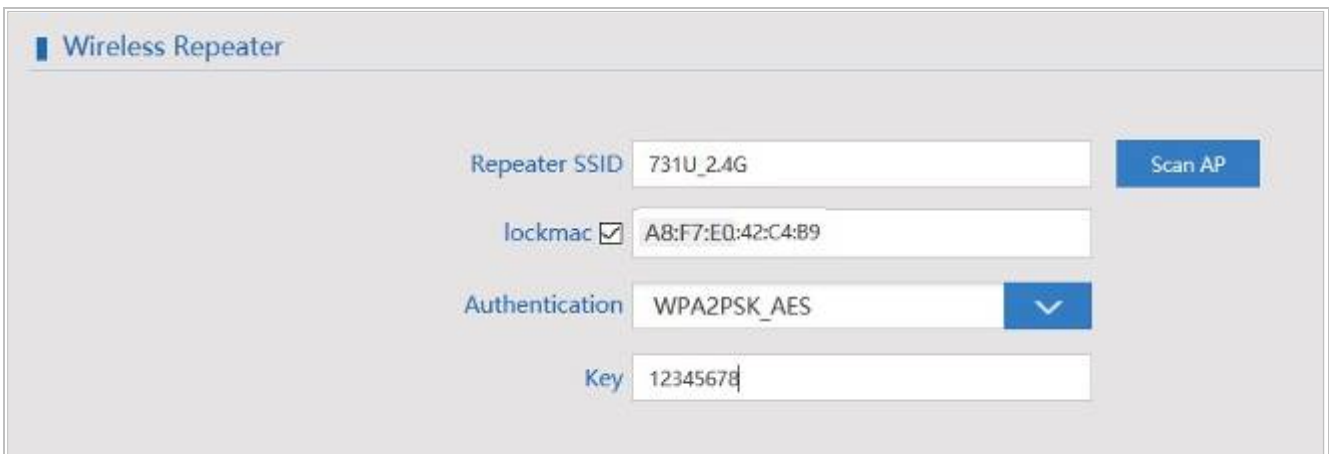


Figure 5-12 WISP Mode – Select AP



Figure 5-13 WISP Mode – Select WAN type

5.5 AP Mode

Click **“Wizard”** → **“AP Mode”** and the following page will be displayed. This section allows you to configure the AP mode.

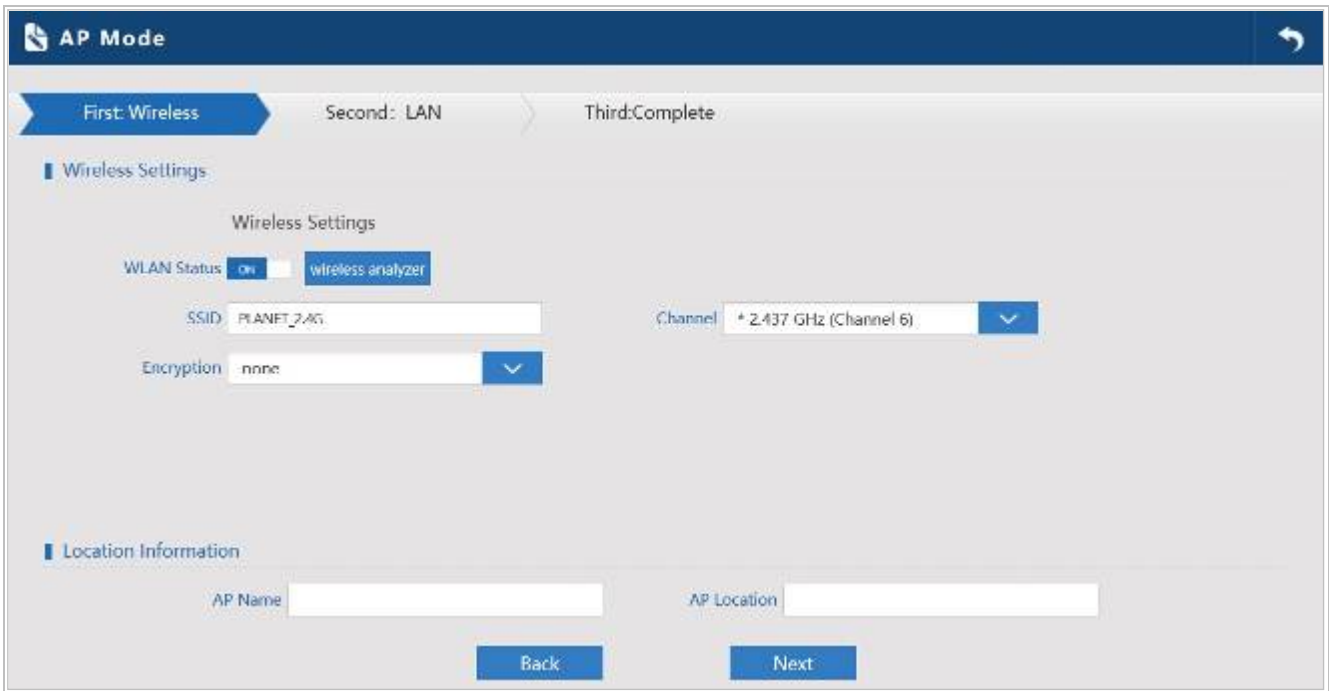


Figure 5-14 AP Mode

The page includes the following fields:

Object	Description
WLAN Status	Select “ON” or “OFF” to enable or disable wireless LAN
Wireless Analyzer	Press the button to check your wireless environment
SSID	It is the wireless network name. The default SSID is “PLANET_2.4G” or “PLANET_5G”
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.

Encryption	Select the wireless encryption. The default is "None"
AP Name	Enter the name of CPE
AP Location	Enter the location of CPE

Enter the LAN IP address.

First: Wireless
Second: LAN
Third: Complete

LAN settings

IP

Subnet Mask

5.6 Super WDS Mode

Super WDS
↶

First: WDS Settings
Second: Complete

Super WDS settings

SSID

Band Width ▼

Channel ▼ wireless analyzer

MAC1 Scan AP

MAC2 Scan AP

MAC3 Scan AP

MAC4 Scan AP

Encryption ▼

Location Information

AP Name

AP Location

Back
Next


Figure 5-15 Super WDS Mode

-28-

The page includes the following fields:

Object	Description
SSID	It is the wireless network name. The default SSID is “PLANET_2.4G” or “PLANET_5G”
Bandwidth	Select the operating channel width, “20MHz” or “40MHz”
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
MAC	Enter the MAC address of slave AP
Encryption	Select the wireless encryption. The default is “None”
AP Name	Enter the name of CPE
AP Location	Enter the location of CPE

AP1 enters the MAC address of AP2. And AP2 enters the MAC address of AP1. Then select the same Channel to establish the connection.

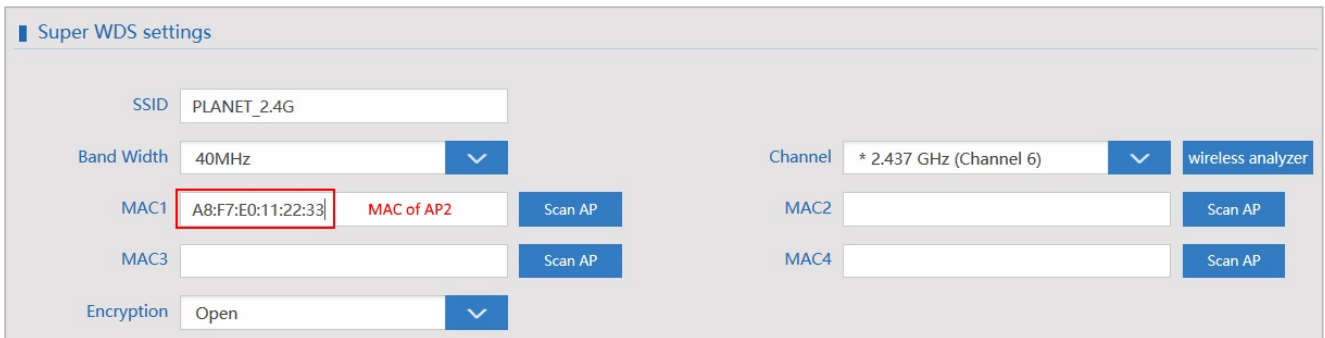

Super WDS settings

SSID: PLANET_2.4G

Band Width: 40MHz

Channel: * 2.437 GHz (Channel 6) wireless analyzer

MAC1: A8:F7:E0:11:22:33 MAC of AP2 Scan AP


MAC2: Scan AP

MAC3: Scan AP

MAC4: Scan AP

Encryption: Open

Figure 5-16 Super WDS Mode – AP1

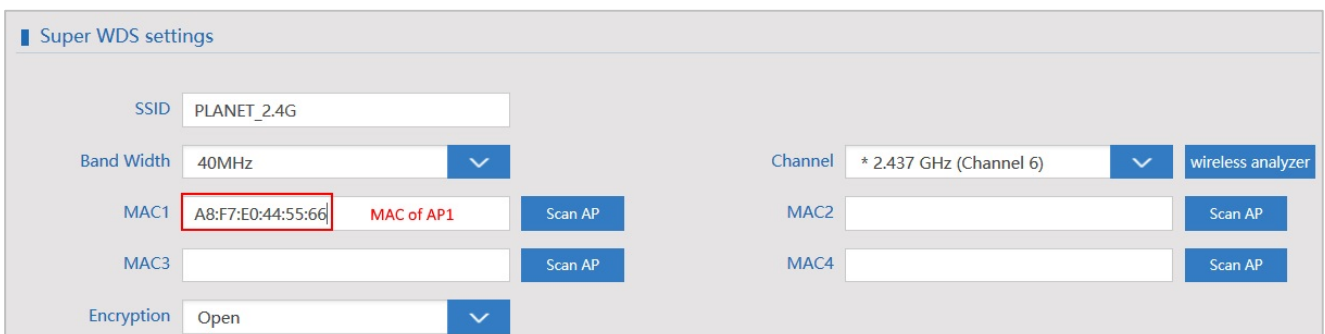

Super WDS settings

SSID: PLANET_2.4G

Band Width: 40MHz

Channel: * 2.437 GHz (Channel 6) wireless analyzer

MAC1: A8:F7:E0:44:55:66 MAC of AP1 Scan AP

MAC2: Scan AP

MAC3: Scan AP

MAC4: Scan AP

Encryption: Open

Figure 5-17 Super WDS Mode – AP2

5.7 Advanced

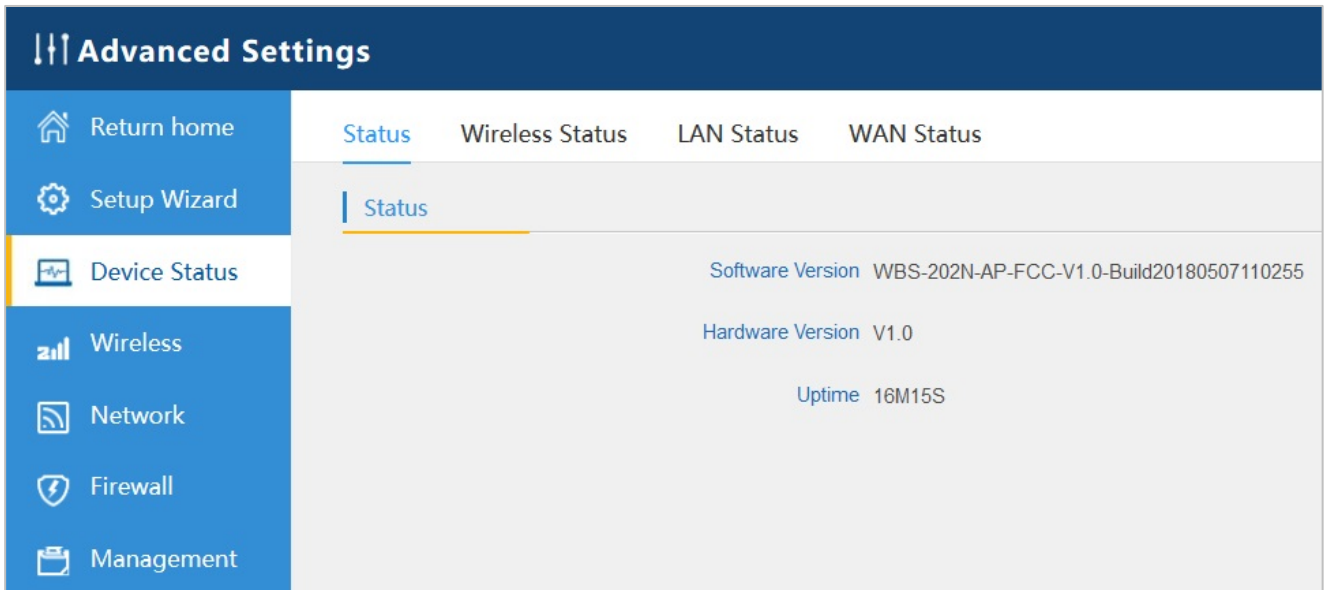


Figure 5-18 Advanced

5.7.1 Device Status

5.7.1.1. Status



Figure 5-19 Status

The page includes the following fields:

Object	Description
Software Version	It shows the firmware version of CPE
Hardware Version	It shows the hardware version of CPE
Uptime	It shows the CPE uptime

5.7.1.2. Wireless Status

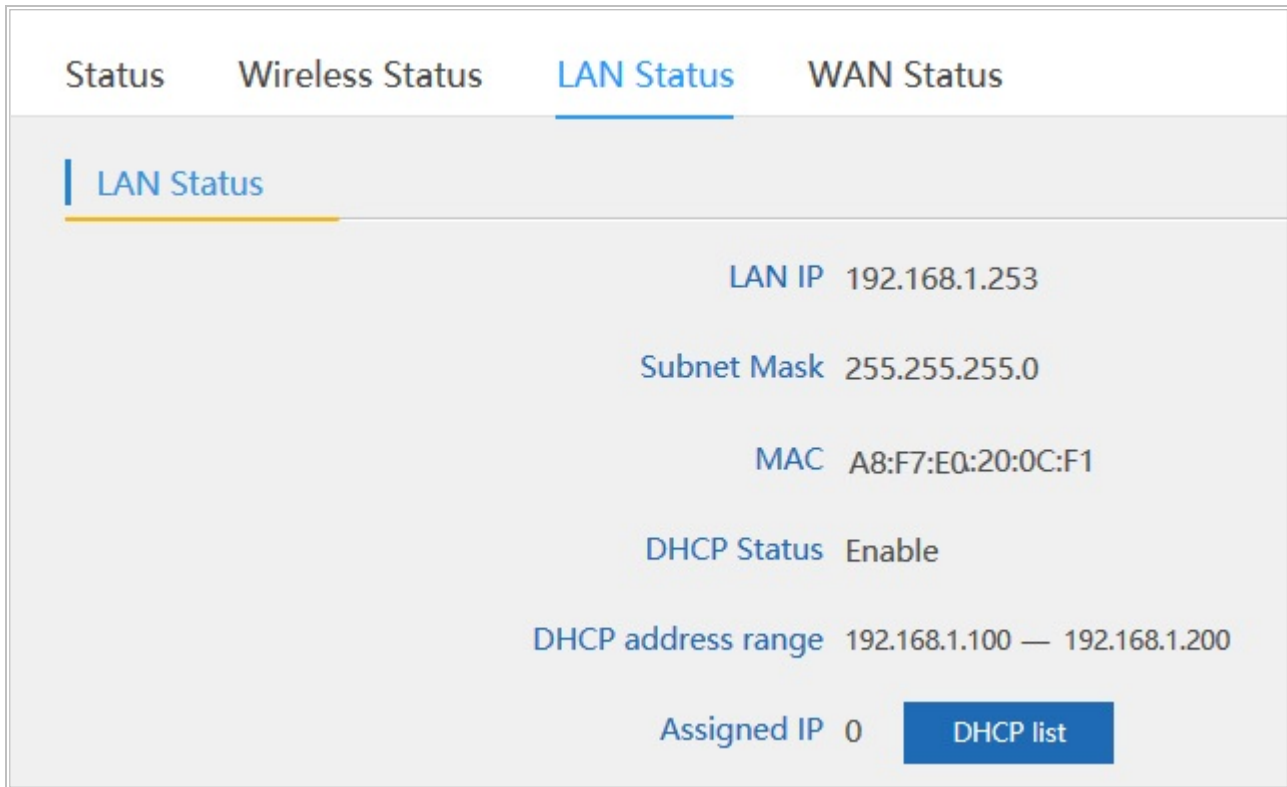


Figure 5-20 Wireless Status

The page includes the following fields:

Object	Description
Wireless Status	It shows the wireless status is Enable or Disable
SSID	It shows the SSID of the CPE. Default is PLANET_2.4G or PLANET_5G
MAC	It shows the MAC address of the CPE
Channel	It shows the channel of the CPE. Default 2.4GHz is channel 6 and 5GHz is channel 36.
Encryption	It shows the wireless encryption
Connected Users	It shows the wireless connected users

5.7.1.3. LAN Status



Status Wireless Status **LAN Status** WAN Status

LAN Status

LAN IP 192.168.1.253

Subnet Mask 255.255.255.0

MAC A8:F7:E0:20:0C:F1

DHCP Status Enable

DHCP address range 192.168.1.100 — 192.168.1.200

Assigned IP 0 [DHCP list](#)

Figure 5-21 LAN Status

The page includes the following fields:

Object	Description
LAN IP	It shows the IP of the CPE. Default is 192.168.1.253
Subnet Mask	It shows the subnet mask of the CPE. Default is 255.255.255.0
MAC	It shows the MAC address of the LAN port
DHCP Status	It shows the DHCP is Enable or Disable if selected to Gateway mode or WISP mode
DHCP Address Range	It shows the DHCP range. Default is 192.168.1.100 to 192.168.1.200
Assigned IP	It shows the client assigned IP address by DHCP server

5.7.1.4. WAN Status

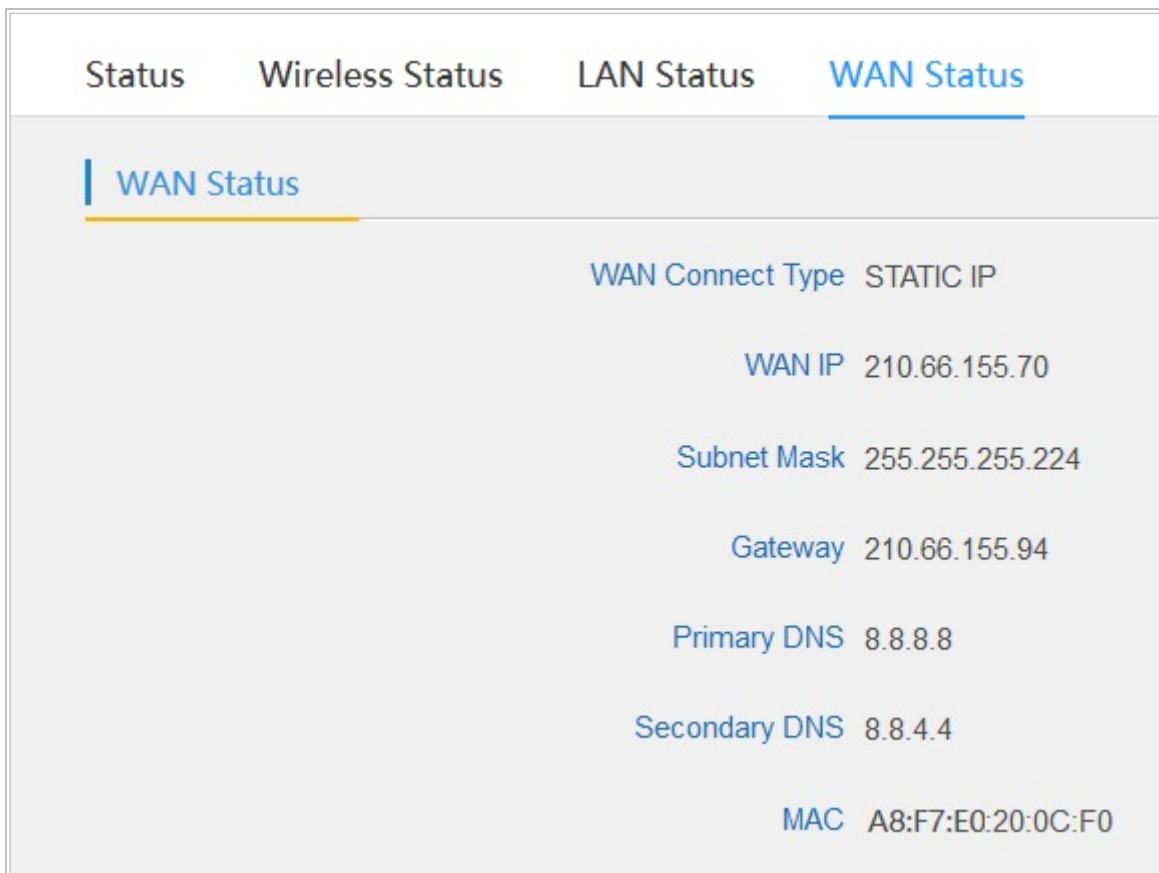


Figure 5-22 WAN Status

The page includes the following fields:

Object	Description
WAN Connection Type	It shows WAN connection type, PPPoE , DHCP or STATIC IP
WAN IP	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
Subnet Mask	Enter WAN Subnet Mask provided by your ISP
Gateway	Enter the WAN Gateway address provided by your ISP
Primary DNS	Enter the necessary DNS address provided by your ISP
Secondary DNS	Enter the secondary DNS address provided by your ISP
MAC	It shows the MAC address of WAN port

5.7.2 Wireless

5.7.2.1. Basic Settings

Basic Settings
Virtual AP
Access Control
Advanced Settings

Wireless Basic Settings

Wireless Status ON wireless analyzer

SSID

Broadcast SSID Disable Enable

WMM Disable Enable

Channel

Band Width ▼

Channel ▼

Authentication

Encryption ▼

Figure 5-23 Basic Settings

The page includes the following fields:

Object	Description
Wireless Status	It shows the wireless status is Enable or Disable
SSID	It shows the SSID of the CPE. Default is PLANET_2.4G or PLANET_5G
Broadcast SSID	Select Enable or Disable the SSID
WMM	It supports Wi-Fi multimedia and default is enabled
Bandwidth	It displays operating channel width which is 20MHz or 40MHz
Channel	It shows the channel of the CPE. Default 2.4GHz is Channel 6 and 5GHz is Channel 36 .
Encryption	It shows the wireless encryption

5.7.2.2. Virtual AP

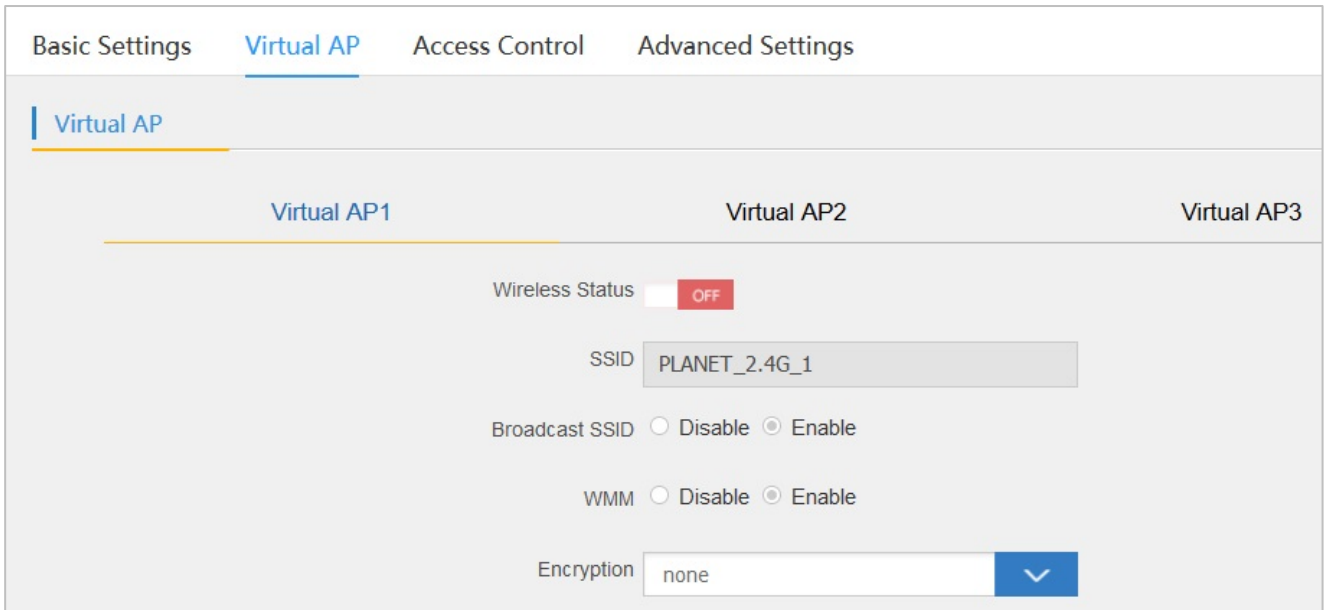


Figure 5-24 Virtual AP

The page includes the following fields:

Object	Description
Wireless Status	It shows the wireless status is ON or OFF
SSID	It shows the SSID of the CPE. Default is PLANET_2.4G_1 or PLANET_5G_1
Broadcast SSID	Select Enable or Disable the SSID
WMM	It supports Wi-Fi multimedia and default is enabled
Encryption	It shows the wireless encryption

5.7.2.3. Access Control

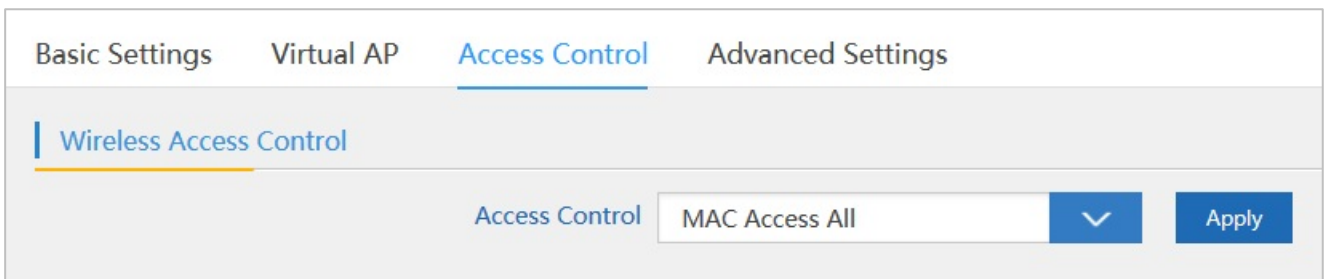


Figure 5-25 Access Control - Access All

Basic Settings Virtual AP **Access Control** Advanced Settings

Wireless Access Control

Access Control

MAC

Access Control List Association STA list

<input type="checkbox"/> ALL	MAC

<input type="checkbox"/> ALL	MAC

Figure 5-26 Access Control – Allow Listed

The page includes the following fields:

Object	Description
Access Control	Select MAC Access All , Allow Listed or Deny Listed
MAC	Enter the MAC address that you need to allow or deny to access
Clear	Delete the MAC address that you select

5.7.2.4. Advanced Settings

Basic Settings
Virtual AP
Access Control
Advanced Settings

Advanced Settings

Regional

▼

MODE

▼

RF Output Power

▼

Packet Threshold

(256-2346)

Beacon interval

(100-1024)ms

MAX User

(Range 0-64 0 not limited)

Coverage Threshold

(-95dBm~-65dBm)

Distance

500 (0 Meter-20000 Meter)

Aggregation
 ON

Short GI
 ON

User isolation
 OFF

Figure 5-27 Advanced Settings


The page includes the following fields:

Object	Description
Regional	It shows FCC or ETSI depending on the firmware
Mode	Select 802.11N/G or 802.11B/G in 2.4G CPE Select 802.11A or 802.11AN in 5G CPE
RF Output Power	The range of transmit power is 100%, 75%, 50%, 25% or 12.5% . In case of shortening the distance and the coverage of the wireless network, input a smaller value to reduce the radio transmission power
Packet Threshold	When the length of a data packet exceeds this value, the router will send an RTS frame to the destination wireless node, and the latter will reply with a CTS frame, and thus they are ready to communicate. The default value is 2346
Beacon interval	Set beacon interval, the value range is from 100 to 1024. The default value is 100
Maximum Users	The maximum users are 64
Coverage Threshold	The coverage threshold is to limit the weak signal of clients occupying session. The default is -95dBm
Distance	Select a specified distance of the two nodes.
Aggregation	A part of the 802.11n standard that allows sending multiple frames per single access to the medium by combining frames together into one larger frame. It creates the larger frame by combining smaller frames

	with the same physical source, destination end points, and traffic class (QoS) into one large frame with a common MAC header
Short GI	Guard intervals are used to ensure that distinct transmissions do not interfere with one another.
User Isolation	Enable it to isolate each connected wireless client so that they cannot access mutually.


5.7.3 Network

5.7.3.1. LAN Settings

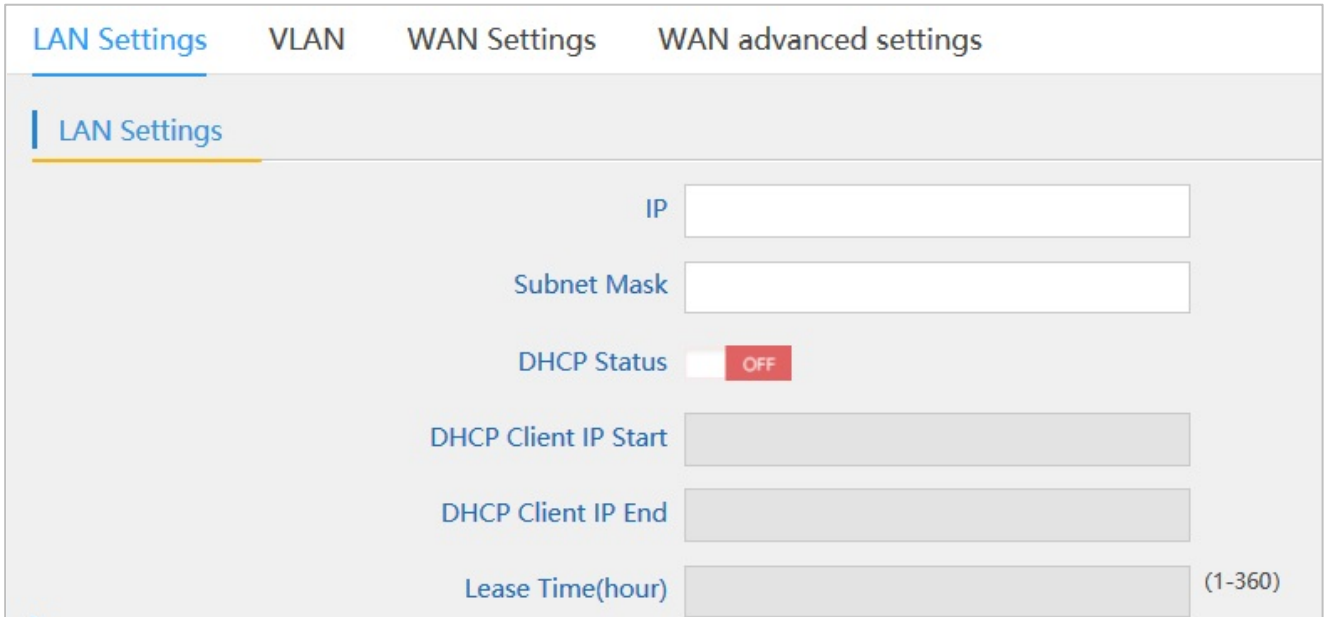

The screenshot shows the LAN Settings configuration page. At the top, there are tabs for 'LAN Settings', 'VLAN', 'WAN Settings', and 'WAN advanced settings'. The 'LAN Settings' tab is selected. Below the tabs, there are several input fields: 'IP' (empty), 'Subnet Mask' (empty), 'DHCP Status' (a toggle switch set to 'OFF'), 'DHCP Client IP Start' (empty), 'DHCP Client IP End' (empty), and 'Lease Time(hour)' (empty) with a range '(1-360)' indicated to the right.

Figure 5-28 LAN Settings

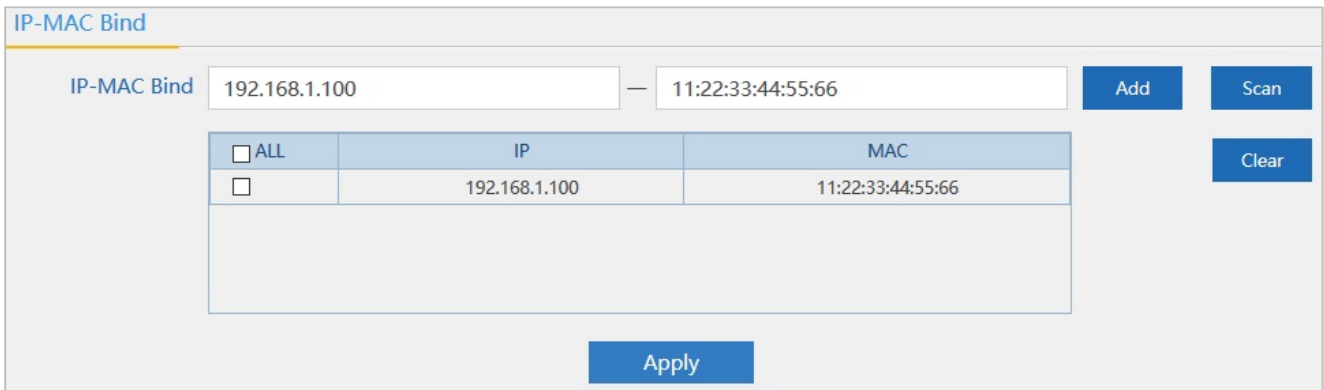

The screenshot shows the IP-MAC Bind configuration page. At the top, there is a tab labeled 'IP-MAC Bind'. Below the tab, there are two input fields for IP and MAC addresses, with a hyphen between them. The IP field contains '192.168.1.100' and the MAC field contains '11:22:33:44:55:66'. To the right of these fields are 'Add' and 'Scan' buttons. Below the input fields is a table with columns for 'ALL', 'IP', and 'MAC'. The 'ALL' column has a checkbox. The table contains one row with an unchecked checkbox, the IP '192.168.1.100', and the MAC '11:22:33:44:55:66'. To the right of the table is a 'Clear' button. At the bottom center, there is an 'Apply' button.

Figure 5-29 IP-MAC Bind

The page includes the following fields:

Object	Description
IP	Enter an IP address of LAN
Subnet Mask	Enter a subnet mask of LAN
DHCP Status	Select ON or OFF to enable or disable DHCP server
DHCP Client IP Start	Enter the starting IP address for the DHCP server's IP assignment.
DHCP Client IP End	Enter the ending IP address for the DHCP server's IP assignment.
Lease Time (hour)	Select the time for using one assigned IP from the DHCP server. After the lease time, the CPE automatically assigns new IP addresses to all connected clients.
Add	Press to add the IP and MAC address
Scan	Scan the client list
Clear	Delete the IP and MAC address that you select

5.7.3.2. VLAN

LAN Settings
VLAN
WAN Settings
WAN advanced settings

VLAN

VLAN-ID(3-4094)	AP	VAP1	VAP2	VAP3
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 5-30 VLAN

The page includes the following fields:

Object	Description
VLAN ID	Enter the VLAN ID from 3 to 4094
AP	Select AP or VAP included in the VLAN

5.7.3.3. SNMP

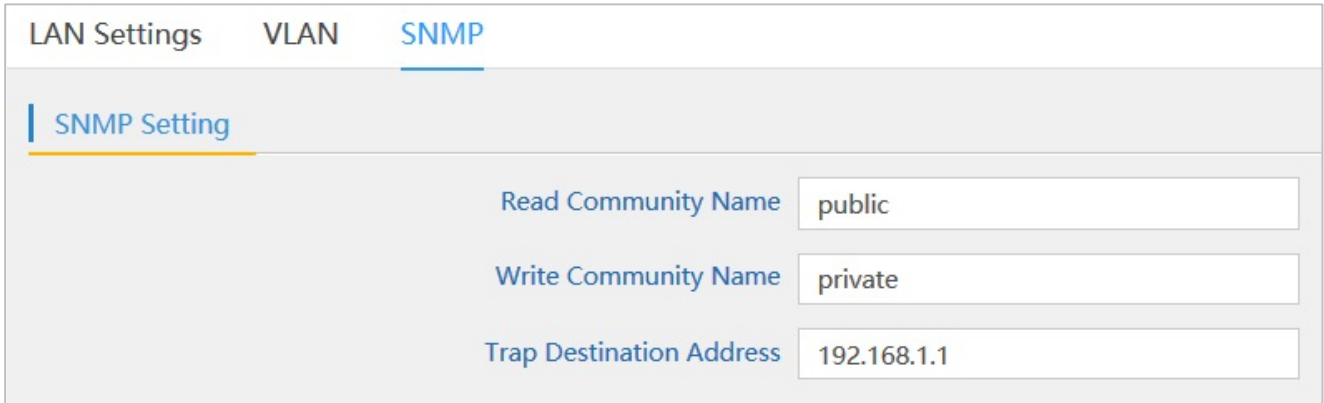


Figure 5-31 SNMP

The page includes the following fields:

Object	Description
Read Community	Enter the read community, default is public
Write Community	Enter the write community, default is private
Trap Destination Address	Enter the SNMP trap IP address, default is 192.168.1.1

5.7.3.4. WAN Settings

Static IP

If your ISP offers you static IP Internet connection type, select “**Static IP**” and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.

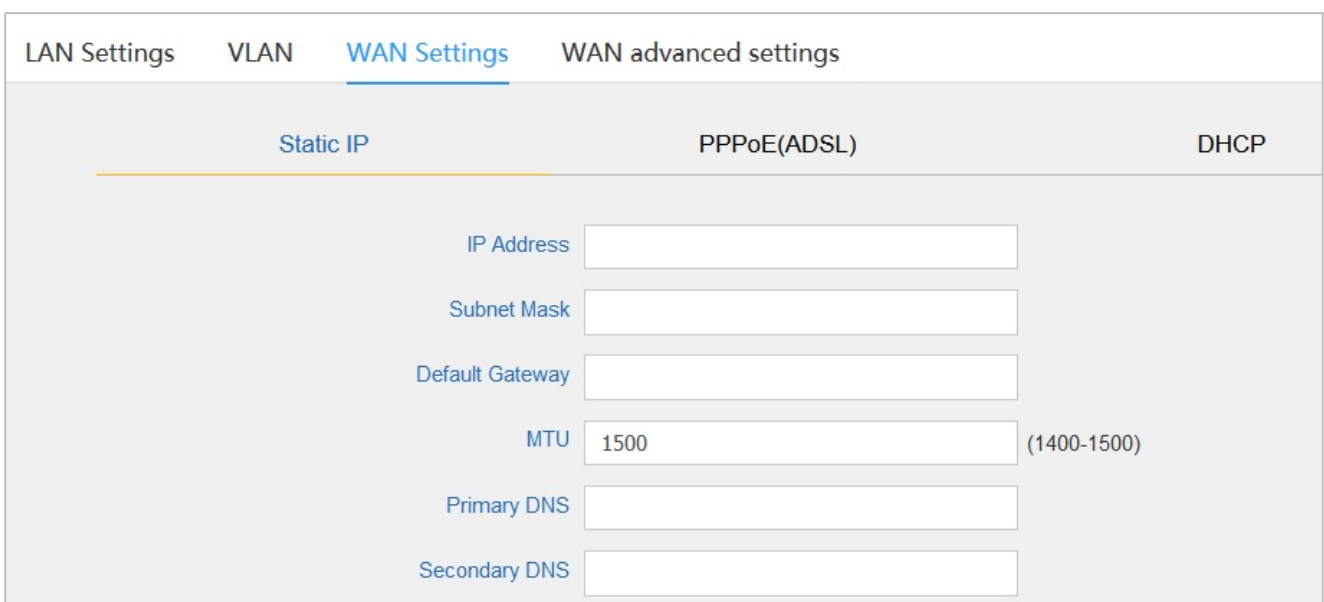



Figure 5-32 Static IP

The page includes the following fields:

Object	Description
IP Address	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
Subnet Mask	Enter WAN Subnet Mask provided by your ISP
Default Gateway	Enter the WAN Gateway address provided by your ISP
MTU	Maximum Transmission Unit. Default is 1500
Primary DNS	Enter the necessary DNS address provided by your ISP
Secondary DNS	Enter the secondary DNS address provided by your ISP

PPPoE (ADSL)

Select **PPPOE** if your ISP is using a PPPoE connection and provide you with PPPoE user name and password info.

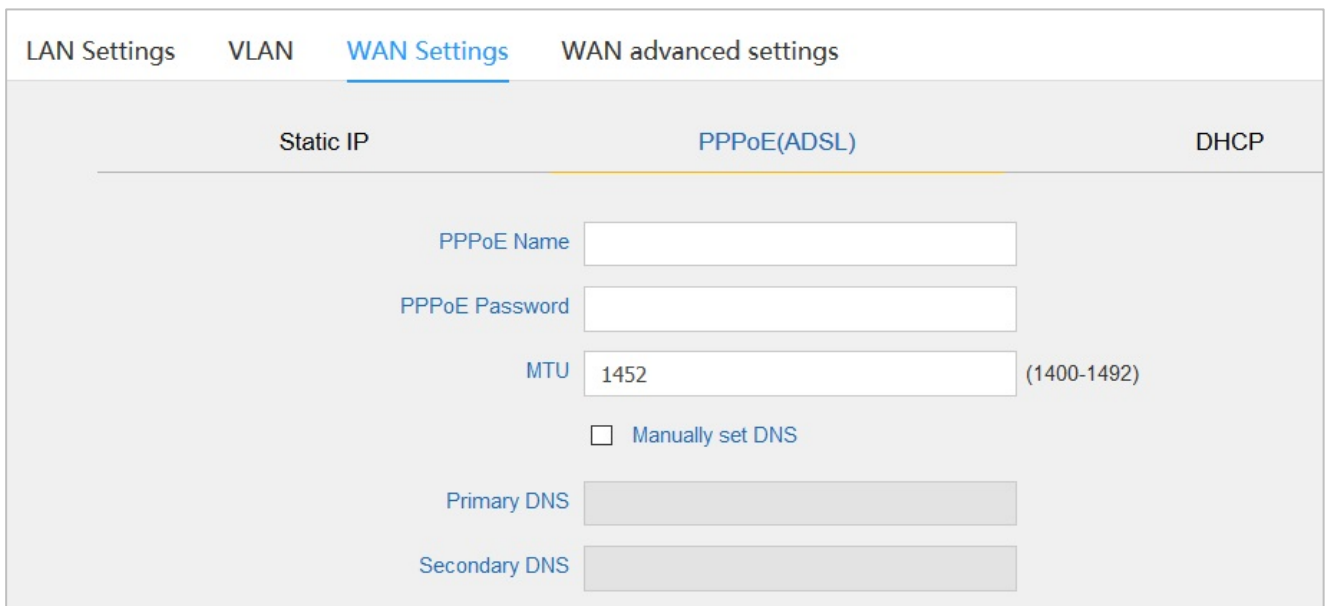

The screenshot shows the 'WAN Settings' configuration page with the 'PPPoE(ADSL)' tab selected. The configuration options are as follows:

- Static IP**: Not selected.
- PPPoE(ADSL)**: Selected.
- DHCP**: Not selected.
- PPPoE Name**: [Empty text box]
- PPPoE Password**: [Empty text box]
- MTU**: 1452 (Range: 1400-1492)
- Manually set DNS**:
- Primary DNS**: [Empty text box]
- Secondary DNS**: [Empty text box]


Figure 5-33 PPPoE (ADSL)

The page includes the following fields:

Object	Description
PPPoE Name	Enter the User Name provided by your ISP
PPPoE Password	Enter the password provided by your ISP
MTU	Maximum Transmission Unit. Default is 1452
Primary DNS	Enter the necessary DNS address provided by your ISP
Secondary DNS	Enter the secondary DNS address provided by your ISP

DHCP

Choose “**DHCP**” and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

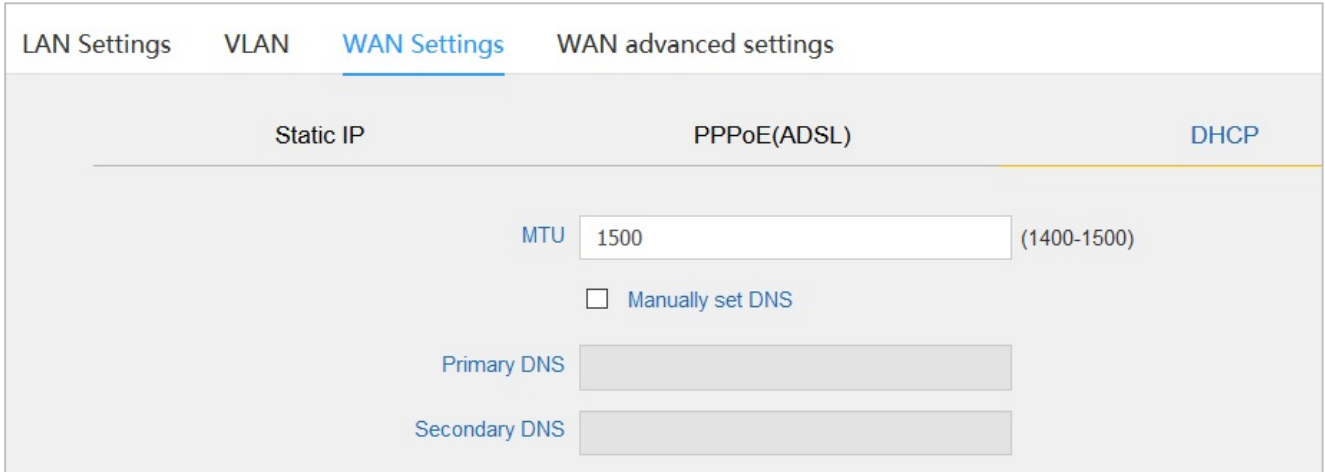

The screenshot shows the WAN Settings configuration page. At the top, there are tabs for 'LAN Settings', 'VLAN', 'WAN Settings' (which is selected), and 'WAN advanced settings'. Below the tabs, there are three radio button options: 'Static IP', 'PPPoE(ADSL)', and 'DHCP'. The 'DHCP' option is selected. Under the 'DHCP' section, there is an 'MTU' field with a value of '1500' and a range '(1400-1500)'. Below the MTU field is a checkbox labeled 'Manually set DNS' which is unchecked. There are also two text input fields for 'Primary DNS' and 'Secondary DNS'.

Figure 5-34 DHCP

The page includes the following fields:

Object	Description
MTU	Maximum Transmission Unit. Default is 1500
Primary DNS	Enter the necessary DNS address provided by your ISP
Secondary DNS	Enter the secondary DNS address provided by your ISP

5.7.3.5. WAN advanced settings

LAN Settings
VLAN
WAN Settings
WAN advanced settings

WAN advanced settings

MAC clone

Enable Web Server Access on WAN

Web Port

8080

Enable uPnP

Enable IGMP Proxy

Enable Ping Access on WAN

Enable IPsec pass through on VPN connection

Enable PPTP pass through on VPN connection

Enable L2TP pass through on VPN connection

Figure 5-35 WAN advanced settings

The page includes the following fields:

Object	Description
MAC clone	Enable and scan to clone the MAC address
Enable Web Server Access on WAN	Enable to access from WAN
Web Port	Enter the web port to access
Enable uPnP	Check to enable the UPnP function. The UPnP feature allows the devices, such as Internet computers, to access the local host resources or devices as needed. UPnP devices can be automatically discovered by the UPnP service application on the LAN.
Enable IGMP Proxy	Check to enable the IGMP Proxy function.
Enable Ping Access on WAN	Enable or Disable this function
Enable IPsec passthrough on VPN connection	Enable or disable IPsec to pass through IPsec communication data.
Enable PPTP passthrough on VPN connection	Enable or disable PPTP to pass through PPTP communication data.
Enable L2TP passthrough on VPN connection	Enable or disable L2TP to pass through L2TP communication data.

5.7.4 Firewall

5.7.4.1. IP/Port Filtering

IP/Port Filtering
MAC Filtering
URL Filtering
Port Forwarding
DMZ Host

IP Filtering Settings

IP Filtering Black List ▼ Apply

IP 192.168.1.150 — 192.168.1.150 Scan

Port 80 — 80 (1-65535)

protocol TCP ▼

Add
Clear

<input type="checkbox"/> ALL	IP Address	port	protocol
<input type="checkbox"/>	192.168.1.150	80	tcp

Figure 5-36 IP/Port Filtering

The page includes the following fields:

Object	Description
IP Filtering	Select Black List or White List
IP	Enter the IP that you need to put in black or white list
Port	Enter the web port to access
Protocol	Select TCP , UDP or TCP+UDP
Add	Press to add in the black or white list
Clear	Press to delete the black or white list

5.7.4.2. MAC Filtering

IP/Port Filtering **MAC Filtering** URL Filtering Port Forwarding DMZ Host

MAC Filtering Settings

MAC Filtering: Black List [v] [Apply]

MAC: 00:30:4F:29:48:90 [Scan]

[Add] [Clear]

<input type="checkbox"/> ALL	MAC
<input type="checkbox"/>	00:30:4F:29:48:90

Figure 5-37 MAC Filtering

The page includes the following fields:

Object	Description
MAC Filtering	Select Black List or White List
MAC	Enter the MAC address that you need to put in black or white list
Add	Press to add in the black or white list
Clear	Press to delete the black or white list

5.7.4.3. URL Filtering

IP/Port Filtering MAC Filtering **URL Filtering** Port Forwarding DMZ Host

URL Filtering Settings

URL Filtering: Black List [v] [Apply]

URL: www.facebook.com

[Add] [Clear]


<input type="checkbox"/> ALL	URL
<input type="checkbox"/>	www.facebook.com

Figure 5-38 URL Filtering

The page includes the following fields:

Object	Description
URL Filtering	Select Disable or Black List
URL	Enter the URL that you need to put in black list
Add	Press to add in the black list
Clear	Press to delete the black list

5.7.4.4. Port Forwarding

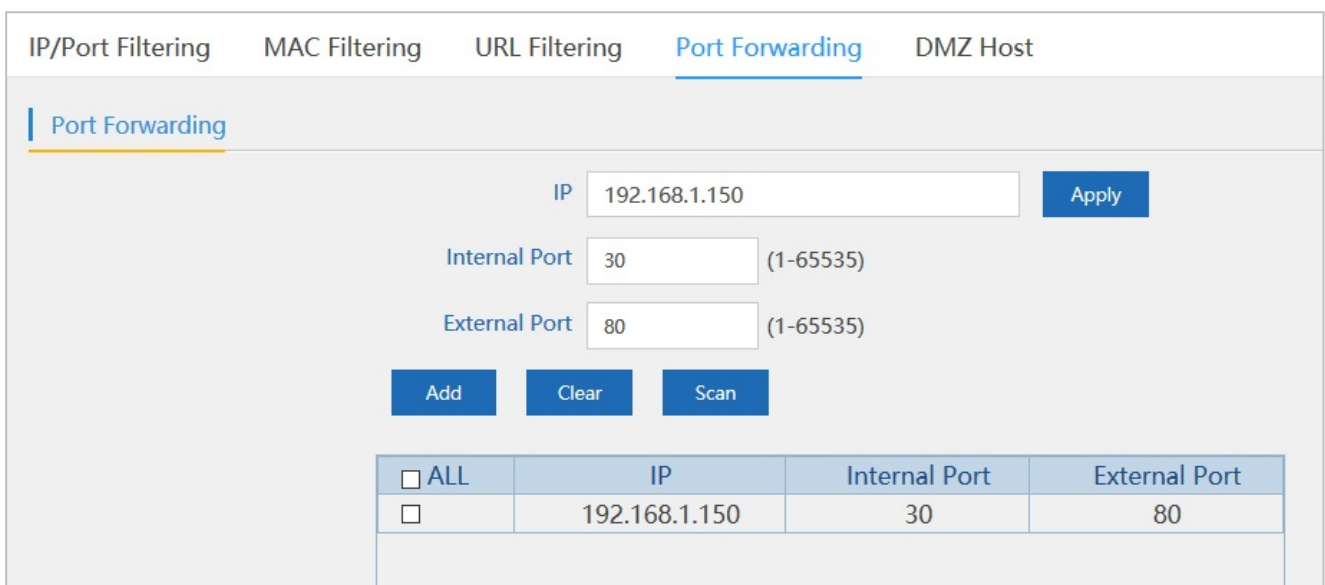

IP/Port Filtering MAC Filtering URL Filtering **Port Forwarding** DMZ Host

Port Forwarding

IP: 192.168.1.150 Apply

Internal Port: 30 (1-65535)

External Port: 80 (1-65535)

Add Clear Scan

<input type="checkbox"/> ALL	IP	Internal Port	External Port
<input type="checkbox"/>	192.168.1.150	30	80

Figure 5-39 Port Forwarding

The page includes the following fields:

Object	Description
IP	Enter the IP address that you need for port forwarding
Internal Port	Enter the internal port
External Port	Enter the external port
Add	Press to add the IP address
Clear	Press to delete the IP address

5.7.4.5. DMZ Host

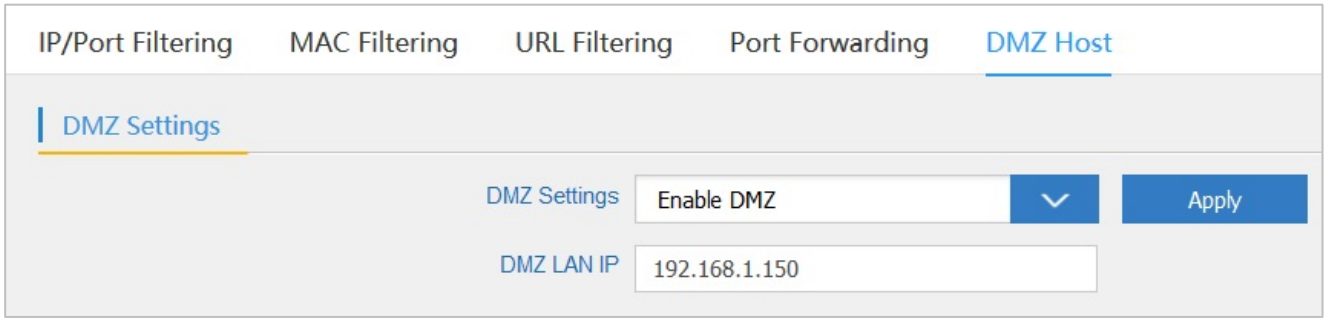


Figure 5-40 DMZ

The page includes the following fields:

Object	Description
DMZ Settings	Select Enable DMZ or Disable
DMZ LAN IP	Enter the DMZ IP

5.7.5 Management

5.7.5.1. System Time

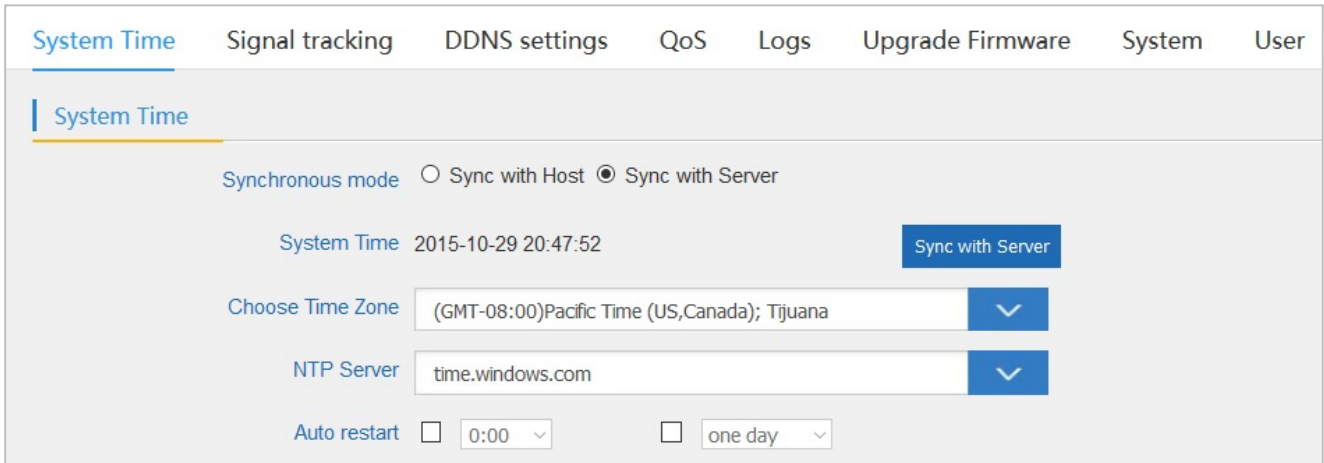


Figure 5-41 System Time

The page includes the following fields:

Object	Description
Synchronous Mode	Select Sync with Host or Sync with Server
System Time	It shows the system time
Choose Time Zone	Select the time zone of your country/region. If your country/region is not listed, please select another country/region whose time zone is the same as yours.
NTP Server	Select the NTP server from the list or enter the host name or IP address of the time server if you wish.
Auto Restart	Select the time that you want to reboot

5.7.5.2. Signal Tracking

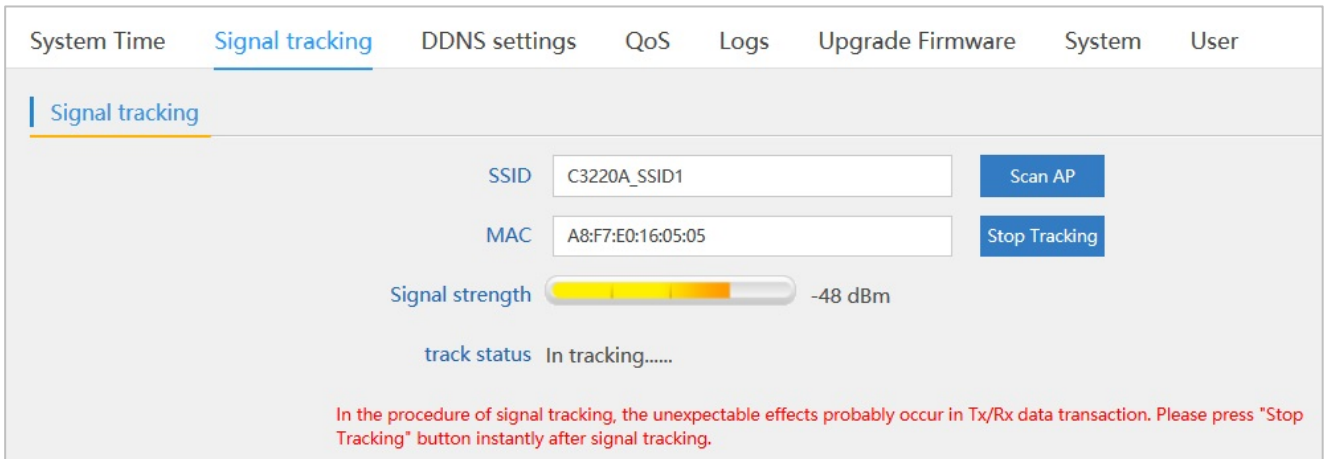


Figure 5-42 Signal tracking

The page includes the following fields:

Object	Description
SSID	Select the SSID you need to check by pressing the Scan AP button
MAC	It shows the MAC address of the tracked AP
Signal Strength	It shows the signal strength of the AP

5.7.5.3. DDNS settings

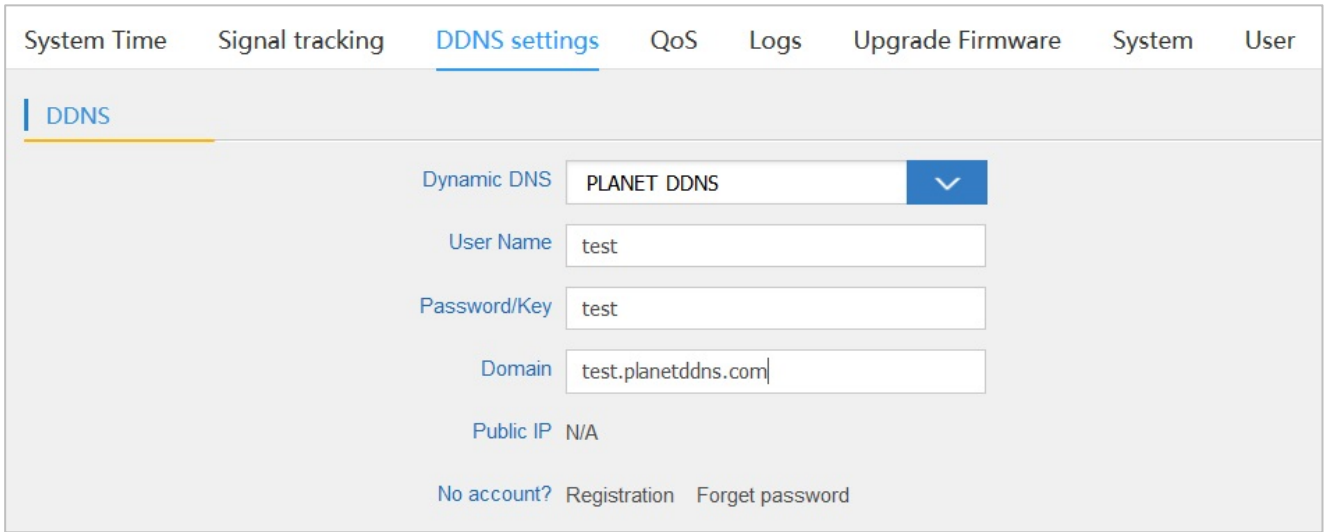


Figure 5-43 DDNS settings

The page includes the following fields:

Object	Description
Dynamic DNS	Select PLANET DDNS or PLANET Easy DDNS
User Name	Enter the DDNS user name of the DDNS account.
Password/Key	Enter the DDNS password of the DDNS account.
Domain	Enter the domain name provided by PLANET DDNS
Public IP	It shows the public IP if you connect to the DDNS successfully

5.7.5.4. QoS

System Time
Signal tracking
DDNS settings
QoS
Logs
Upgrade Firmware
System
User

QoS

ON
Apply

Upload Range:(100-1024000)Kbps

Download Range:(100-1024000)Kbps

QoS Rule settings

IP range —

Mode Share total bandwidth with all IP address. Assign bandwidth for each IP address.

Bandwidth Upload Kbps Download Kbps

Comment
Add
Clear

<input type="checkbox"/> ALL	Start IP	End IP	Mode	Upload(Kbps)	Download(Kbps)	Comment
<input type="checkbox"/>	192.168.1.100	192.168.1.150	Share	102400	102400	

Figure 5-44 QoS

The page includes the following fields:

Object	Description
Upload	Enter the Internet upload speed
Download	Enter the Internet download speed
IP Range	Enter the IP range of bandwidth control
Mode	Select Share total bandwidth with all IP address or Assign bandwidth for each IP address
Bandwidth	Enter the limitation of bandwidth
Comment	Enter the comment of the QoS configuration

5.7.5.5. Logs

System Time
Signal tracking
DDNS settings
QoS
Logs
Upgrade Firmware
System
User

| System Logs

Remote Log Server

IP Apply

```

Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.450000] CABMinfree = 48
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.450000] UAPSDminfree = 0
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.450000] ATH_TXBUF=540
Oct 29 19:37:08 WBS-202N kern.info kernel: [ 22.460000] Enterprise mode: 0x03fc0000
Oct 29 19:37:08 WBS-202N kern.info kernel: [ 22.470000] Restoring Cal data from DRAM
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.470000]
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.470000] ART Version : -48.0.0
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.480000] SW Image Version : -48.0.0.0.0
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.480000] Board Revision :
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.480000] ar9300_attach: nf_2_nom -110 nf_2_max -60
nf_2_min -125
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.490000] SPECTRAL : get_capability not registered
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.500000] HAL_CAP_PHYDIAG : Capable
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.500000] SPECTRAL : Need to fix the capability
check for RADAR (spectral_attach : 231)
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.510000] SPECTRAL : get_capability not registered
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.520000] HAL_CAP_RADAR : Capable
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.520000] SPECTRAL : Need to fix the capability
check for SPECTRAL.
          
```

Refresh
Clear

Figure 5-45 Logs

The page includes the following fields:

Object	Description
Remote Log Server	Enable remote log server
IP	Enter the IP of remote log server
Refresh	Press to refresh the system log
Clear	Press to clear the system log

5.7.5.6. Upgrade Firmware

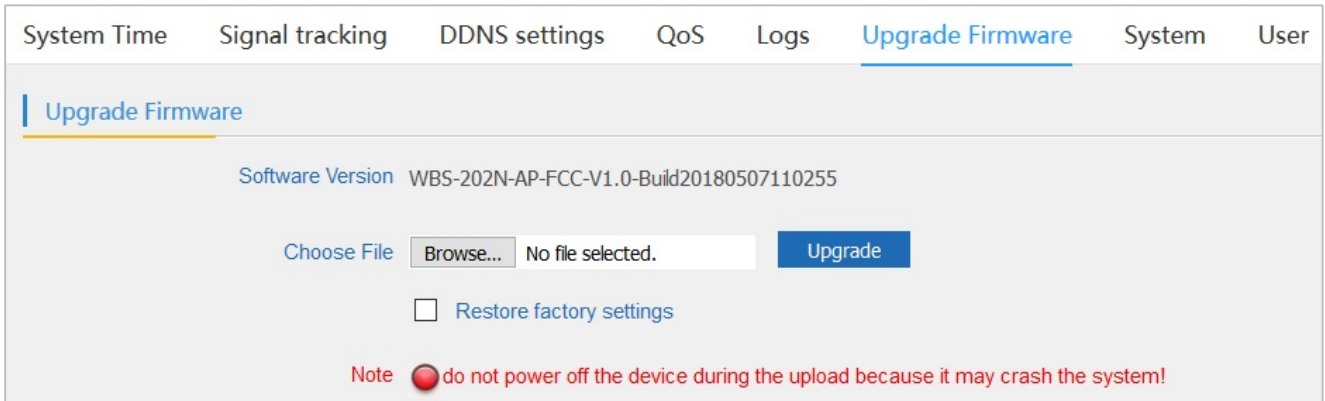


Figure 5-46 Upgrade Firmware

The page includes the following fields:

Object	Description
Browse	Press to select the firmware file
Upgrade	Press to upgrade the firmware
Restore Factory Settings	Select to reset the device to default when upgrading firmware

5.7.5.7. System

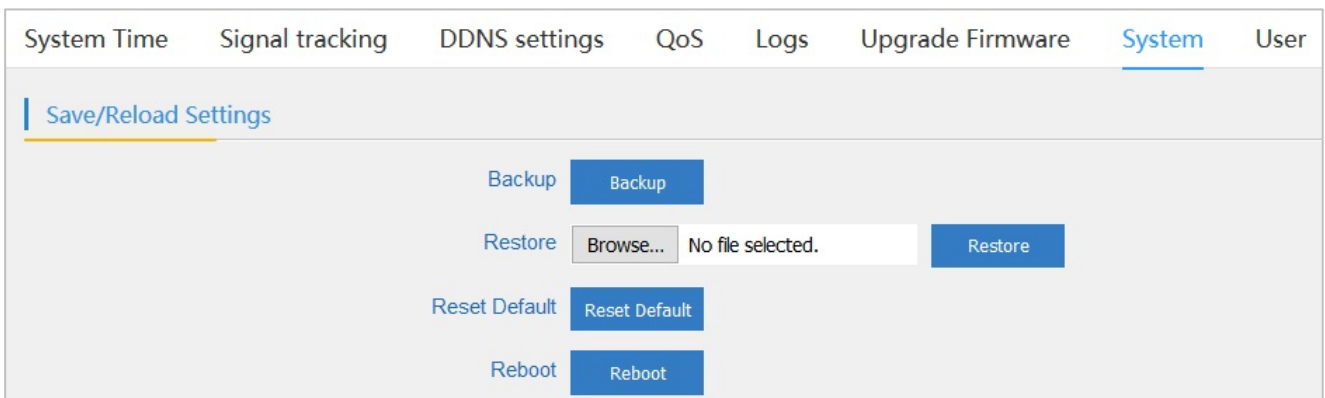


Figure 5-47 System

The page includes the following fields:

Object	Description
Backup	Press to back up the configuration
Browse	Press to select the configuration file
Restore	Press to restore the configuration
Reset Default	Press to reset the device to default
Reboot	Press to reboot the device

5.7.5.8. User

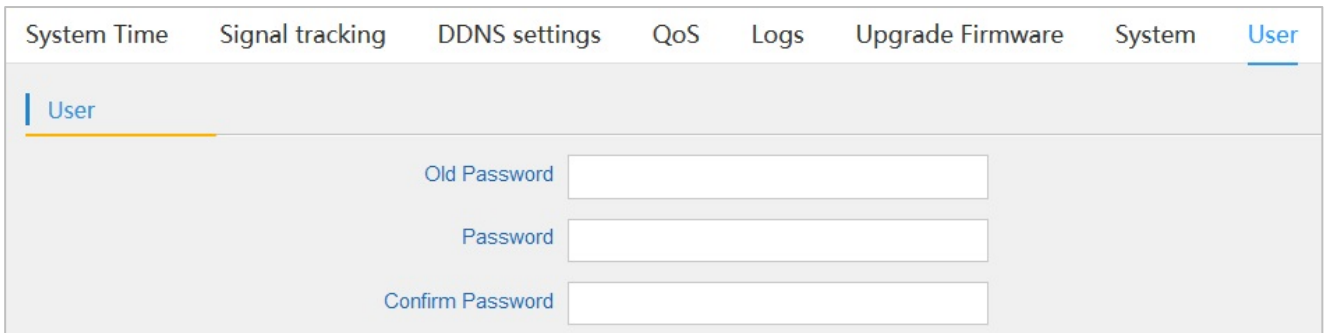


Figure 5-48 User

The page includes the following fields:

Object	Description
Old Password	Enter the old password
Password	Enter the new password
Confirm Password	Enter the new password again

Chapter 6. Quick Connection to a Wireless Network

In the following sections, the **default SSID** of the WBS-202N/WBS-502N is configured to “**default**”.

6.1 Windows XP (Wireless Zero Configuration)

Step 1: Right-click on the **wireless network icon** displayed in the system tray



Figure 6-1 System Tray – Wireless Network Icon

Step 2: Select [View Available Wireless Networks]

Step 3: Highlight and select the wireless network (SSID) to connect

- (1) Select SSID [default]
- (2) Click the [Connect] button

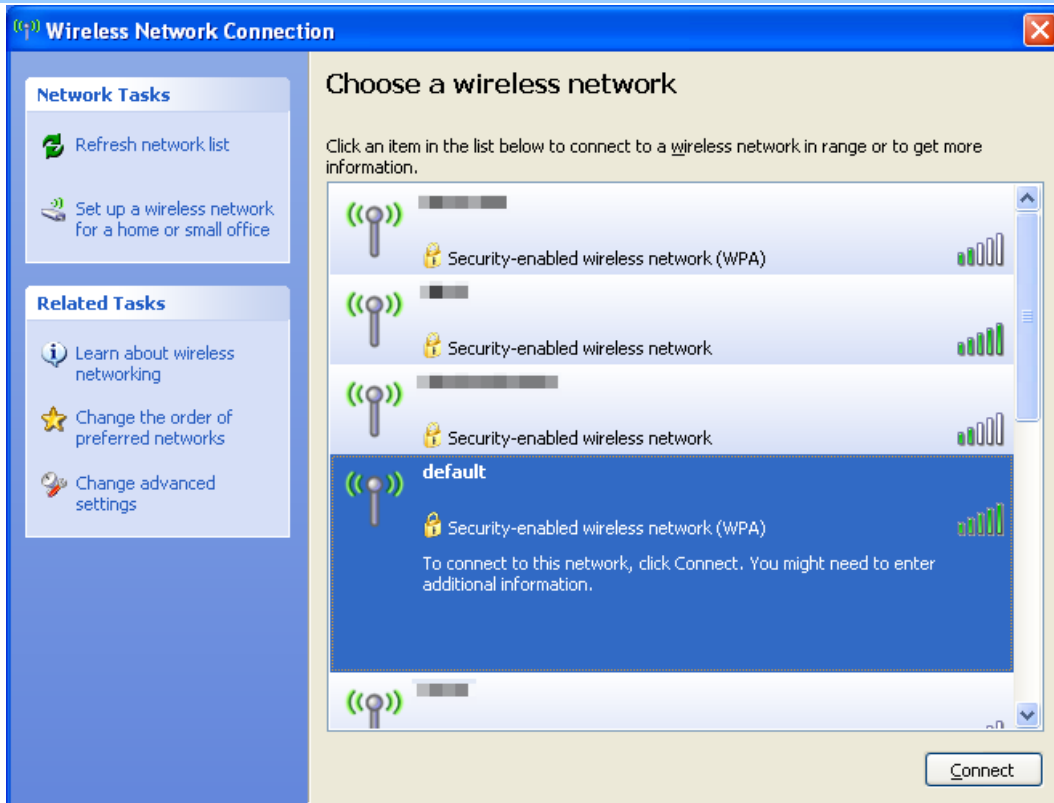


Figure 6-2 Choosing a Wireless Network

Step 4: Enter the **encryption key** of the wireless AP

- (1) The Wireless Network Connection box will appear
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Click the [Connect] button

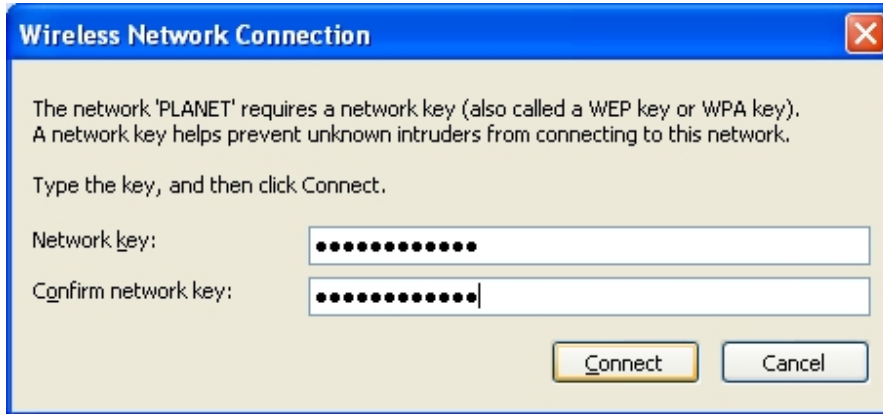


Figure 6-3 Entering the Network Key

Step 5: Check if “**Connected**” is displayed

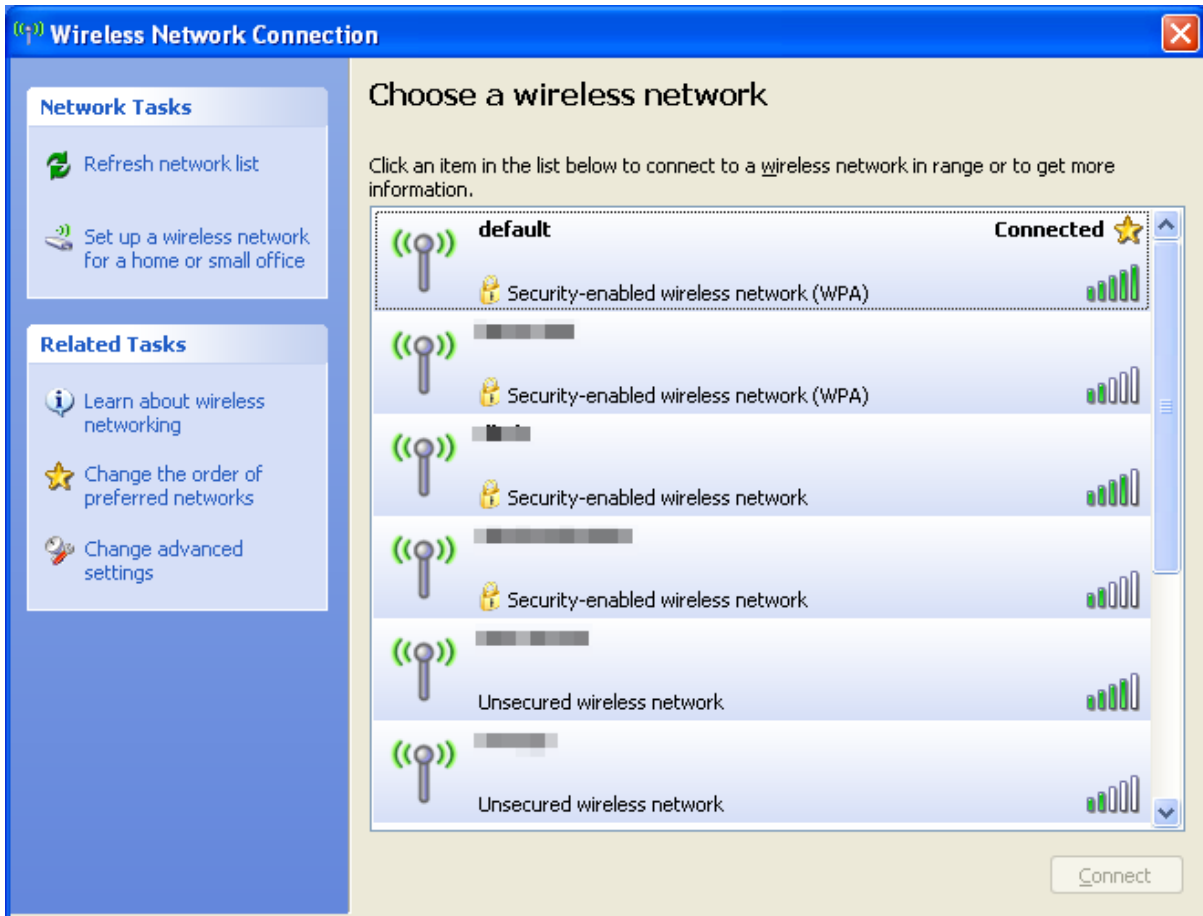


Figure 6-4 Choosing a Wireless Network -- Connected



Some laptops are equipped with a “Wireless ON/OFF” switch for the internal wireless LAN. Make sure the hardware wireless switch is switched to “ON” position.

6.2 Windows 7 (WLAN AutoConfig)

WLAN AutoConfig service is built-in in Windows 7 that can be used to detect and connect to wireless network. This built-in wireless network connection tool is similar to wireless zero configuration tool in Windows XP.

Step 1: Right-click on the **network icon** displayed in the system tray



Figure 6-5 Network Icon

Step 2: Highlight and select the wireless network (SSID) to connect

- (1) Select SSID [**default**]
- (2) Click the [**Connect**] button

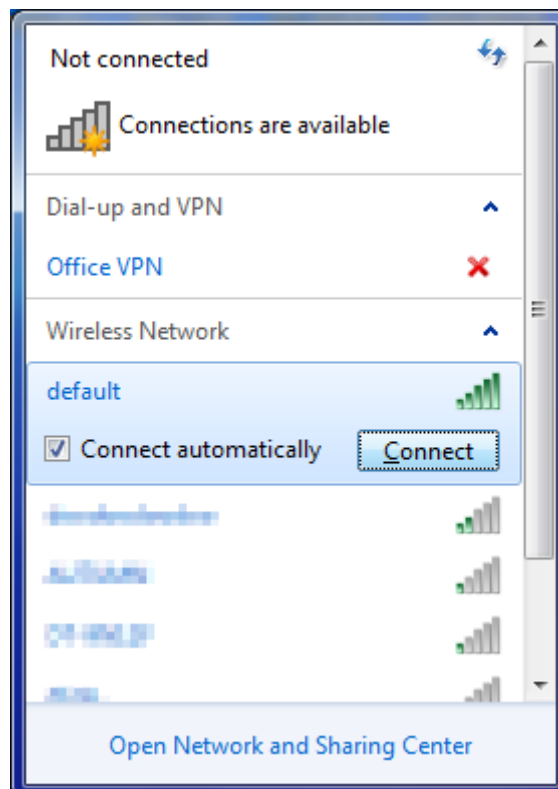


Figure 6-6 WLAN AutoConfig



If you will be connecting to this Wireless AP in the future, check **[Connect automatically]**.

Step 4: Enter the **encryption key** of the wireless AP

- (1) The Connect to a Network box will appear
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Click the [OK] button



Figure 6-7 Typing the Network Key

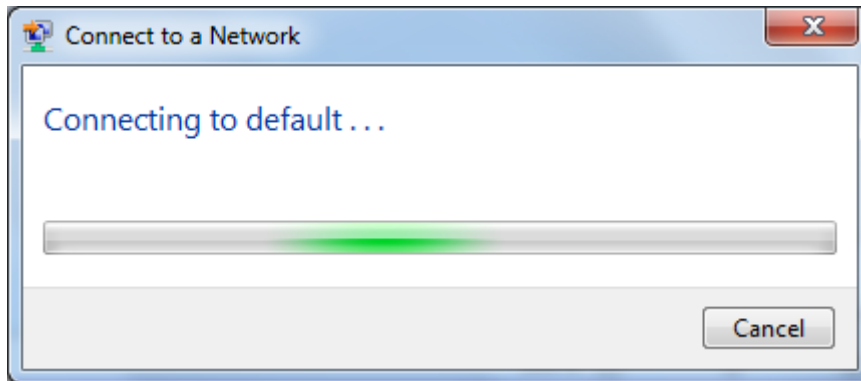


Figure 6-8 Connecting to a Network

Step 5: Check if “**Connected**” is displayed

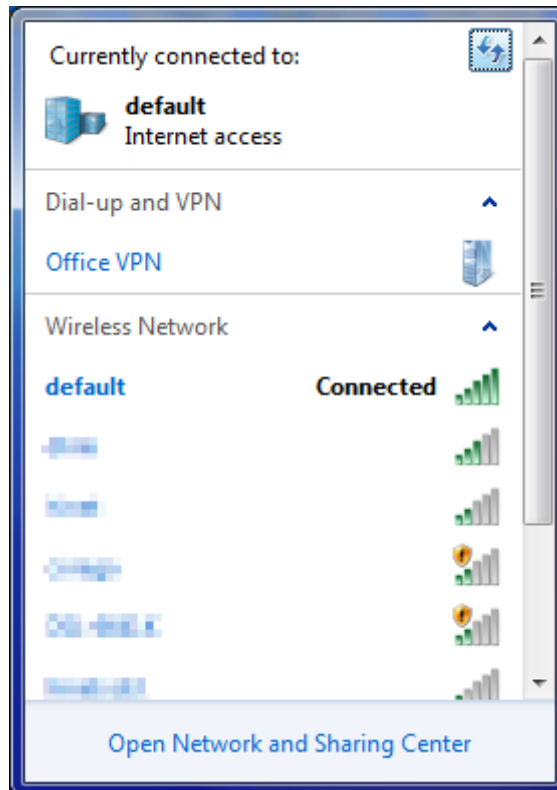


Figure 6-9 Connected to a Network

6.3 Mac OS X 10.x

In the following sections, the default SSID of the WBS-202N/WBS-502N is configured to “default”.

Step 1: Right-click on the **network icon** displayed in the system tray

The AirPort Network Connection menu will appear



Figure 6-10 Mac OS – Network Icon

Step 2: Highlight and select the wireless network (SSID) to connect

- (1) Select and SSID [**default**]
- (2) Double-click on the selected SSID



Figure 6-11 Highlighting and Selecting the Wireless Network

Step 4: Enter the **encryption key** of the wireless AP

- (1) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (2) Click the [OK] button



Figure 6-12 Enter the Password



If you will be connecting to this Wireless AP in the future, check **[Remember this network]**.

Step 5: Check if the AirPort is connected to the selected wireless network.

If "Yes", then there will be a "check" symbol in front of the SSID.

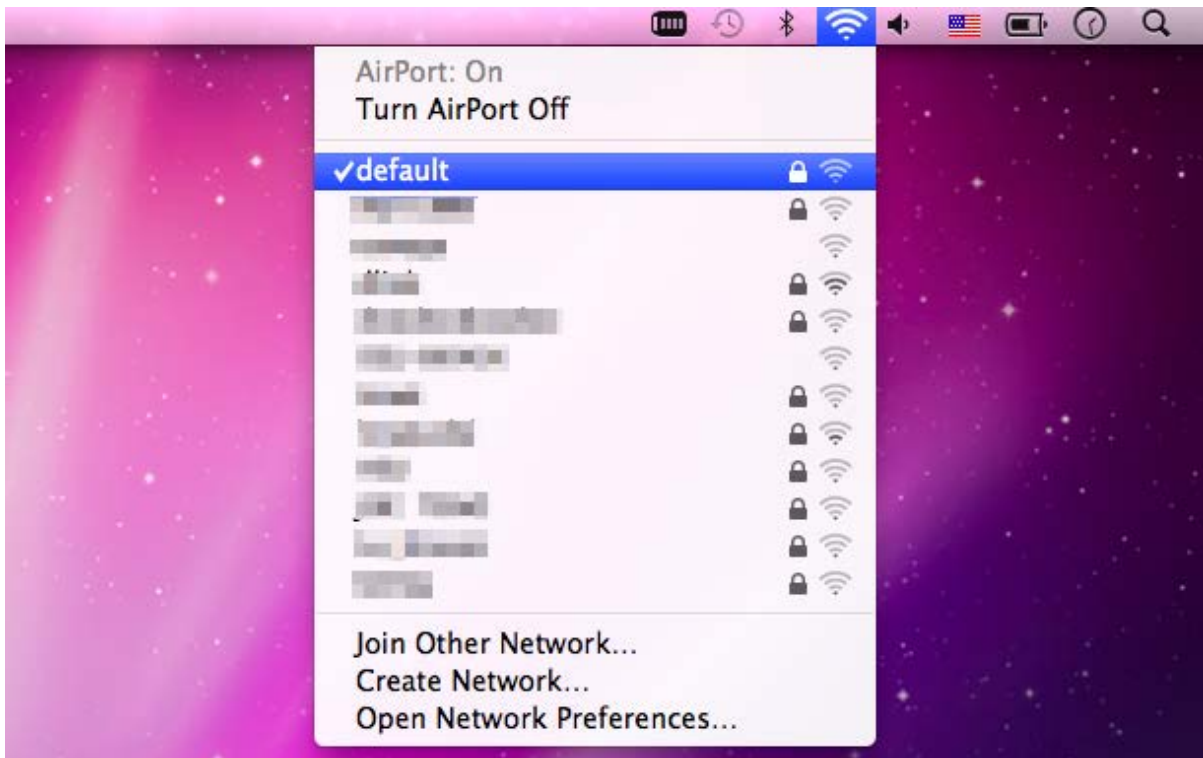


Figure 6-13 Connected to the Network

There is another way to configure the MAC OS X wireless settings:

Step 1: Click and open the [System Preferences] by going to **Apple > System Preference** or **Applications**

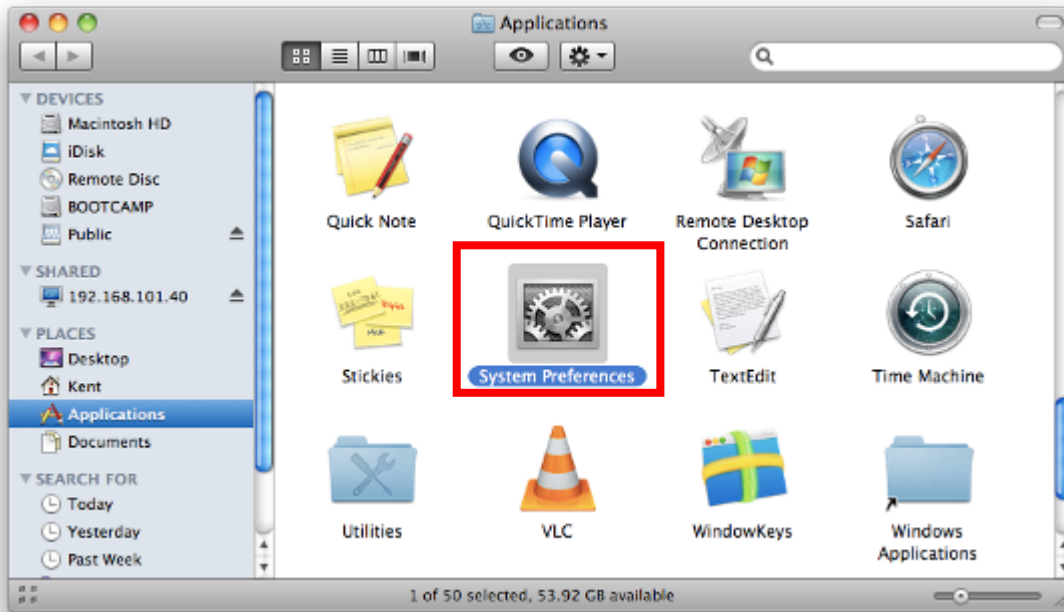


Figure 6-14 System Preferences

Step 2: Open **Network Preference** by clicking on the [Network] icon

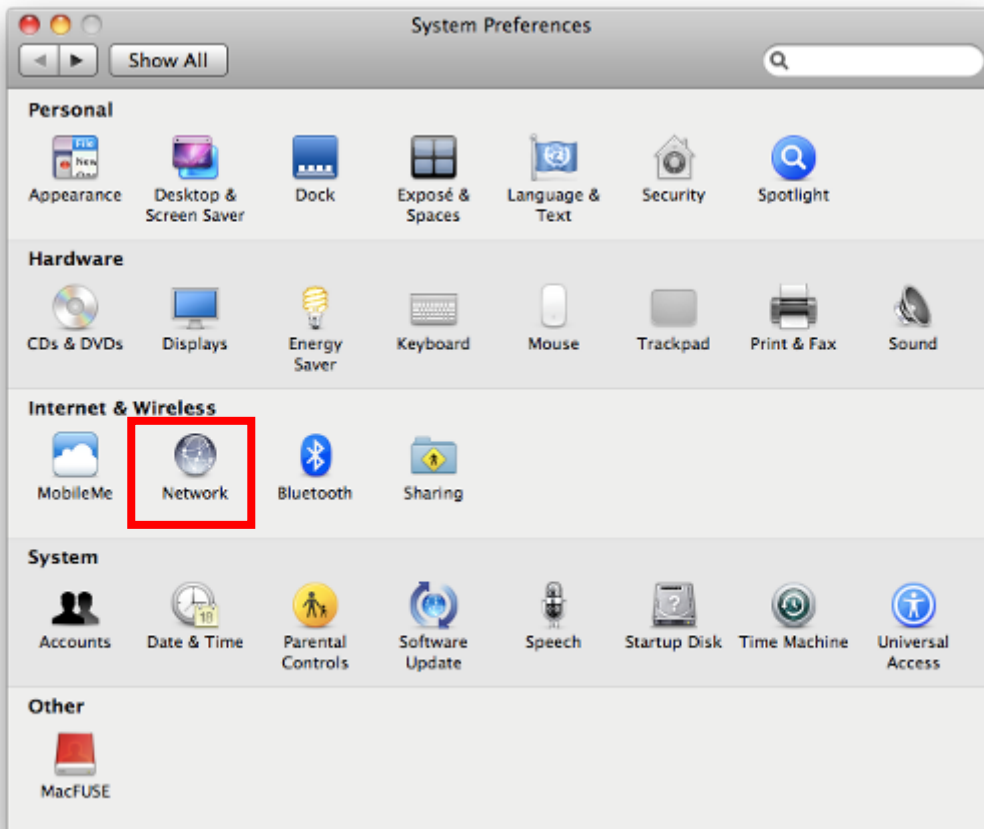


Figure 6-15 System Preferences -- Network

Step 3: Check Wi-Fi setting and select the available wireless network

- (1) Choose the **AirPort** on the left-menu (make sure it is ON)
- (2) Select Network Name **[default]** here

If this is the first time to connect to the Wireless AP, it should show "Not network selected".

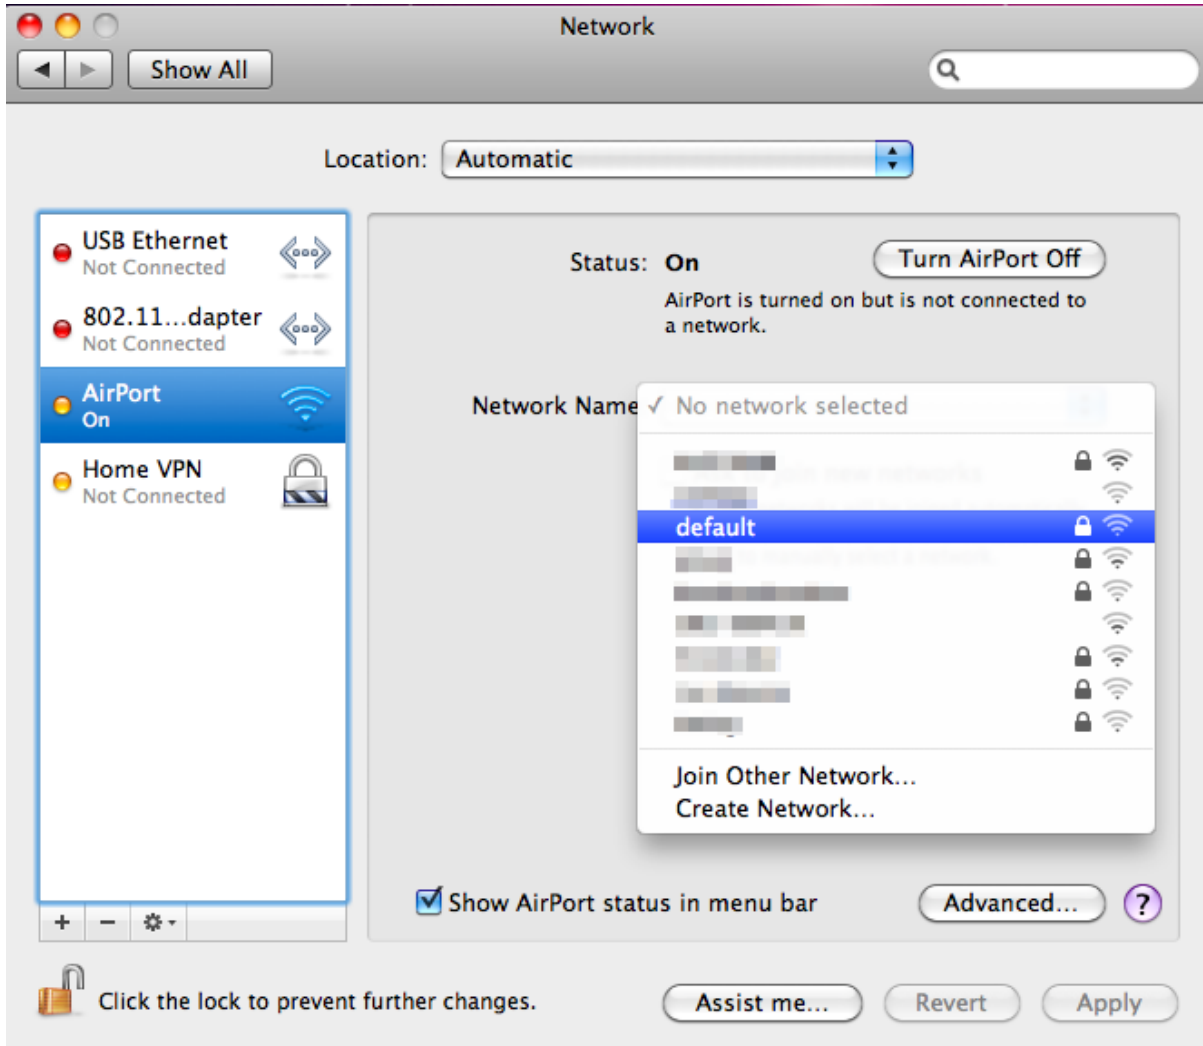


Figure 6-16 Selecting the Wireless Network

6.4 iPhone/iPod Touch/iPad

In the following sections, the **default SSID** of the WBS-202N/WBS-502N is configured to “**default**”.

Step 1: Tap the [Settings] icon displayed in the home screen

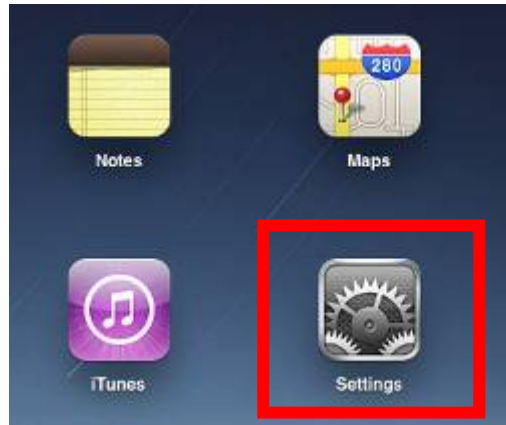


Figure 6-17 iPhone – Settings icon

Step 2: Check Wi-Fi setting and select the available wireless network

(1) Tap [General] \ [Network]

(2) Tap [Wi-Fi]

If this is the first time to connect to the Wireless AP, it should show “Not Connected”.



Figure 6-18 Wi-Fi Setting

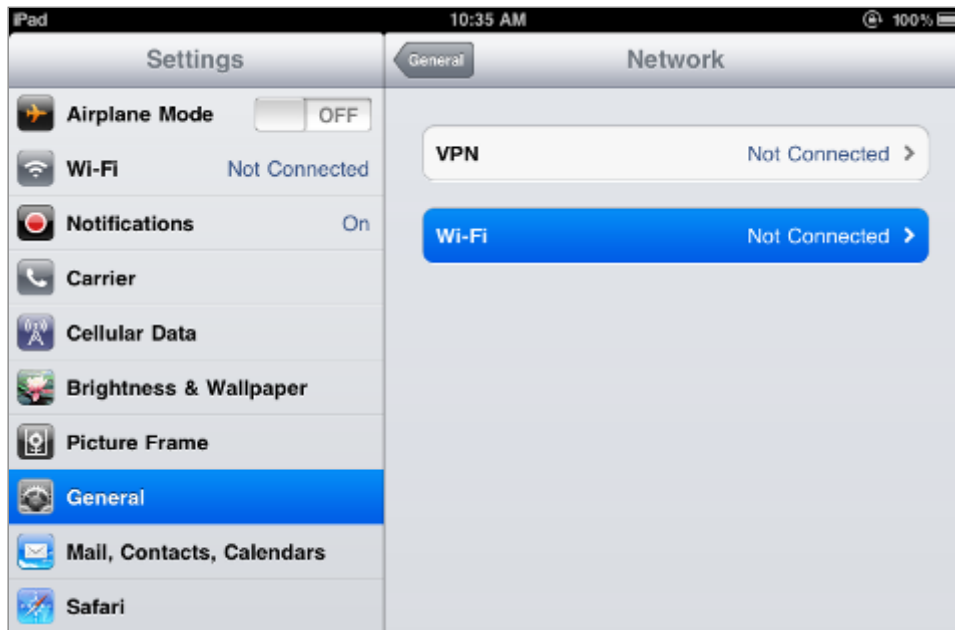


Figure 6-19 Wi-Fi Setting – Not Connected

Step 3: Tap the target wireless network (SSID) in “Choose a Network...”

- (1) Turn on Wi-Fi by tapping “Wi-Fi”
- (2) Select SSID [default]



Figure 6-20 Turning on Wi-Fi

Step 4: Enter the **encryption key** of the Wireless AP

- (1) The password input screen will be displayed
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Tap the [Join] button

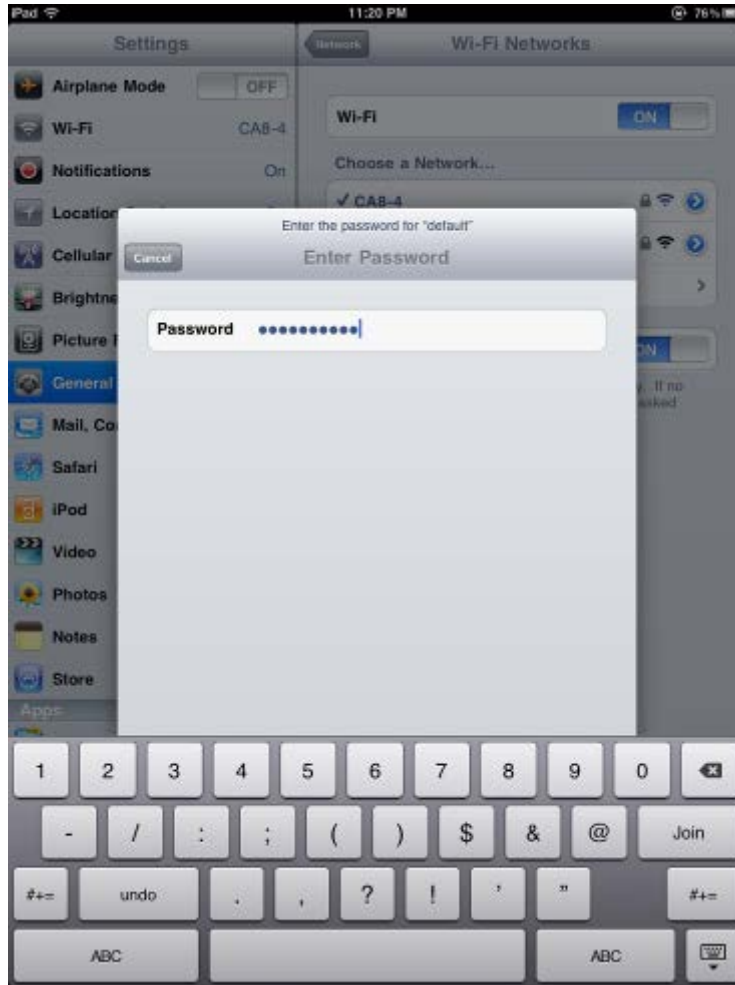


Figure 6-21 iPhone -- Entering the Password

Step 5: Check if the device is connected to the selected wireless network.

If "Yes", then there will be a "check" symbol in front of the SSID.



Figure 6-22 iPhone -- Connected to the Network

Appendix A: Planet Smart Discovery Utility

To easily list the WBS-202N/WBS-502N in your Ethernet environment, the Planet Smart Discovery Utility is an ideal solution.


The following installation instructions guide you to running the Planet Smart Discovery Utility.

Step 1: Deposit the **Planet Smart Discovery Utility** in administrator PC.

Step 2: Run this utility and the following screen appears.



Step 3: Press **“Refresh”** for the current connected devices in the discovery list as shown in the following screen:

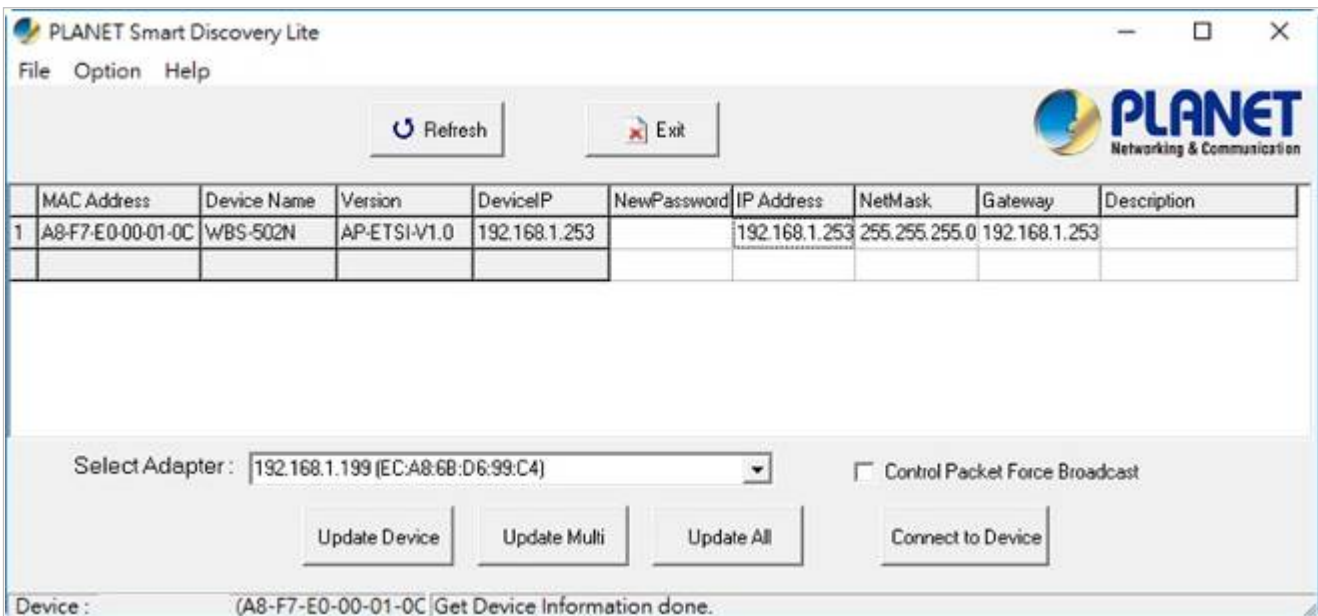

Step 3: Press **“Connect to Device”** and then the Web login screen appears.




The fields in white background can be modified directly and then you can apply the new setting by clicking **“Update Device”**.


Appendix B: FAQs

Q1: How to set up the AP Client Connection

Topology:

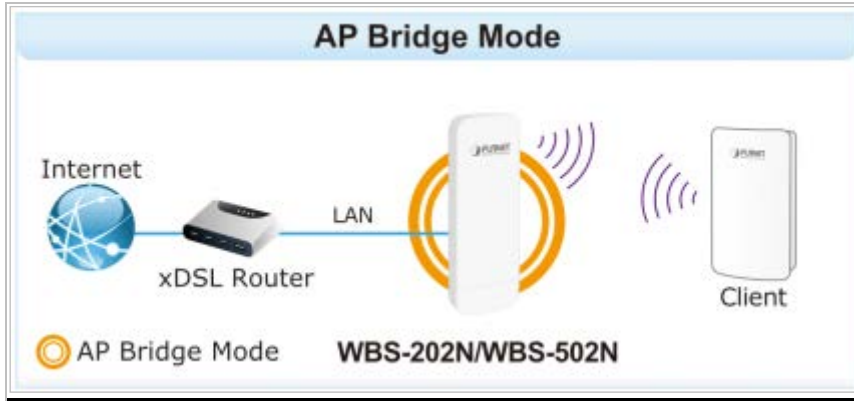

Step1. Use static IP in the PCs that are connected with AP-1(Site-1) and AP-2(Site-2). In this case, Site-1 is "192.168.1.100", and Site-2 is "192.168.1.200".

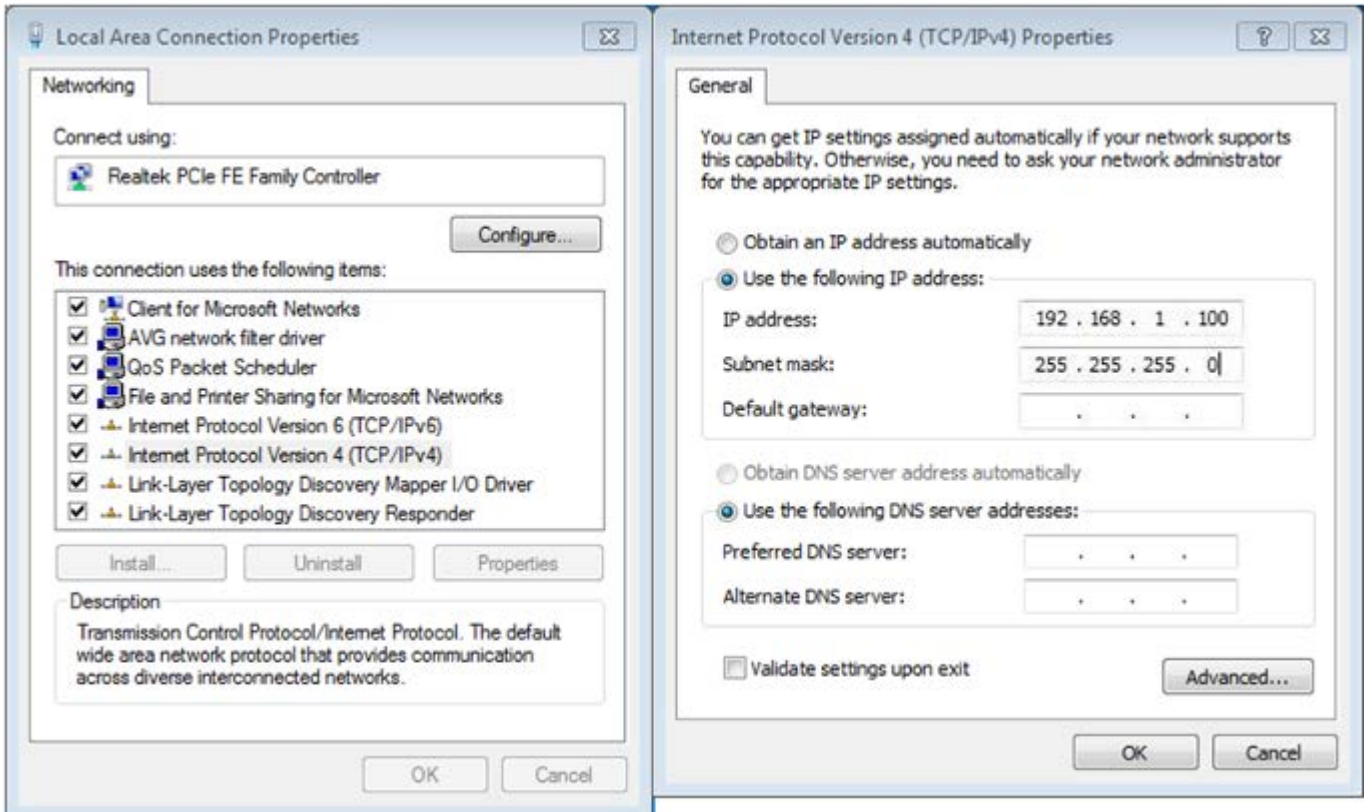


Step2. In AP-2, change the default IP to the same IP range but different from AP-1. In this case, the IP is changed to **192.168.1.252**.

The screenshot shows the 'LAN Settings' configuration page. It features two input fields: 'IP' with the value '192.168.1.252' and 'Subnet Mask' with the value '255.255.255.0'. The page has a light gray background with a blue header bar containing the text 'LAN Settings'.

Step 3. In AP-1, go to “**Wizard**” to configure it to **AP Mode**. In AP-2, configure it to **Repeater Mode**.

AP-1

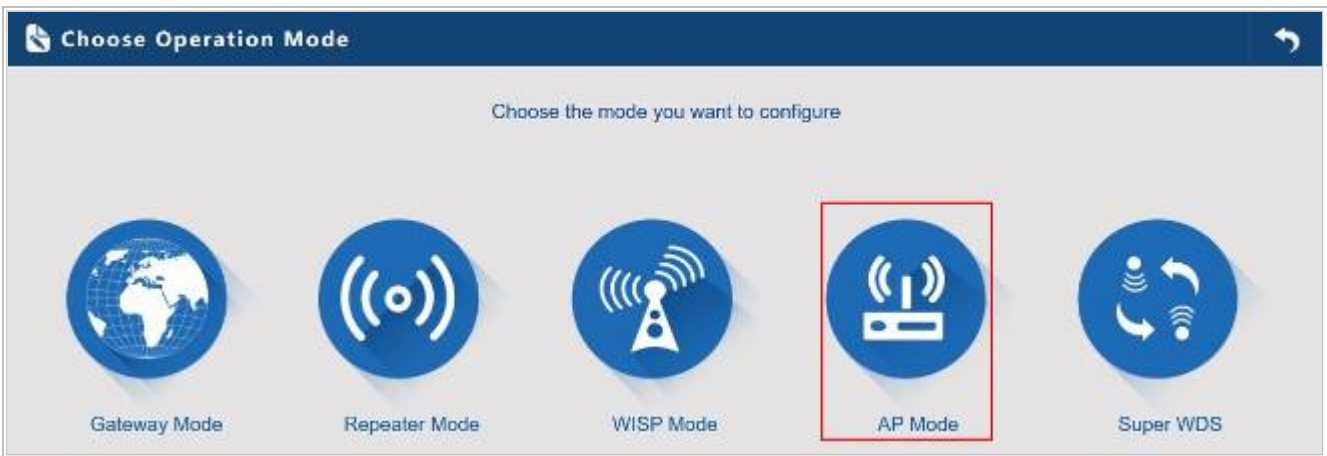

AP-2



Step 4. In AP-2, press **Scan AP** to search the AP-1. You can also enter the MAC address, SSID, encryption and bandwidth if you know what they are.

Scan AP ✕

PLANET_5G

A8:F7:E0:22:85:C5 Channel: 36 Choice

RSS: -12 dBm Encryption: none

Refresh

Wireless Repeater

Repeater SSID Scan AP

lockmac

Authentication ▼

Key

Band Width ▼

WDS Passthrough

Step 5. Click “Next” to finish the setting.

Step 6. Click “Device Status” to check connection status.

wireless connection Status

Repeater SSID PLANET_5G channel 36

BSSID A8:F7:E0:22:85:C5

Signal strength -13 dBm

Link Quality 100%

Tx Rate 79M Tx throughput 2.748 Mbps

Rx Rate 162M Rx throughput 281.256 Kbps

Step 7. Use command line tool to ping each other to ensure the link is successfully established.

From Site-1, ping 192.168.1.200; and in Site-2, ping 192.168.1.100.

```

C:\WINDOWS\system32\CMD.exe - ping 192.168.1.100 -t
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.


Ping statistics for 192.168.0.100:
    Packets: Sent = 25, Received = 0, Lost = 25 (100% loss),
Control-C
^C
C:\Documents and Settings\Administrator>ping 192.168.1.100 -t

Pinging 192.168.1.100 with 32 bytes of data:


Request timed out.
Reply from 192.168.1.100: bytes=32 time=7ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128

```

Step 8. Configure the TCP/IP settings of Site-2 to “Obtain an IP address automatically”.

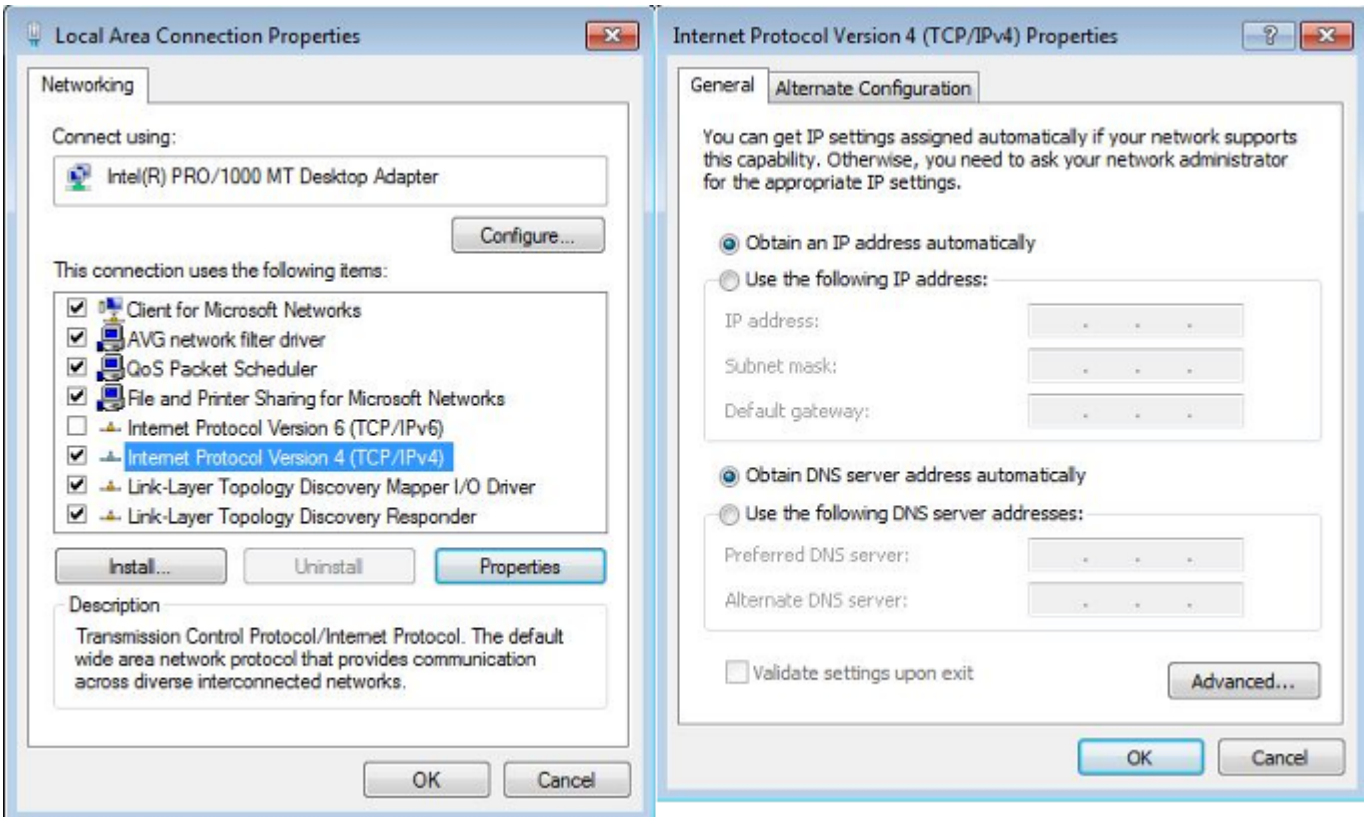

Step 9. Use command line tool to ping the DNS (e.g., Google) to ensure Site-2 can access internet through the wireless connection.

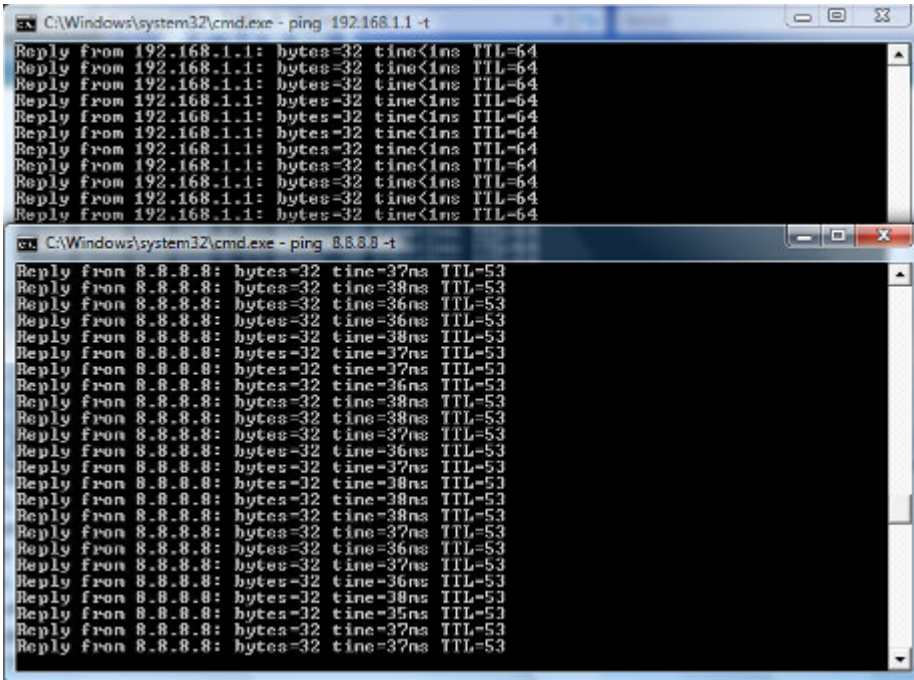


The following hints should be noted:




- 1) The encryption method must be the same as that of both sites if configured.
- 2) Both sites should be Line-of-Sight.
- 3) For the short distance connection less than 1km, please reduce the "RF Output Power" of both sites.
- 4) For the long distance connection over 1km, please adjust the "Distance" to the actual distance or double the actual distance.

Q2: How to set up the WDS Connection

Topology:

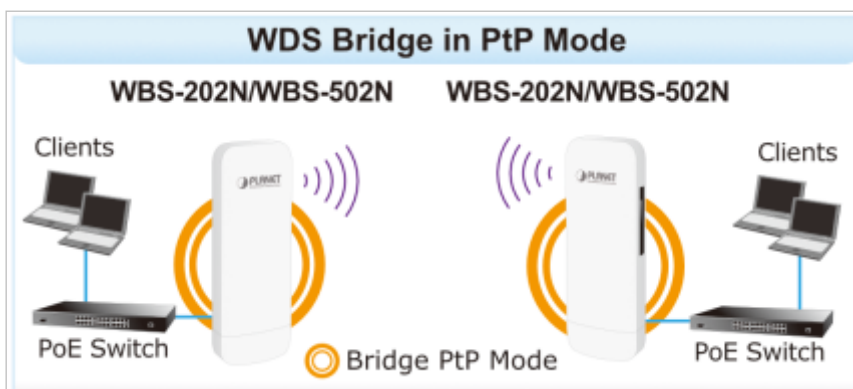

Step 1. Use static IP in the PCs that are connected with WBS-202N/WBS-502N-1 (Site-1) and WBS-202N/WBS-502N -2 (Site-2). In this case, Site-1 is “192.168.1.100”, and Site-2 is “192.168.1.200”.

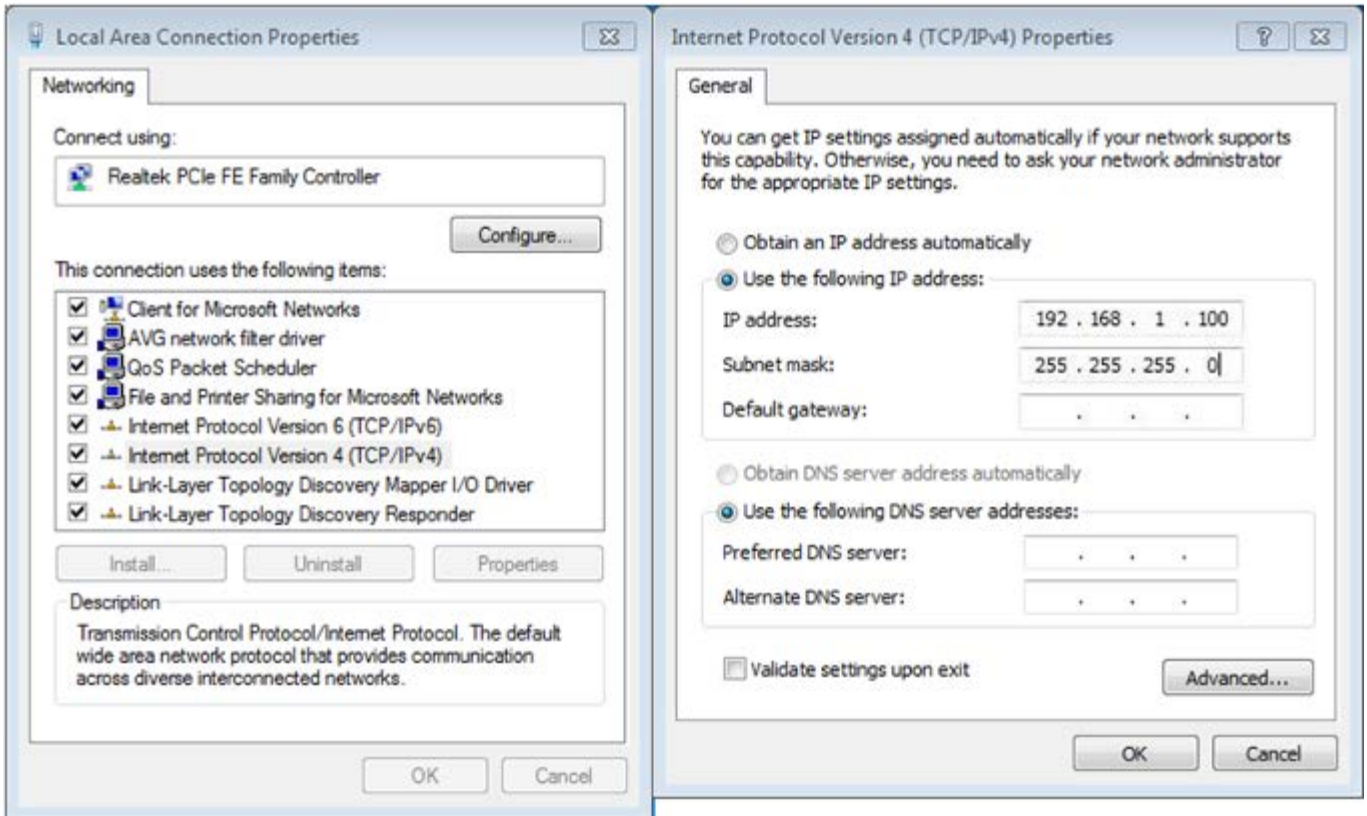

Step 2. In AP-2, change the default IP to the same IP range but different from AP-1. In this case, the IP is changed to **192.168.1.252**.



LAN Settings

IP 192.168.1.252

Subnet Mask 255.255.255.0

Step 3. In both APs, go to “Wizard” to configure it in **Super WDS** Mode.




Choose Operation Mode

Choose the mode you want to configure

Gateway Mode Repeater Mode WISP Mode AP Mode Super WDS

Step 4. Go to “Wireless” and press **Scan AP** to search the other AP. You can also enter the MAC address and SSID if you know what they are.

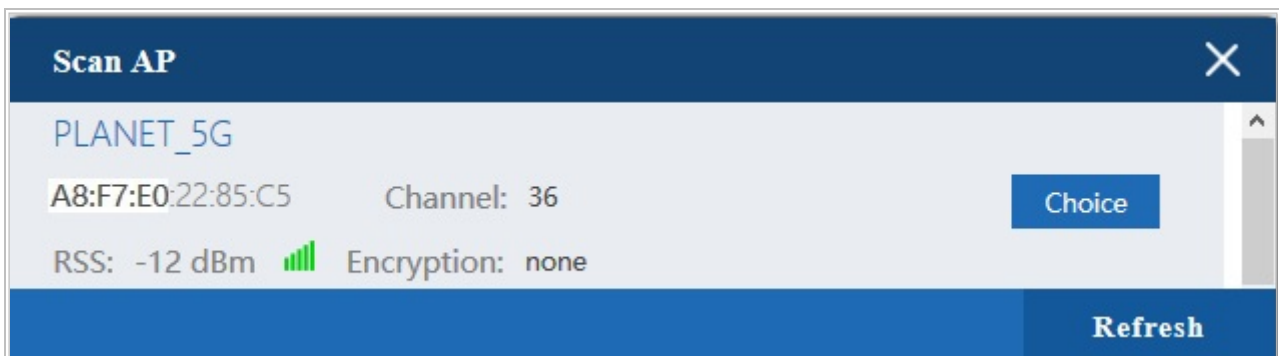

Scan AP

PLANET_5G

A8:F7:E0:22:85:C5 Channel: 36 Choice

RSS: -12 dBm Encryption: none


Refresh

Super WDS settings


SSID <input type="text" value="PLANET_5G"/>	One-click Connection <input checked="" type="checkbox"/> ON
Band Width <input type="button" value="40MHz"/>	Channel <input type="button" value="5.180 GHz (Channel 36)"/> wireless analyzer
MAC1 <input type="text" value="A8:F7:EC:22:85:C5"/>	SSID1 <input type="text" value="PLANET_5G"/> <input type="button" value="Scan AP"/>
MAC2 <input type="text"/>	SSID2 <input type="text"/> <input type="button" value="Scan AP"/>
MAC3 <input type="text"/>	SSID3 <input type="text"/> <input type="button" value="Scan AP"/>
MAC4 <input type="text"/>	SSID4 <input type="text"/> <input type="button" value="Scan AP"/>
Encryption <input type="button" value="Open"/>	

Step 5. Click “Apply” to finish the setting.

Step 6. Click “Return home” to check WDS status.

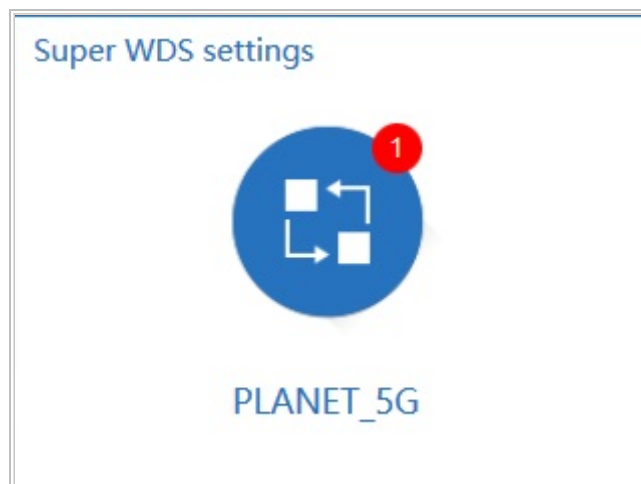

Step 7. It can also use the WDS button to establish connection easily.

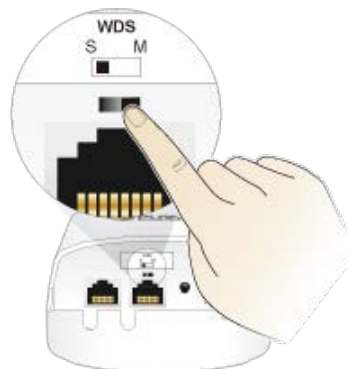

Position “S” to “M” on master AP



Step 8.



Step 9.



Step 10. Use command line tool to ping each other to ensure the link is successfully established.
From Site-1, ping 192.168.1.200; and in Site-2, ping 192.168.1.100.

```

C:\WINDOWS\system32\CMD.exe - ping 192.168.1.100 -t
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.0.100:
    Packets: Sent = 25, Received = 0, Lost = 25 (100% loss),
Control-C
^C
C:\Documents and Settings\Administrator>ping 192.168.1.100 -t

Pinging 192.168.1.100 with 32 bytes of data:

Request timed out.
Reply from 192.168.1.100: bytes=32 time=7ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128

```



The following hints should be noted:

- 1) The encryption method must be the same as that of both sites if configured.
 - 2) Both sites should be Line-of-Sight.
 - 3) For the short distance connection less than 1km, please reduce the "RF Output Power" of both sites.
 - 4) For the long distance connection over 1km, please adjust the "Distance" to the actual distance or double the actual distance.
-

Appendix B: Troubleshooting

If you find the AP is working improperly or stop responding to you, please read this troubleshooting first before contacting the dealer for help. Some problems can be solved by yourself within a very short time.

Scenario	Solution
The AP is not responding to me when I want to access it by Web browser.	<ul style="list-style-type: none"> a. Please check the connection of the power cord and the Ethernet cable of this AP. All cords and cables should be correctly and firmly inserted into the AP. b. If all LEDs on this AP are off, please check the status of power adapter, and make sure it is correctly powered. c. You must use the same IP address section which AP uses. d. Are you using MAC or IP address filter? Try to connect the AP by another computer and see if it works; if not, please reset the AP to the factory default settings by pressing the 'reset' button for over 7 seconds. e. Use the Smart Discovery Tool to see if you can find the AP or not. f. If you did a firmware upgrade and this happens, contact your dealer of purchase for help. g. If all the solutions above don't work, contact the dealer for help.
I can't get connected to the Internet.	<ul style="list-style-type: none"> a. Go to 'Status' -> 'Internet Connection' menu on the router connected to the AP, and check Internet connection status. b. Please be patient, sometimes Internet is just that slow. c. If you've connected a computer to Internet directly before, try to do that again, and check if you can get connected to Internet with your computer directly attached to the device provided by your Internet service provider. d. Check PPPoE / L2TP / PPTP user ID and password entered in the router's settings again. e. Call your Internet service provider and check if there's something wrong with their service. f. If you just can't connect to one or more website, but you can still use other internet services, please check URL/Keyword filter. g. Try to reset the AP and try again later. h. Reset the device provided by your Internet service provider too.

	<ul style="list-style-type: none"> i. Try to use IP address instead of host name. If you can use IP address to communicate with a remote server, but can't use host name, please check DNS setting.
I can't locate my AP by my wireless device.	<ul style="list-style-type: none"> a. 'Broadcast ESSID' set to off? b. Both two antennas are properly secured. c. Are you too far from your AP? Try to get closer. d. Please remember that you have to input ESSID on your wireless client manually, if ESSID broadcast is disabled.
File downloading is very slow or breaks frequently.	<ul style="list-style-type: none"> a. Are you using QoS function? Try to disable it and try again. b. Internet is slow sometimes. Please be patient. c. Try to reset the AP and see if it's better after that. d. Try to know what computers do on your local network. If someone's transferring big files, other people will think Internet is really slow. e. If this never happens before, call you Internet service provider to know if there is something wrong with their network.
I can't log into the web management interface; the password is wrong.	<ul style="list-style-type: none"> a. Make sure you're connecting to the correct IP address of the AP! b. Password is case-sensitive. Make sure the 'Caps Lock' light is not illuminated. c. If you really forget the password, do a hard reset.
The AP becomes hot	<ul style="list-style-type: none"> a. This is not a malfunction, if you can keep your hand on the AP's case. b. If you smell something wrong or see the smoke coming out from AP or A/C power adapter, please disconnect the AP and power source from utility power (make sure it's safe before you're doing this!), and call your dealer of purchase for help.

Appendix C: Glossary

- **802.11ac** - 802.11ac is a wireless networking standard in the 802.11 family (which is marketed under the brand name Wi-Fi), developed in the IEEE Standards Association process, providing high-throughput wireless local area networks (WLANs) on the 5 GHz band.
- **802.11n** - 802.11n builds upon previous 802.11 standards by adding MIMO (multiple-input multiple-output). MIMO uses multiple transmitter and receiver antennas to allow for increased data throughput via spatial multiplexing and increased range by exploiting the spatial diversity, perhaps through coding schemes like Alamouti coding. The Enhanced Wireless Consortium (EWC) [3] was formed to help accelerate the IEEE 802.11n development process and promote a technology specification for interoperability of next-generation wireless local area networking (WLAN) products.
- **802.11a** - 802.11a was an amendment to the IEEE 802.11 wireless local network specifications that defined requirements for an orthogonal frequency division multiplexing (OFDM) communication system. It was originally designed to support wireless communication in the unlicensed national information infrastructure (U-NII) bands (in the 5–6 GHz frequency range) as regulated in the United States by the Code of Federal Regulations, Title 47, Section 15.407.
- **802.11b** - The 802.11b standard specifies a wireless networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.
- **802.11g** - specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.
- **DDNS (Dynamic Domain Name System)** - The capability of assigning a fixed host and domain name to a dynamic Internet IP Address.
- **DHCP (Dynamic Host Configuration Protocol)** - A protocol that automatically configure the TCP/IP parameters for the all the PC(s) that are connected to a DHCP server.
- **DMZ (Demilitarized Zone)** - A Demilitarized Zone allows one local host to be exposed to the Internet for a special-purpose service such as Internet gaming or videoconferencing.
- **DNS (Domain Name System)** - An Internet Service that translates the names of websites into IP addresses.
- **Domain Name** - A descriptive name for an address or group of addresses on the Internet.
- **DSL (Digital Subscriber Line)** - A technology that allows data to be sent or received over existing traditional phone lines.
- **ISP (Internet Service Provider)** - A company that provides access to the Internet.

- **MTU (Maximum Transmission Unit)** - The size in bytes of the largest packet that can be transmitted.
- **NAT (Network Address Translation)** - NAT technology translates IP addresses of a local area network to a different IP address for the Internet.
- **PPPoE (Point to Point Protocol over Ethernet)** - PPPoE is a protocol for connecting remote hosts to the Internet over an always-on connection by simulating a dial-up connection.
- **SSID - A Service Set Identification** is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name.
- **WEP (Wired Equivalent Privacy)** - A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.
- **Wi-Fi** - A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see <http://www.wi-fi.net>), an industry standards group promoting interoperability among 802.11b devices.
- **WLAN (Wireless Local Area Network)** - A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.

EC Declaration of Conformity

English	Hereby, PLANET Technology Corporation , declares that this 300Mbps 802.11n Wireless Outdoor CPE is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU .	Lietuviškai	Šiuo PLANET Technology Corporation , skelbia, kad 300Mbps 802.11n Wireless Outdoor CPE tenkina visus svarbiausius 2014/53/EU direktyvos reikalavimus ir kitas svarbias nuostatas.
Česky	Společnost PLANET Technology Corporation , tímto prohlašuje, že tato 300Mbps 802.11n Wireless Outdoor CPE splňuje základní požadavky a další příslušná ustanovení směrnice 2014/53/EU .	Magyar	A gyártó PLANET Technology Corporation , kijelenti, hogy ez a 300Mbps 802.11n Wireless Outdoor CPE megfelel az 2014/53/EK irányelv alapkövetelményeinek és a kapcsolódó rendelkezéseknek.
Dansk	PLANET Technology Corporation , erklærer herved, at følgende udstyr 300Mbps 802.11n Wireless Outdoor CPE overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU	Malti	Hawnhekk, PLANET Technology Corporation , jiddikjara li dan 300Mbps 802.11n Wireless Outdoor CPE jikkonforma mal-fhtiġġiet essenzjali u ma provvedimentni oħrajn relevanti li hemm fid-Direttiva 2014/53/EU
Deutsch	Hiermit erkläre PLANET Technology Corporation , dass sich dieses Gerät 300Mbps 802.11n Wireless Outdoor CPE in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 2014/53/EU befindet". (BMW i)	Nederlands	Hierbij verklaart, PLANET Technology Corporation , dat 300Mbps 802.11n Wireless Outdoor CPE in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU
Eestikeeles	Käesolevaga kinnitab PLANET Technology Corporation , et see 300Mbps 802.11n Wireless Outdoor CPE vastab Euroopa Nõukogu direktiivi 2014/53/EU põhinõuetele ja muudele olulistele tingimustele.	Polski	Niniejszym firma PLANET Technology Corporation , oświadcza, że 300Mbps 802.11n Wireless Outdoor CPE spełnia wszystkie istotne wymogi i klauzule zawarte w dokumencie „Directive 2014/53/EU ”.
Ελληνικά	<i>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ, PLANET Technology Corporation, ΔΗΛΩΝΕΙ ΟΤΙ ΑΥΤΟ 300Mbps 802.11n Wireless Outdoor CPE ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU</i>	Português	PLANET Technology Corporation , declara que este 300Mbps 802.11n Wireless Outdoor CPE está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU .
Español	Por medio de la presente, PLANET Technology Corporation , declara que 300Mbps 802.11n Wireless Outdoor CPE cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU	Slovensky	Výrobca PLANET Technology Corporation , týmto deklaruje, že táto 300Mbps 802.11n Wireless Outdoor CPE je v súlade so základnými požiadavkami a ďalšími relevantnými predpismi smernice 2014/53/EU .
Français	Par la présente, PLANET Technology Corporation , déclare que les appareils du 300Mbps 802.11n Wireless Outdoor CPE sont conformes aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU	Slovensko	PLANET Technology Corporation , s tem potrjuje, da je ta 300Mbps 802.11n Wireless Outdoor CPE skladen/a z osnovnimi zahtevami in ustreznimi določili Direktive 2014/53/EU .
Italiano	Con la presente, PLANET Technology Corporation , dichiara che questo 300Mbps 802.11n Wireless Outdoor CPE è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU .	Suomi	PLANET Technology Corporation , vakuuttaa täten että 300Mbps 802.11n Wireless Outdoor CPE tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Latviski	Ar šo PLANET Technology Corporation , apliecina, ka šī 300Mbps 802.11n Wireless Outdoor CPE atbilst Direktīvas 2014/53/EU pamatprasībām un citiem atbilstošiem noteikumiem.	Svenska	Härmed intygar, PLANET Technology Corporation , att denna 300Mbps 802.11n Wireless Outdoor CPE står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU .

