




# User's Manual

## 300Mbps 802.11n Outdoor Wireless AP

▶ WAP-252N/WAP-552N

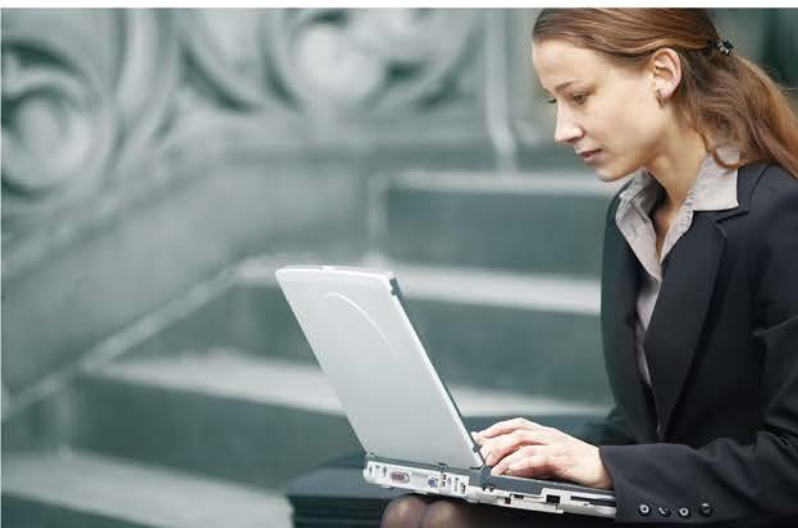

## Copyright

Copyright © 2018 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

## Federal Communication Commission Interference Statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

## FCC Caution

To assure continued compliance, use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 26cm between the radiator & your body.

## CE Compliance Statement

This device meets the RED 2014/53/EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection. The device complies with RF specifications when it is used at a safe distance of 20 cm from your body.

## Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

## National Restrictions

This device is intended for home and office use in all EU countries (and other countries following the EU directive 1999/5/EC) without any limitation except for the countries mentioned below:

Country	Restriction	Reasons/remarks
Bulgaria	None	General authorization required for outdoor use and public service
France	Outdoor use; limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz	Military Radiolocation use. Refarming of the 2.4 GHz band has been ongoing in recent years to allow current relaxed regulation. Full implementation planned 2012
Italy	None	If used outside of own premises, general authorization is required
Luxembourg	None	General authorization required for network and service supply(not for spectrum)
Norway	Implemented	This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund
Russian Federation	None	Only for indoor applications

**Note:** Please don't use the product outdoors in France.

## WEEE regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

## **Revision**

User Manual of PLANET 802.11a/n 300Mbps Outdoor Wireless AP

Model: WAP-252N / WAP-552N

Rev: 1.0 (July, 2018)

Part No. EM-WAP-252N\_WAP-552N \_v1.0

# CONTENTS

<b>Chapter 1.Product Introduction</b> .....	<b>1</b>
<b>1.1 Package Contents</b> .....	<b>1</b>
<b>1.2 Product Description</b> .....	<b>2</b>
<b>1.3 Product Features</b> .....	<b>6</b>
<b>1.4 Product Specifications</b> .....	<b>7</b>
<b>Chapter 2.Hardware Introduction</b> .....	<b>10</b>
<b>2.1 Physical Specifications</b> .....	<b>10</b>
2.1.1 Hardware Description .....	10
2.1.2 Port and Button.....	11
<b>Chapter 3.Hardware Installation</b> .....	<b>12</b>
<b>3.1 Important Safety Precautions</b> .....	<b>12</b>
<b>3.2 Installing the Outdoor Access Point</b> .....	<b>12</b>
<b>Chapter 4.Quick Setup Guide</b> .....	<b>14</b>
<b>4.1 System Requirements</b> .....	<b>14</b>
<b>4.2 Manual Network Setup -- TCP/IP Configuration</b> .....	<b>14</b>
<b>4.3 Starting Setup in the Web UI</b> .....	<b>18</b>
<b>Chapter 5.Configuring the AP</b> .....	<b>19</b>
<b>5.1 Wizard</b> .....	<b>20</b>
<b>5.2 Gateway Mode (AP Router)</b> .....	<b>21</b>
5.2.1 WAN Settings.....	22
5.2.2 Wireless .....	24
<b>5.3 Repeater Mode (Universal Repeater)</b> .....	<b>26</b>
<b>5.4 WISP Mode (Client Router)</b> .....	<b>28</b>
<b>5.5 AP Mode (AP Bridge)</b> .....	<b>30</b>
<b>5.6 Super WDS Mode (WDS Bridge in PtP/PtMP)</b> .....	<b>32</b>
<b>5.7 Advanced</b> .....	<b>35</b>
5.7.1 Device Status.....	35
5.7.2 Wireless .....	39
5.7.3 Network.....	44
5.7.4 Firewall.....	50
5.7.5 Management.....	54
<b>Chapter 6.Quick Connection to a Wireless Network</b> .....	<b>60</b>
<b>6.1 Windows XP (Wireless Zero Configuration)</b> .....	<b>60</b>
<b>6.2 Windows 7 (WLAN AutoConfig)</b> .....	<b>62</b>
<b>6.3 Mac OS X 10.x</b> .....	<b>65</b>

6.4 iPhone/iPod Touch/iPad .....	69
Appendix A: Planet Smart Discovery Utility .....	72
Appendix B: FAQs .....	73
Q1: How to set up the AP Client Connection .....	73
Q2: How to set up the WDS Connection .....	78
Appendix B: Troubleshooting .....	82
Appendix C: Glossary .....	84

# FIGURE

<b>FIGURE 2-5</b> WAP-252N / WAP-552N INTERFACE .....	11
<b>FIGURE 4-1</b> TCP/IP SETTING .....	15
<b>FIGURE 4-2</b> WINDOWS START MENU .....	16
<b>FIGURE 4-3</b> SUCCESSFUL RESULT OF PING COMMAND .....	16
<b>FIGURE 4-4</b> FAILED RESULT OF PING COMMAND .....	17
<b>FIGURE 4-5</b> LOGIN BY DEFAULT IP ADDRESS .....	18
<b>FIGURE 4-6</b> LOGIN WINDOW .....	18
<b>FIGURE 5-1</b> MAIN MENU .....	19
<b>FIGURE 5-2</b> OPERATION MODE .....	21
<b>FIGURE 5-3</b> GATEWAY MODE .....	22
<b>FIGURE 5-4</b> GATEWAY- STATIC IP .....	22
<b>FIGURE 5-5</b> GATEWAY – PPPoE (ADSL) .....	23
<b>FIGURE 5-6</b> GATEWAY – DHCP .....	24
<b>FIGURE 5-7</b> GATEWAY – WIRELESS .....	24
<b>FIGURE 5-8</b> REPEATER MODE .....	26
<b>FIGURE 5-9</b> REPEATER MODE - SCAN AP .....	27
<b>FIGURE 5-10</b> REPEATER MODE - SELECT AP .....	27
<b>FIGURE 5-11</b> WISP MODE .....	28
<b>FIGURE 5-12</b> WISP MODE – SELECT AP .....	29
<b>FIGURE 5-13</b> WISP MODE – SELECT WAN TYPE .....	29
<b>FIGURE 5-14</b> AP MODE .....	30
<b>FIGURE 5-15</b> SUPER WDS MODE .....	33
<b>FIGURE 5-16</b> SUPER WDS MODE – AP1 .....	34
<b>FIGURE 5-17</b> SUPER WDS MODE – AP2 .....	34
<b>FIGURE 5-18</b> ADVANCED .....	35
<b>FIGURE 5-19</b> STATUS .....	35
<b>FIGURE 5-20</b> WIRELESS STATUS .....	36
<b>FIGURE 5-21</b> LAN STATUS .....	37
<b>FIGURE 5-22</b> WAN STATUS .....	38
<b>FIGURE 5-23</b> BASIC SETTINGS .....	39
<b>FIGURE 5-24</b> VIRTUAL AP .....	40
<b>FIGURE 5-25</b> ACCESS CONTROL - ACCESS ALL .....	40
<b>FIGURE 5-26</b> ACCESS CONTROL – ALLOW LISTED .....	41
<b>FIGURE 5-27</b> ADVANCED SETTINGS .....	42
<b>FIGURE 5-28</b> LAN SETTINGS .....	44
<b>FIGURE 5-29</b> IP-MAC BIND .....	44
<b>FIGURE 5-30</b> VLAN .....	45
<b>FIGURE 5-31</b> SNMP .....	46
<b>FIGURE 5-32</b> STATIC IP .....	46
<b>FIGURE 5-33</b> PPPoE (ADSL) .....	47
<b>FIGURE 5-34</b> DHCP .....	48
<b>FIGURE 5-35</b> WAN ADVANCED SETTINGS .....	49






<b>FIGURE 5-36</b> IP/PORT FILTERING .....	50
<b>FIGURE 5-37</b> MAC FILTERING .....	51
<b>FIGURE 5-38</b> URL FILTERING .....	51
<b>FIGURE 5-39</b> PORT FORWARDING .....	52
<b>FIGURE 5-40</b> DMZ .....	53
<b>FIGURE 5-41</b> SYSTEM TIME .....	54
<b>FIGURE 5-42</b> SIGNAL TRACKING .....	54
<b>FIGURE 5-43</b> DDNS SETTINGS.....	55
<b>FIGURE 5-44</b> QoS.....	56
<b>FIGURE 5-45</b> LOGS .....	57
<b>FIGURE 5-46</b> UPGRADE FIRMWARE.....	58
<b>FIGURE 5-47</b> SYSTEM .....	58
<b>FIGURE 5-48</b> USER.....	59
<b>FIGURE 6-1</b> SYSTEM TRAY – WIRELESS NETWORK ICON .....	60
<b>FIGURE 6-2</b> CHOOSING A WIRELESS NETWORK .....	60
<b>FIGURE 6-3</b> ENTERING THE NETWORK KEY .....	61
<b>FIGURE 6-4</b> CHOOSING A WIRELESS NETWORK -- CONNECTED .....	61
<b>FIGURE 6-5</b> NETWORK ICON .....	62
<b>FIGURE 6-6</b> WLAN AUTOCONFIG .....	62
<b>FIGURE 6-7</b> TYPING THE NETWORK KEY .....	63
<b>FIGURE 6-8</b> CONNECTING TO A NETWORK .....	63
<b>FIGURE 6-9</b> CONNECTED TO A NETWORK.....	64
<b>FIGURE 6-10</b> MAC OS – NETWORK ICON.....	65
<b>FIGURE 6-11</b> HIGHLIGHTING AND SELECTING THE WIRELESS NETWORK.....	65
<b>FIGURE 6-12</b> ENTER THE PASSWORD .....	66
<b>FIGURE 6-13</b> CONNECTED TO THE NETWORK .....	66
<b>FIGURE 6-14</b> SYSTEM PREFERENCES .....	67
<b>FIGURE 6-15</b> SYSTEM PREFERENCES -- NETWORK.....	67
<b>FIGURE 6-16</b> SELECTING THE WIRELESS NETWORK .....	68
<b>FIGURE 6-17</b> IPHONE – SETTINGS ICON.....	69
<b>FIGURE 6-18</b> WI-FI SETTING .....	69
<b>FIGURE 6-19</b> WI-FI SETTING – NOT CONNECTED .....	70
<b>FIGURE 6-20</b> TURNING ON WI-FI.....	70
<b>FIGURE 6-21</b> IPHONE -- ENTERING THE PASSWORD.....	71
<b>FIGURE 6-22</b> IPHONE -- CONNECTED TO THE NETWORK .....	71



# Chapter 1. Product Introduction

## 1.1 Package Contents

Thank you for choosing PLANET WAP-252N or WAP-552N Wireless AP. Please verify the contents inside the package box.

WAP-252N / WAP-552N		Quick Guide	
			
RJ45 Waterproof Kit x 1	L-type Bracket x 2	U-bolt Kit x 2	
			




If there is any item missing or damaged, please contact the seller immediately.

## 1.2 Product Description

### Rugged and Durable Outdoor Wi-Fi Solution

PLANET WAP-252N and WAP-552N are 802.11n Outdoor Wireless APs that come with the **IP67**-rated aluminum case, enormously protected from dust and water immersion. It adopts the mature technology of **IEEE 802.11n 2T2R** standard with maximum connectivity and **300Mbps** performance in **2.4GHz** and **5GHz** frequency band. By connecting high-gain antenna through the flexible N-type connectors, it is easy to achieve various outdoor long-distance applications and capable to adapt to any rough environment.

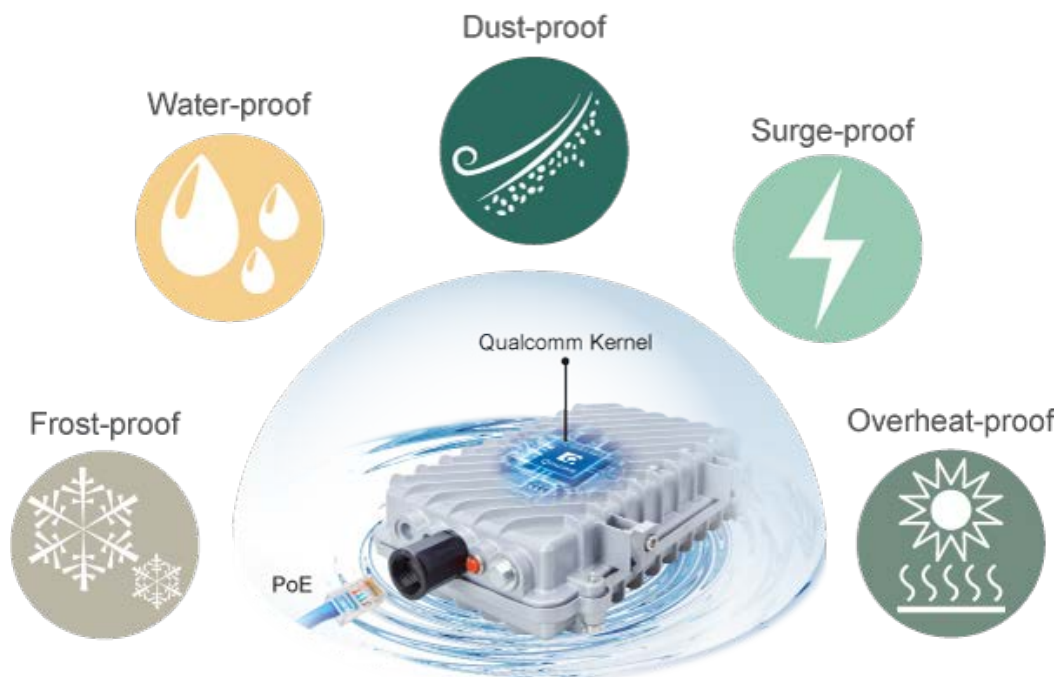


### Environmental Adaptations in Outdoor Area

### PoE Function

For the maximum adaptability and stability in the rugged environment, the WAP-252N/WAP-552N not only comes with **IP67**-rated aluminum die-cast housing, but also adopts the enterprise-level Qualcomm kernel, capable of withstanding wide temperature ranging from **-40 to 70** degrees C. With the **IEEE 802.3af/at PoE**, the WAP-252N/WAP-552N can be easily installed in the areas where power outlets are not available. Furthermore, it is also suitable to be integrated with PLANET Solar Power PoE System to offer wireless services even in the suburbs.


### Flexible Hardware and Software Characteristics for Various Applications

With a specific antenna connected through the built-in N-type connectors and eight operation modes, the WAP-252N/WAP-552N greatly benefits the system integrator as a multitude of applications can be had for communities, warehouses, campuses, harbors, etc.

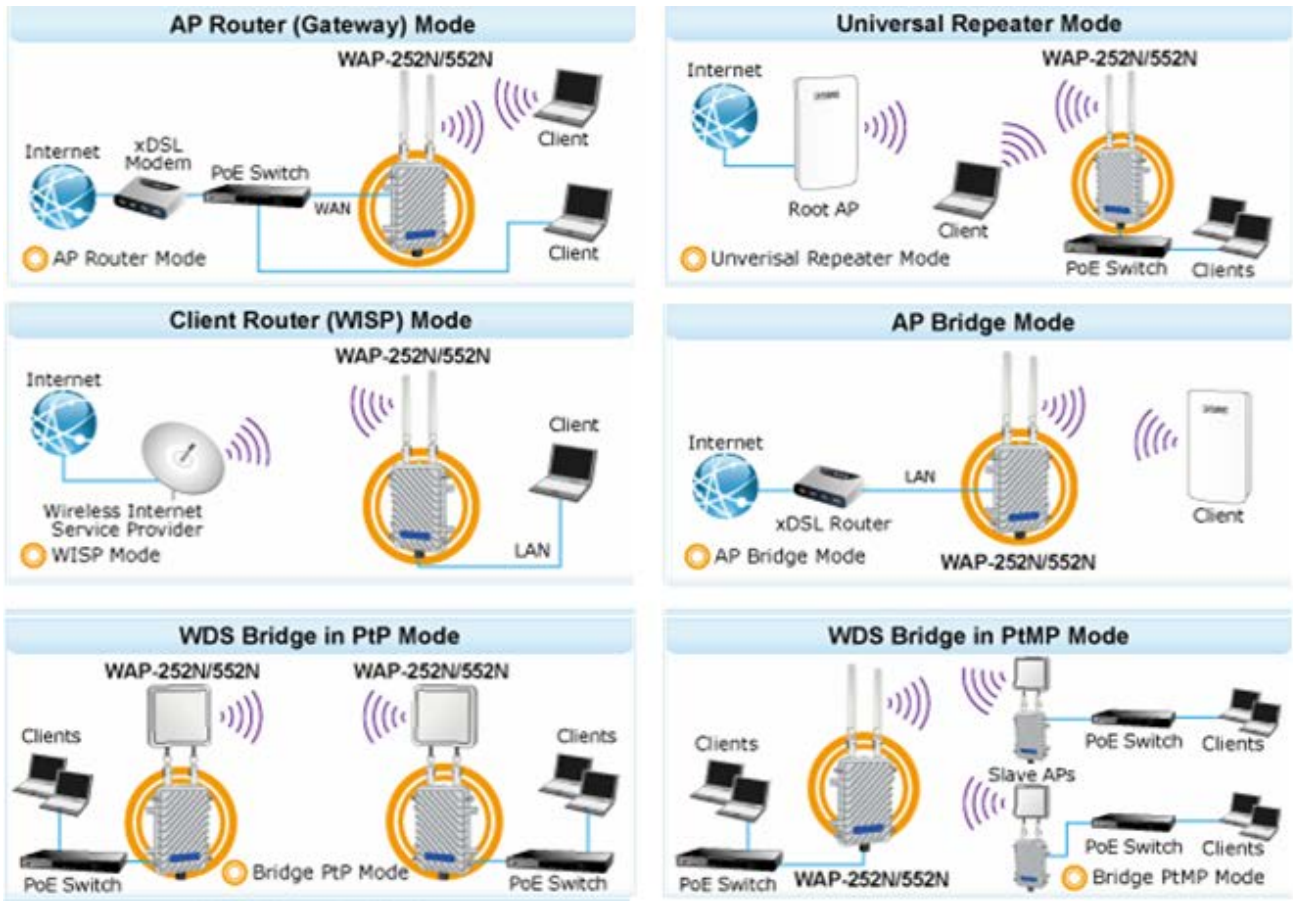

### Multiple SSIDs with VLAN Tagging

As for security, the WAP-252N/WAP-552N supports WPA/WPA2, and the 802.1X RADIUS authentication to secure the wireless connection. Besides, the supported IEEE **802.1Q VLAN** allows multiple VLAN tags to be mapped to multiple SSIDs to distinguish the wireless access. This makes it possible for the WAP-252N/WAP-552N to work with managed Ethernet switches to have VLANs assigned to a different access level and authority.

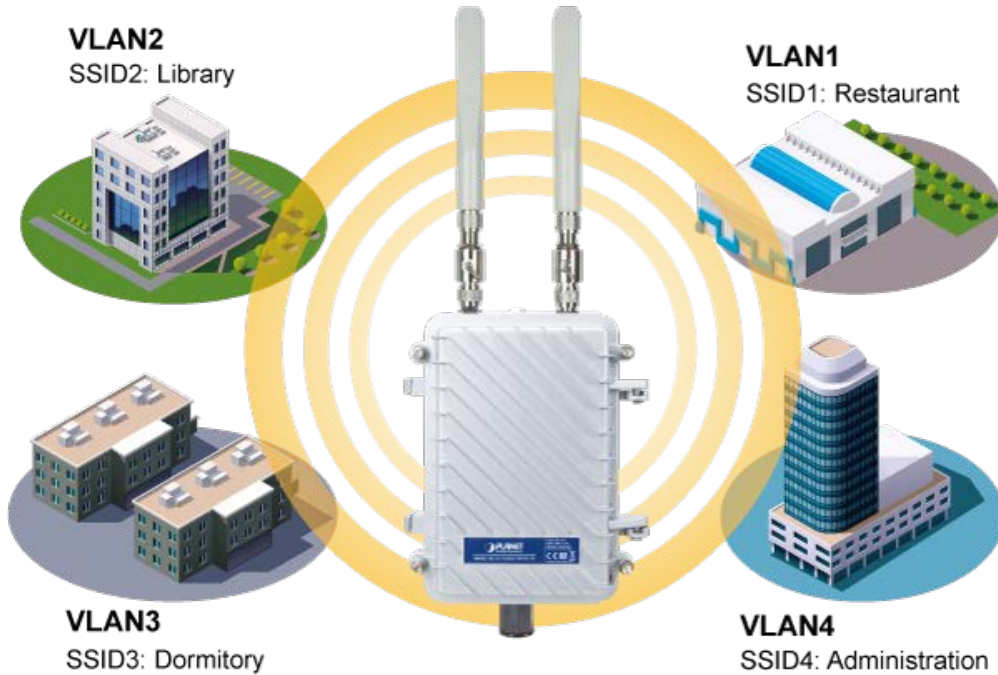

## Multi-SSIDs + VLANs

### Optimized Efficiency in AP Management

The brand-new GUI configuration wizard helps the system administrator easily set up the outdoor wireless AP step by step. Besides, the built-in Wi-Fi analyzer provides real-time channel utilization to prevent channel overlapping to assure greater performance. With the automatic transmission power mechanism, distance control and scheduling reboot setting, the outdoor wireless AP is easier for the administrator to deploy and manage without on-site maintenance.

A collage of four screenshots from the Planet WAP GUI. 

- Multiple OP Modes:** A screenshot of the 'Check Operation Mode' screen showing icons for 'Control Mode', 'Monitor Mode', 'AP Mode', and 'Soft AP Mode'. Below it is a callout box: 'Multiple OP Modes - Fits various applications' with a Wi-Fi icon.
- Wi-Fi Channel Analyzer:** A screenshot of the 'Wi-Fi Channel Analyzer' showing a spectrum graph with various channels. Below it is a callout box: 'Wi-Fi Channel Analyzer - Prevents Wi-Fi congestion' with a target icon.
- Wi-Fi Signal Tracking:** A screenshot of the 'Advanced Settings' page with a 'Wi-Fi Signal Tracking' section. Below it is a callout box: 'Wi-Fi Signal Tracking - Accelerates antenna alignment' with a hand icon.

### Centralized Wireless AP Management Solution

Moreover, administrators can simply use PLANET AP controller and **SAPC (Smart AP Control)** to deliver wireless profiles to multiple APs simultaneously, thus making the central management simple.



## 1.3 Product Features

- **Industrial Compliant Wireless LAN and LAN**
  - Compliant with the IEEE 802.11b/g/n and IEEE 802.11a/n wireless technology
  - 2T2R architecture with data rate of up to 300Mbps
  - Equipped with two 10/100Mbps RJ45 ports with auto MDI/MDI-X supported
  
- **Fixed Network Broadband Router**
  - Supported WAN connection types: DHCP, Static IP, PPPoE
  - Supports Port Forwarding and DMZ for various networking applications
  - Supports DHCP server in Gateway/WISP mode
  
- **RF Interface Characteristics**
  - Two built-in N-type connectors
  - High output power with multiply-adjustable transmit power control
  
- **Outdoor Environmental Characteristics**
  - IP67-rated sturdy aluminum case
  - IEEE 802.3af/at Power over Ethernet design
  - Operating temperature: -40~70 degrees C
  
- **Multiple Operation Modes and Wireless Features**
  - Multiple operation modes: AP, Gateway, Repeater, WDS, WISP
  - WMM (Wi-Fi multimedia) provides higher priority to multimedia transmitting over wireless
  - Coverage threshold to limit the weak signal of clients occupying session
  - Real-time Wi-Fi channel analysis chart and client limit control for better performance
  
- **Secure Network Connection**
  - Full encryption supported: WPA/WPA2, WPA-PSK/WPA2-PSK and 802.1X RADIUS authentication
  - Supports 802.1Q VLAN and SSID-to-VLAN mapping
  - Supports IP/Port/MAC address/URL filtering, DoS, SPI Firewall
  - Supports DMZ and Port Forwarding
  - Bandwidth control per IP address to increase network stability
  
- **Easy Installation and Management**
  - Supports PLANET AP Controllers in AP mode
  - Easy discovery by PLANET Smart Discovery
  - Self-healing mechanism through system auto reboot setting
  - System status monitoring through remote Syslog Server
  - Supports PLANET DDNS/ Easy DDNS

## 1.4 Product Specifications

Model Name	WAP-252N	WAP-552N
Description	2.4GHz 802.11n 300Mbps Outdoor Wireless AP	5GHz 802.11n 300Mbps Outdoor Wireless AP
<b>Hardware Features</b>		
Interfaces	Wireless IEEE802.11b/g/n, 2T2R	Wireless IEEE 802.11a/n, 2T2R
	PoE: 1 x 10/100BASE-TX, auto-MDI/MDIX, 802.3af/at PoE In LAN: 1x 10/100BASE-TX, auto-MDI/MDIX	
Antennas	Two built-in N-type connectors	
Material	Aluminum	
IP Level	IP67	
Dimensions	153.2 x 79.5 x 234.5 mm	
Weight	2kg	
Power Requirements	48V 0.5A, IEEE 802.3af/at PoE+	
Power Consumption	< 13W	
Mounting Type	Mast mounting	
Button	Reset/Pair button	
<b>Wireless Interface Specifications</b>		
Standard	IEEE 802.11b/g/n IEEE 802.11i IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control	IEEE 802.11a/n IEEE 802.11i IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control
Media Access Control	CSMA/CA	
Modulation	802.11g/n: OFDM (BPSK/ QPSK/ 16QAM/ 64QAM) 802.11b: DSSS (DBPSK/ DQPSK/ CCK)	802.11a/n: OFDM (BPSK/ QPSK/ 16QAM/ 64QAM)
Frequency Band	FCC: 2.412~2.462GHz ETSI: 2.412~2.472GHz	FCC: 5.180~5.240GHz, 5.745~5.825GHz ETSI: 5.180~5.700GHz
Operating Channels	FCC: 1~11 Channels ETSI: 1~13 Channels	FCC: 36, 40, 44, 48, 149, 153, 157, 161, 165 (9 channels) ETSI: 36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140 (16 channels)  <b>5GHz channel list will vary in different countries according to their regulations.</b>
Max. Transmit Power (dBm)	FCC: up to 29 ± 1dBm ETSI: < 20dBm (EIRP)	FCC: up to 27 ± 2dBm ETSI: < 20dBm (EIRP)

Receiver Sensitivity (dBm)	Network Mode	Data Rate	Receive Sensitivity (dBm)	Network Mode	Data Rate	Receive Sensitivity (dBm)	
	802.11b	1Mbps	-95				
		11Mbps	-90				
	802.11g	6Mbps	-90	802.11a		6Mbps	-92
		54Mbps	-72			54Mbps	-75
	802.11n HT20	MCS0/MCS 8	-90	802.11n HT20		MCS0/MC S8	-91
		MCS7/MCS 15	-72/-68			MCS7/MC S15	-72
	802.11n HT40	MCS0/MCS 8	-90	802.11n HT40		MCS0/MC S8	-88
		MCS7/MCS 15	-72/-68			MCS7/MC S15	-70
	Environment & Certification						
Operating Temperature	-40 ~ 70 degrees C						
Operating Humidity	10 ~ 90% (non-condensing)						
ESD Protection	± 8kV air-gap discharge ± 4kV contact discharge						
Surge Protection	± 4kV						
Regulatory	CE, RoHS						
Software							
LAN	Static IP						
	Supports IP-MAC binding						
WAN Type (GW/WISP mode)	<ul style="list-style-type: none"> <li>■ Static IP</li> <li>■ Dynamic IP</li> <li>■ PPPoE</li> </ul>						
Wireless Modes	<ul style="list-style-type: none"> <li>■ Access Point</li> <li>■ Gateway</li> <li>■ Repeater</li> <li>■ WDS (AP/Bridge/Station)</li> <li>■ WISP</li> </ul>						
Channel Width	20MHz, 40MHz						
Encryption Type	WPA, WPA-PSK, WPA2, WPA2-PSK, 802.1X						
Wireless Security	Enable/Disable SSID Broadcast						



	Wireless MAC address filtering
	User Isolation
<b>Max. SSIDs</b>	4
<b>Max. Wireless Clients</b>	64 per radio (50 is suggested, depending on usage)
<b>Max. WDS Peers</b>	4
<b>Wireless QoS</b>	Supports Wi-Fi Multimedia (WMM)
<b>Wireless Advanced</b>	Auto Channel Selection
	5-level Transmit Power Control (100%, 75%, 50%, 25%, 12.5%)
	Client Limit Control, Coverage Threshold
	Distance control (Auto Ack Timeout)
	Wi-Fi channel analysis chart
	Fast Roaming
<b>Status Monitoring</b>	Device status, wireless client List
	PLANET Smart Discovery
	DHCP client table
	System Log supports remote syslog server
<b>VLAN</b>	IEEE 802.1Q VLAN (VID: 3~4094)
	SSID-to-VLAN mapping up to 4 SSIDs
<b>Self-healing</b>	Supports auto reboot settings per day/hour
<b>Management</b>	Remote management through PLANET DDNS/ Easy DDNS
	Configuration backup and restore
	Supports UPnP
	Supports IGMP Proxy
	Supports PPTP/L2TP/IPSec VPN Pass-through
	SNMP v1/v2c/v3 support, MIB I/II, Private MIB
<b>Central Management</b>	Applicable controllers: WAPC-500, WAPC-1000 and Smart AP Control (SAPC)

# Chapter 2. Hardware Introduction

## 2.1 Physical Specifications

Physical Specifications	
Dimensions (W x D x H)	153.2 x 79.5 x 234.5mm
Weight	2kg

### Appearance



### 2.1.1 Hardware Description


#### Hardware Interface Definition

Object	Description
Antenna Connectors	2 N-type (female) antenna connectors
PoE LAN Port	10/100Mbps RJ45 port, auto MDI/MDI-X 802.3af/at PoE+ supported, 48VDC In
Reset Button	Press and hold the <b>Reset</b> button on the PCBA for over 15 seconds to return to the factory default setting.

### 2.1.2 Port and Button

It provides a simple interface monitoring the AP. Figure 2-5 shows the hardware interface of the WAP-252N/552N.

#### WAP-252N/552N Hardware Interface:

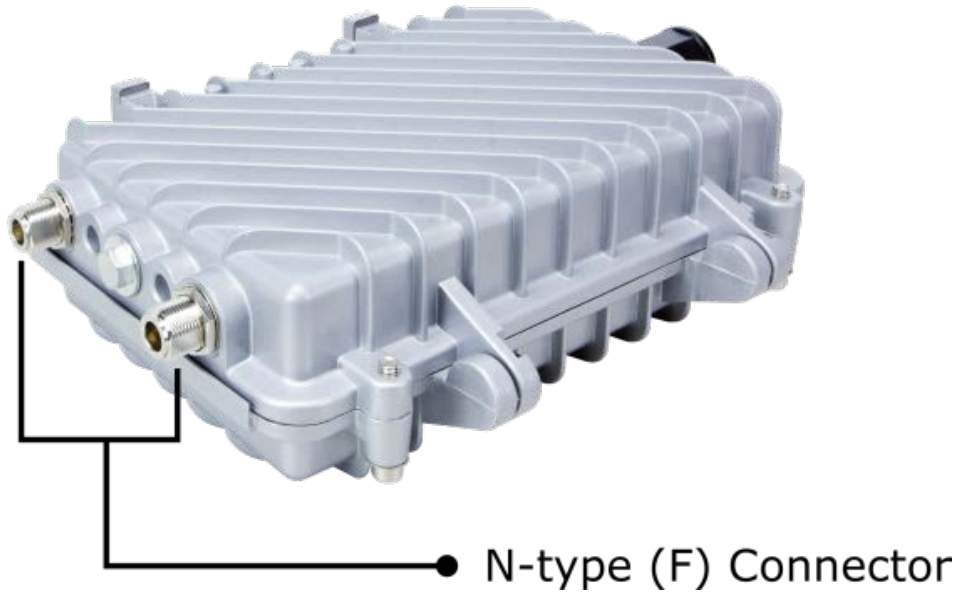

LAN (802.3af/at PoE)

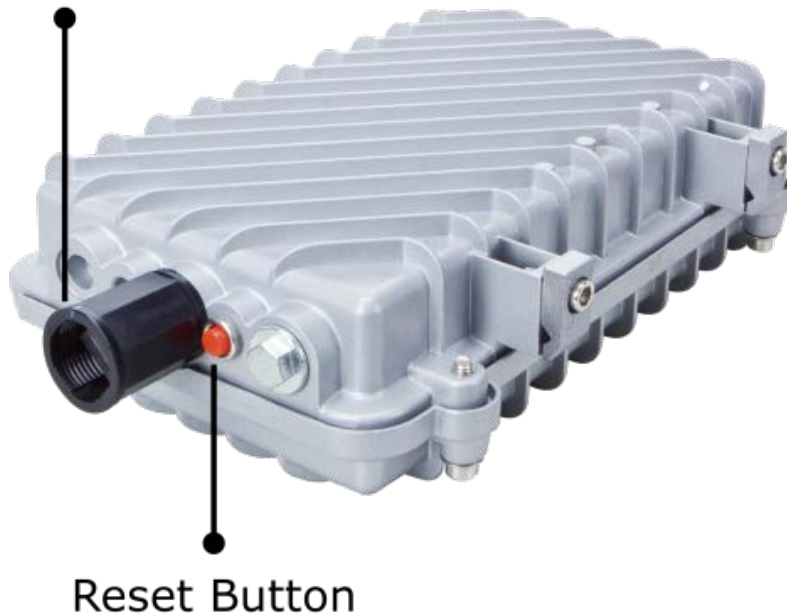


Figure 2-1 WAP-252N / WAP-552N Interface

# Chapter 3. Hardware Installation

## 3.1 Important Safety Precautions


- 1) **LIVES MAY BE AT RISK!** Please be aware of the electrical wires around. Carefully read the section "**OUTDOOR INSTALLATION WARNING**" in the manual before installation.
- 2) Users **MUST** complete grounding wired with the device; otherwise, a sudden lightning could cause fatal damage to the device. **EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.**
- 3) Users **MUST** power off the device first before connecting the antenna to it; otherwise, damage might be caused to the device itself.
- 4) The Antenna and Surge Arrestor are required for each antenna connector, and must be purchased separately.

## 3.2 Installing the Outdoor Access Point

Please install the AP according to the following steps. Don't forget to pull out the power plug and keep your hands dry.

**Step 1.** Loosen the socket head screw on the left-side of the device and insert the L-type bracket. Then, secure the screws.

**Step 2.** Position the device on a pole and secure it by using the two U-bolt kits to finish the installation. The AP can be mounted on an up to 2.5" (O.D.) pole

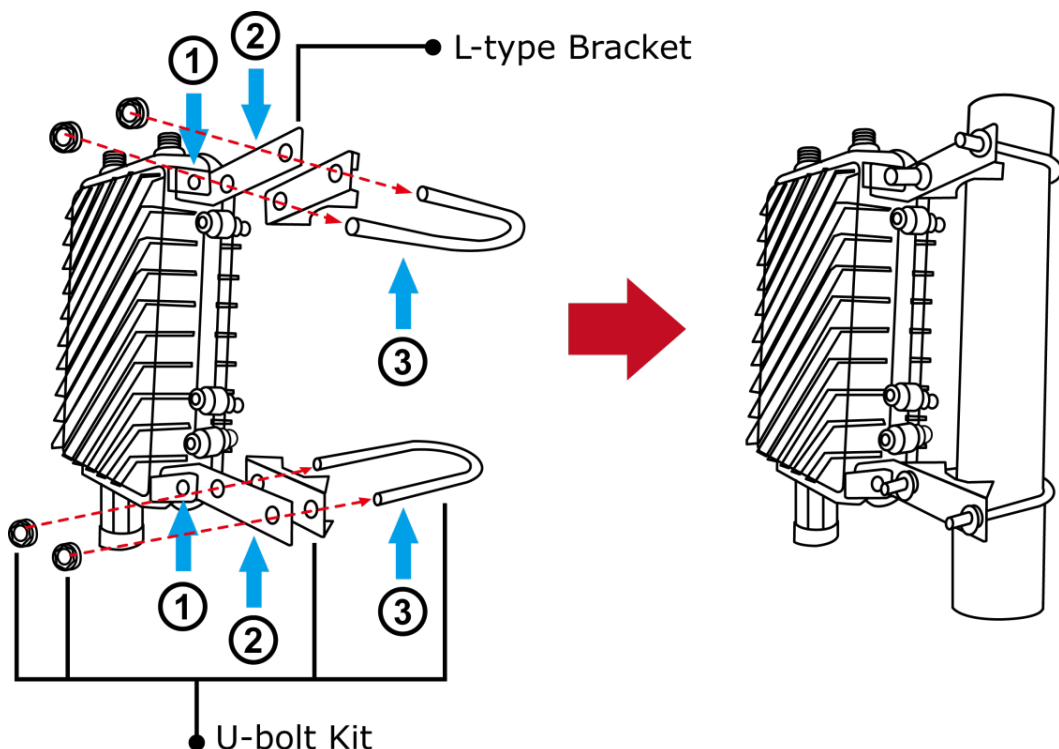

**Step 3.** Attach the surge arrestors to each antenna connector.




The Antenna and Surge Arrestor are required for each antenna connector, and must be purchased separately.



Please remember to finish grounding by consulting the local electrical experts.

**Step 4.** Attach the antenna equipped with N-type (M) connector to each surge arrestor. Otherwise, connect the antenna through the N-male (male pin) to N-male (male pin) cable.

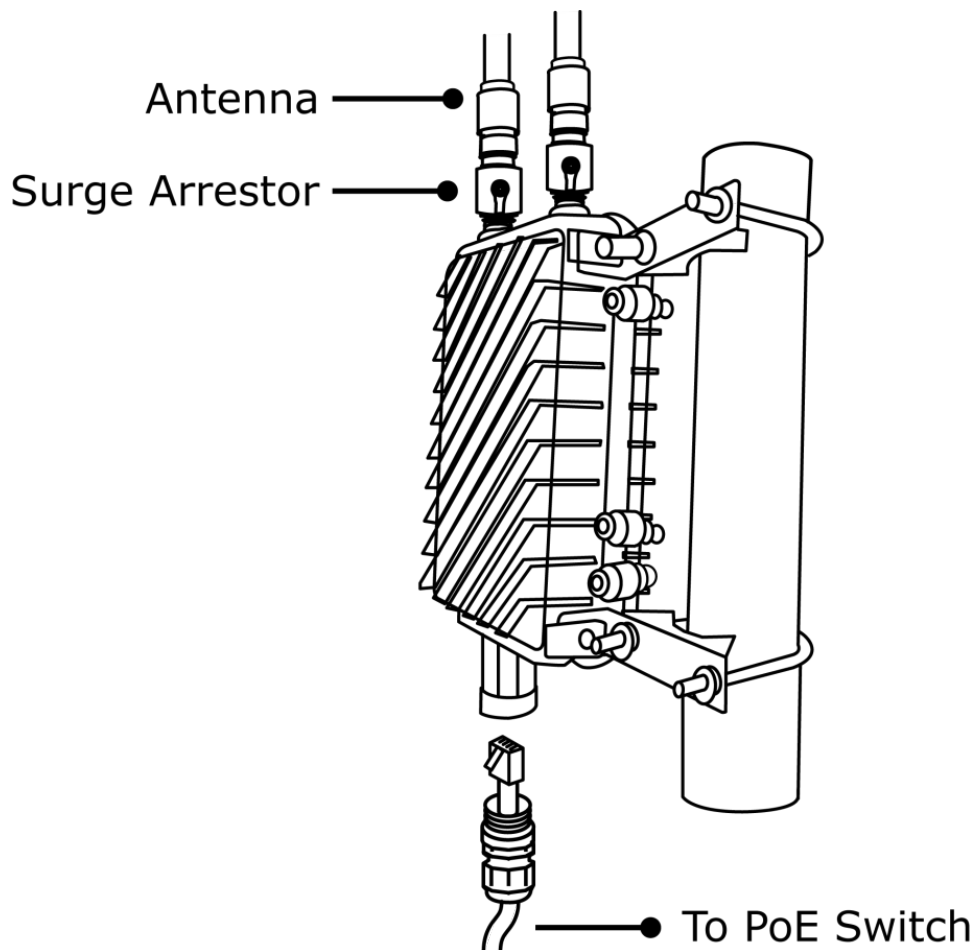

**Step 5.** Plug the RJ45 Ethernet cable into the PoE port of the AP through the waterproof kit, and plug the other side of the RJ45 cable into the PoE port of the PoE switch to finish the installation.

## Chapter 4. Quick Setup Guide

This chapter will show you how to configure the basic functions of your AP within minutes.

### 4.1 System Requirements

- Broadband Internet Access Service (Cable/xDSL/Ethernet connection)
- One IEEE 802.3at PoE switch (supply power to the WAP-252N/552N)
- PCs with a working Ethernet adapter and an Ethernet cable with RJ45 connectors
- PCs running Windows 98/ME, NT4.0, 2000/XP, Windows Vista/Win 7/Win 8/Win 10, MAC OS X or later, Linux, UNIX or other platforms compatible with **TCP/IP** protocols



1. The AP in the following instructions refers to PLANET WAP-252N/WAP-552N.



1. A computer with wired Ethernet connection to the Wireless AP is required for the first-time configuration.
2. It is recommended to use Internet Explorer 11, Firefox or Chrome to access the AP.

Before setting up the AP, make sure your PoE switch is connected to the Internet through the broadband service successfully at this moment. If there is any problem, please contact your local ISP. After that, please install the AP according to the following steps. Don't forget to pull out the power plug and keep your hands dry.

### 4.2 Manual Network Setup -- TCP/IP Configuration


The default IP address of the WAP-252N/WAP-552N is **192.168.1.253**. And the default Subnet Mask is 255.255.255.0. These values can be changed as you want. In this guide, we use all the default values for description.

Connect the WAP-252N/WAP-552N with your PC by an Ethernet cable plugging in LAN port on one side and in LAN port of PC on the other side. Please power on the WAP-252N/WAP-552N by PoE switch through the PoE port.

In the following sections, we'll introduce how to install and configure the TCP/IP correctly in **Windows 10**. And the procedures in other operating systems are similar. First, make sure your Ethernet Adapter is working, and refer to the Ethernet adapter manual if needed.

**Summary:**

- Set up the TCP/IP Protocol for your PC.
  - Configure the network parameters. The IP address is 192.168.1.xxx (If the default IP address of the WAP-252N/WAP-552N is 192.168.1.253, and the DSL router is 192.168.1.254, the "xxx" can be configured to any number from 1 to 252.) and subnet mask is 255.255.255.0.
- 1 Select **Use the following IP address**, and then configure the IP address of the PC.
  - 2 For example, as the default IP address of the WAP-252N/WAP-552N is 192.168.1.253 and the DSL router is 192.168.1.254, you may choose from 192.168.1.1 to 192.168.1.252.

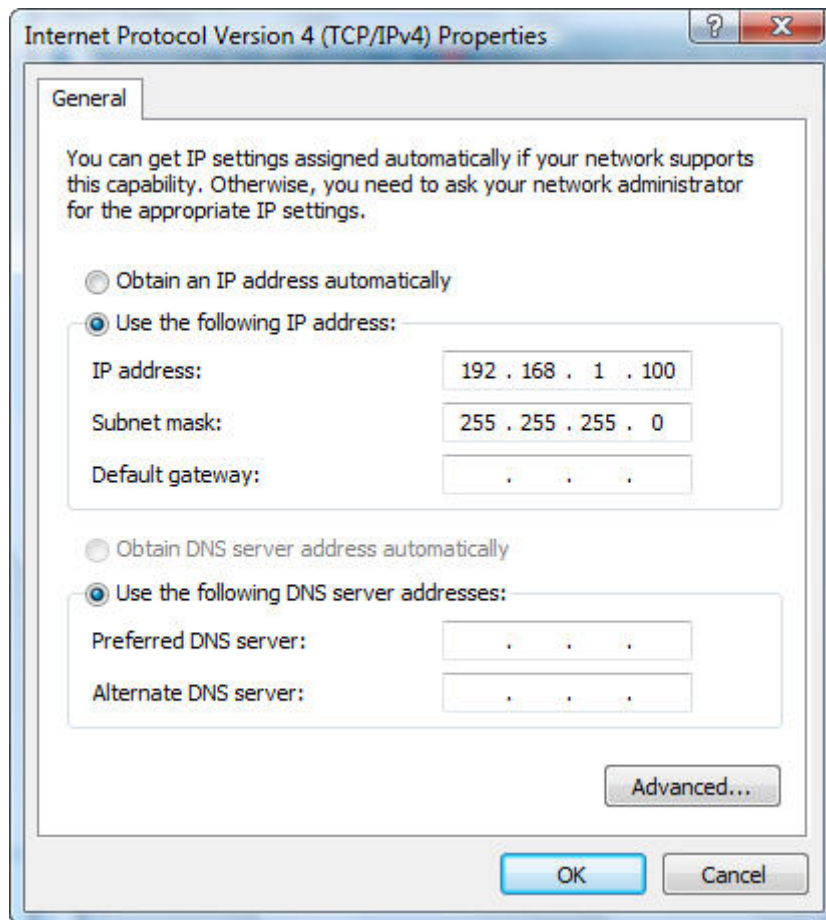

**Figure 4-1** TCP/IP Setting

Now click **OK** to save your settings.

Now, you can run the ping command in the **command prompt** to verify the network connection between your PC and the AP. The following example is in **Windows 10** OS. Please follow the steps below:

1. Click on **Start > Run**.
2. Type "**cmd**" in the Search box.

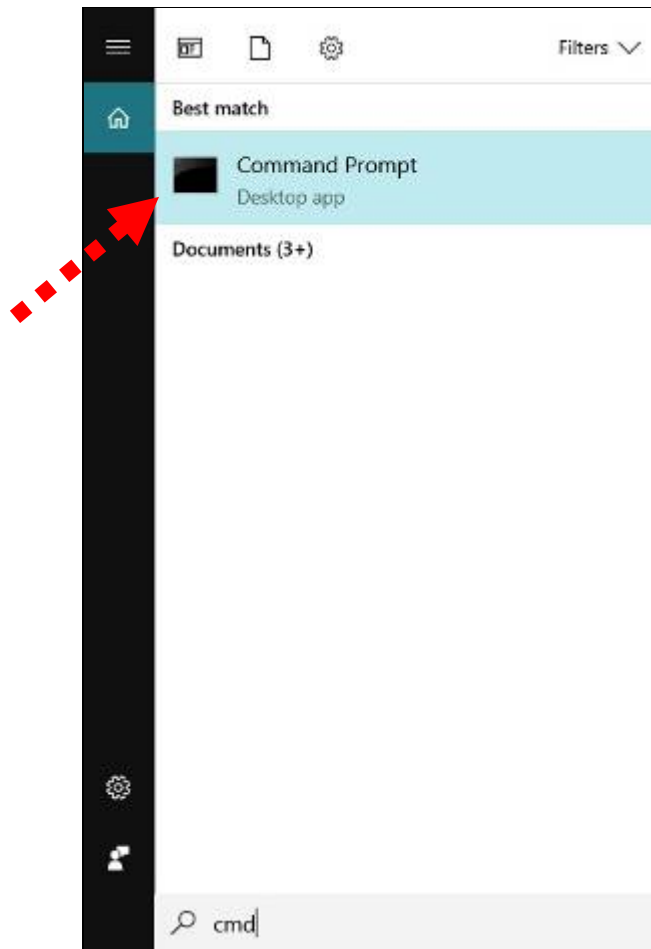


Figure 4-2 Windows Start Menu

3. Open a command prompt, type ping **192.168.1.253** and then press **Enter**.
  - ◆ If the result displayed is similar to **Figure 4-3**, it means the connection between your PC and the AP has been established well.


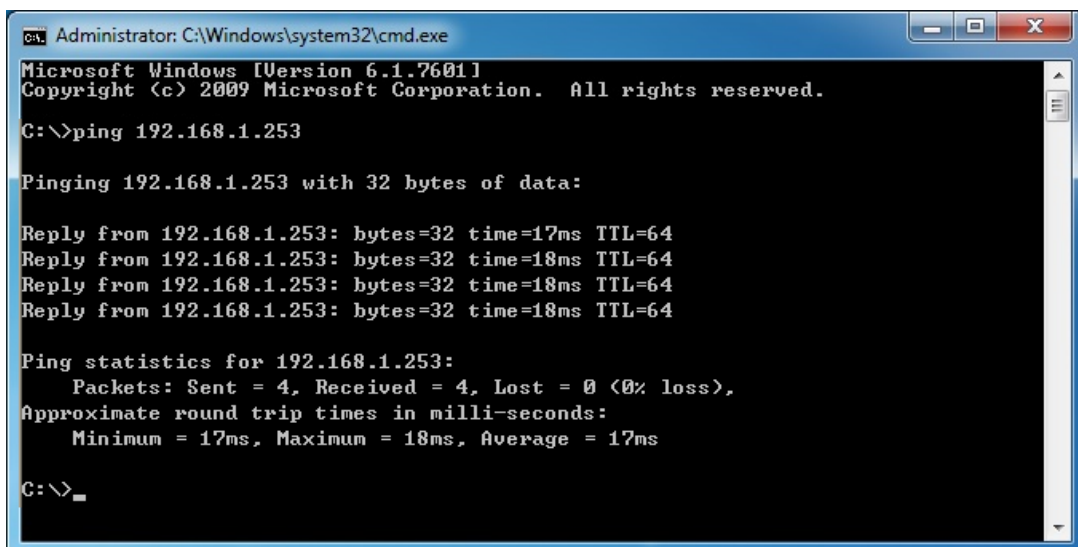


Figure 4-3 Successful Result of Ping Command



- ◆ If the result displayed is similar to **Figure 4-4**, it means the connection between your PC and the AP has failed.

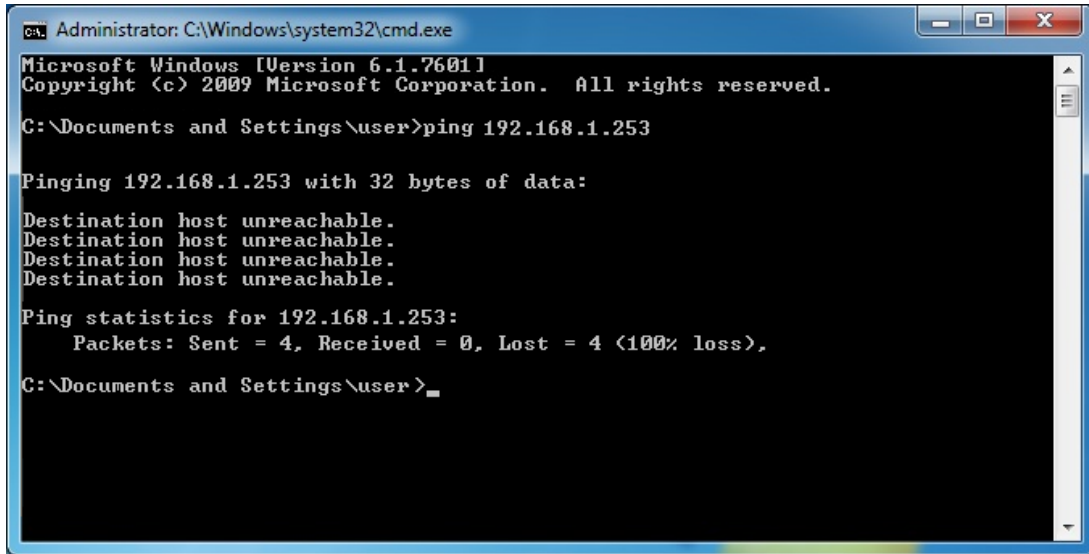

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Documents and Settings\user>ping 192.168.1.253

Pinging 192.168.1.253 with 32 bytes of data:

Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.1.253:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),

C:\Documents and Settings\user>
```

**Figure 4-4** Failed Result of Ping Command

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your AP. Some firewall software programs may block a DHCP request on newly installed adapters.

### 4.3 Starting Setup in the Web UI

It is easy to configure and manage the AP with the web browser.

**Step 1.** To access the configuration utility, open a web-browser and enter the default IP address <http://192.168.1.253> in the web address field of the browser.

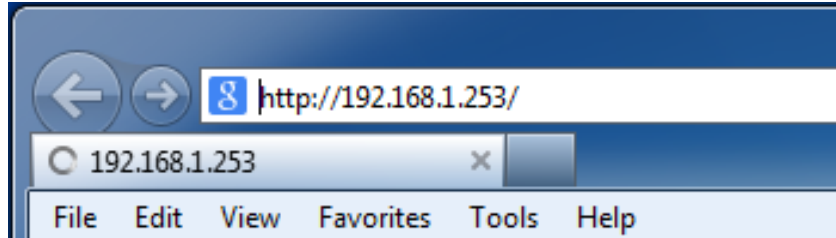


Figure 4-5 Login by Default IP Address

After a moment, a login window will appear. Enter **admin** for the password in lower case letters. Then click **LOGIN** or press the **Enter** key.



Figure 4-6 Login Window

Default IP Address: **192.168.1.253**


Default Password: **admin**



If the above screen does not pop up, it may mean that your web-browser has been set to a proxy. Go to Tools menu> Internet Options> Connections> LAN Settings on the screen that appears, uncheck **Using Proxy** and click **OK** to finish it.

# Chapter 5. Configuring the AP

This chapter delivers a detailed presentation of AP's functionalities and features 3 main items below, allowing you to manage the AP with ease. The screen shots use the WAP-252N as an example.

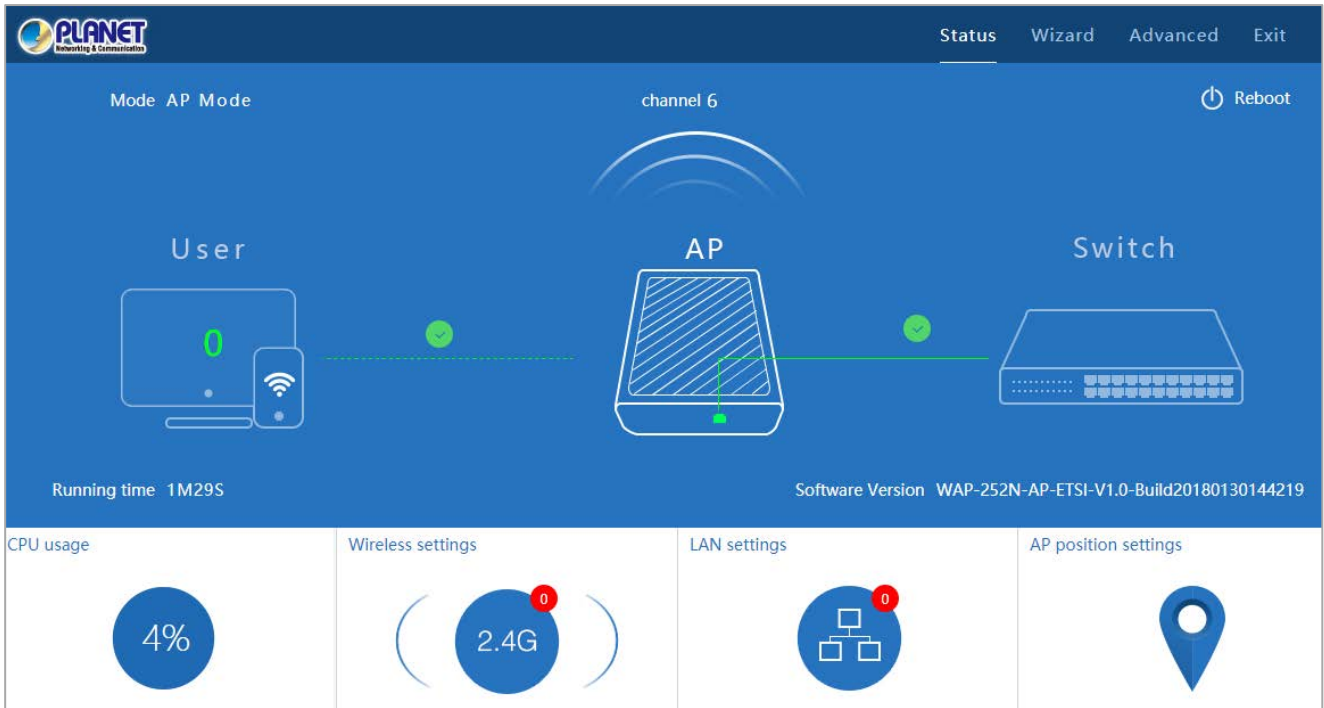


**Figure 5-1 Main Menu**

The page includes the following fields:

Object	Description
<b>CPU Usage</b>	It shows the CPU usage
<b>Wireless Settings</b>	Enter the Wireless settings to enable or disable wireless LAN
<b>LAN Settings</b>	Enter the LAN settings to change the LAN IP address.

## 5.1 Wizard

To provide maximum performance, the WAP-252N/WAP-552N can implement multiple operation modes where a multitude of applications can be had for communities, warehouses, campuses, harbors, etc.

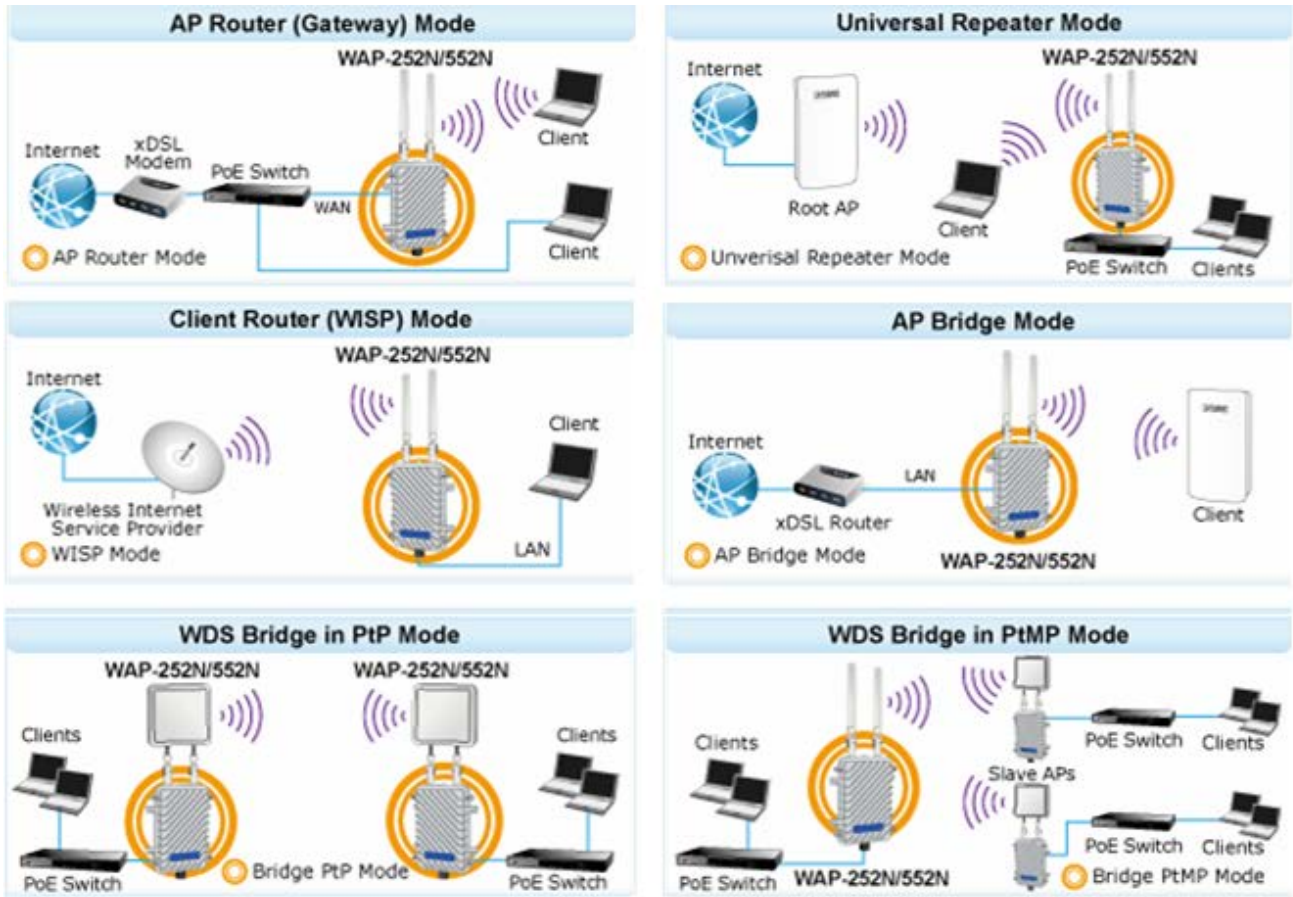

The Wizard guides you to configuring the WAP-252N/WAP-552N in a different mode, including **Gateway**, **Repeater**, **WISP**, **AP** and **Super WDS** mode.




Figure 5-2 Operation Mode



The default operation mode is **AP mode**.

## 5.2 Gateway Mode (AP Router)

- In this mode, the device is supposed to connect to internet via ADSL/Cable Modem.
- The NAT is enabled and PCs in LAN ports share the same IP to ISP through WAN port.
- The connection type can be set up on the WAN page by using PPPoE, DHCP client or static IP.

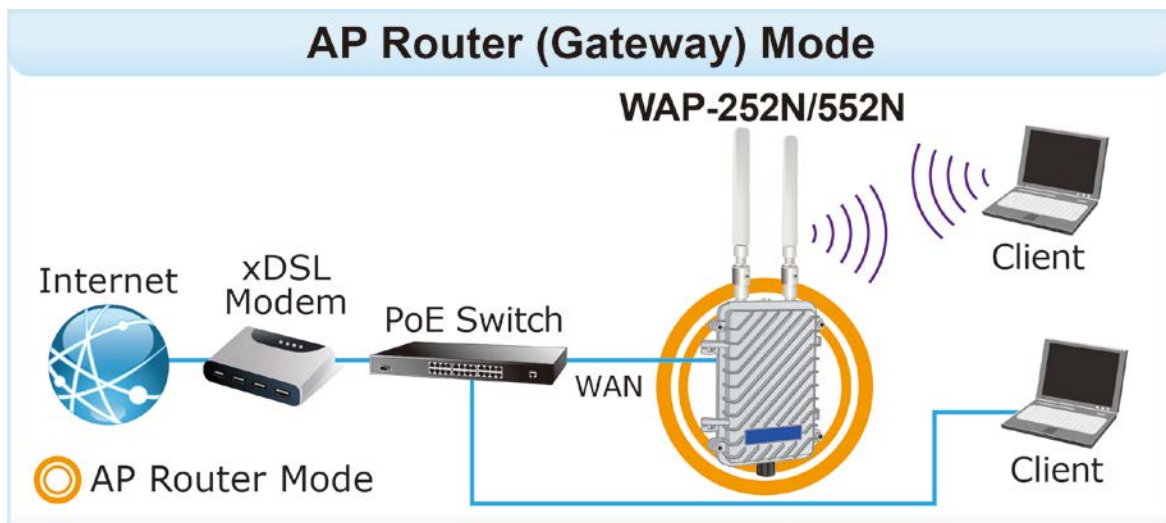

Click **“Wizard”** → **“Gateway Mode”** and the following page will be displayed. This section allows you to configure the Gateway mode.

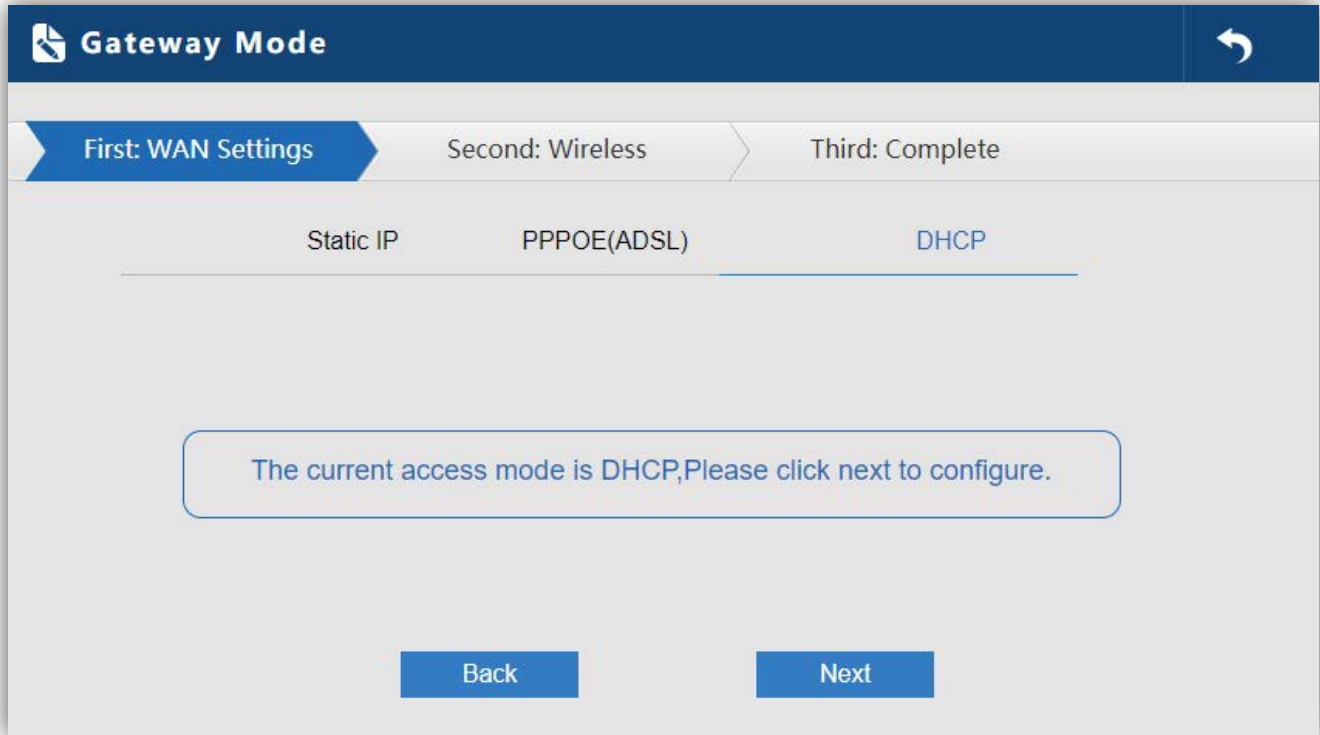


Figure 5-3 Gateway Mode

### 5.2.1 WAN Settings

#### Static IP

If your ISP offers you static IP Internet connection type, select “**Static IP**” and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.

Figure 5-4 Gateway - Static IP

The page includes the following fields:

Object	Description
IP Address	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
Subnet Mask	Enter WAN Subnet Mask provided by your ISP
Default Gateway	Enter the WAN Gateway address provided by your ISP
Primary DNS	Enter the necessary DNS address provided by your ISP

### PPPoE (ADSL)

Select **PPPOE** if your ISP is using a PPPoE connection and provide you with PPPoE user name and password info.



The screenshot shows a configuration interface with three tabs: 'Static IP', 'PPPoE(ADSL)', and 'DHCP'. The 'PPPoE(ADSL)' tab is selected and highlighted with a blue underline. Below the tabs, there are two input fields: 'PPPoE Name' and 'PPPoE Password', both of which are currently empty.

**Figure 5-5** Gateway – PPPoE (ADSL)

The page includes the following fields:

Object	Description
PPPoE Name	Enter the User Name provided by your ISP
PPPoE Password	Enter the password provided by your ISP

### DHCP

Choose “DHCP” and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

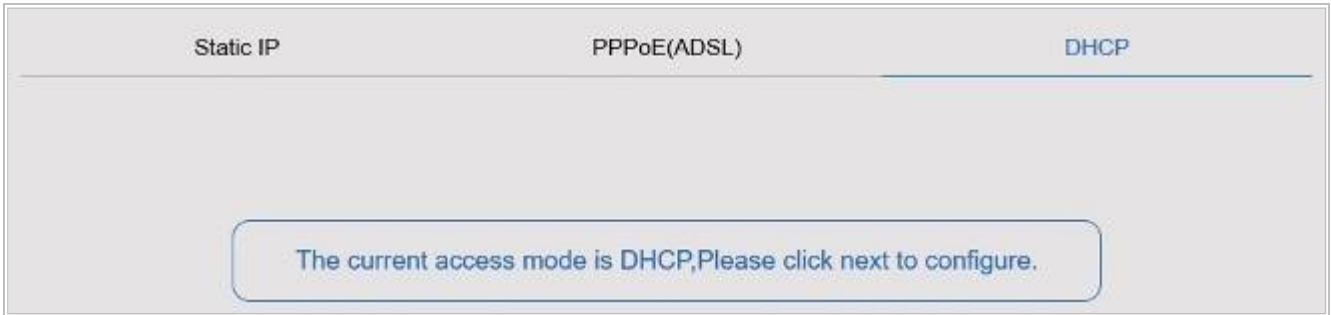


Figure 5-6 Gateway – DHCP

### 5.2.2 Wireless

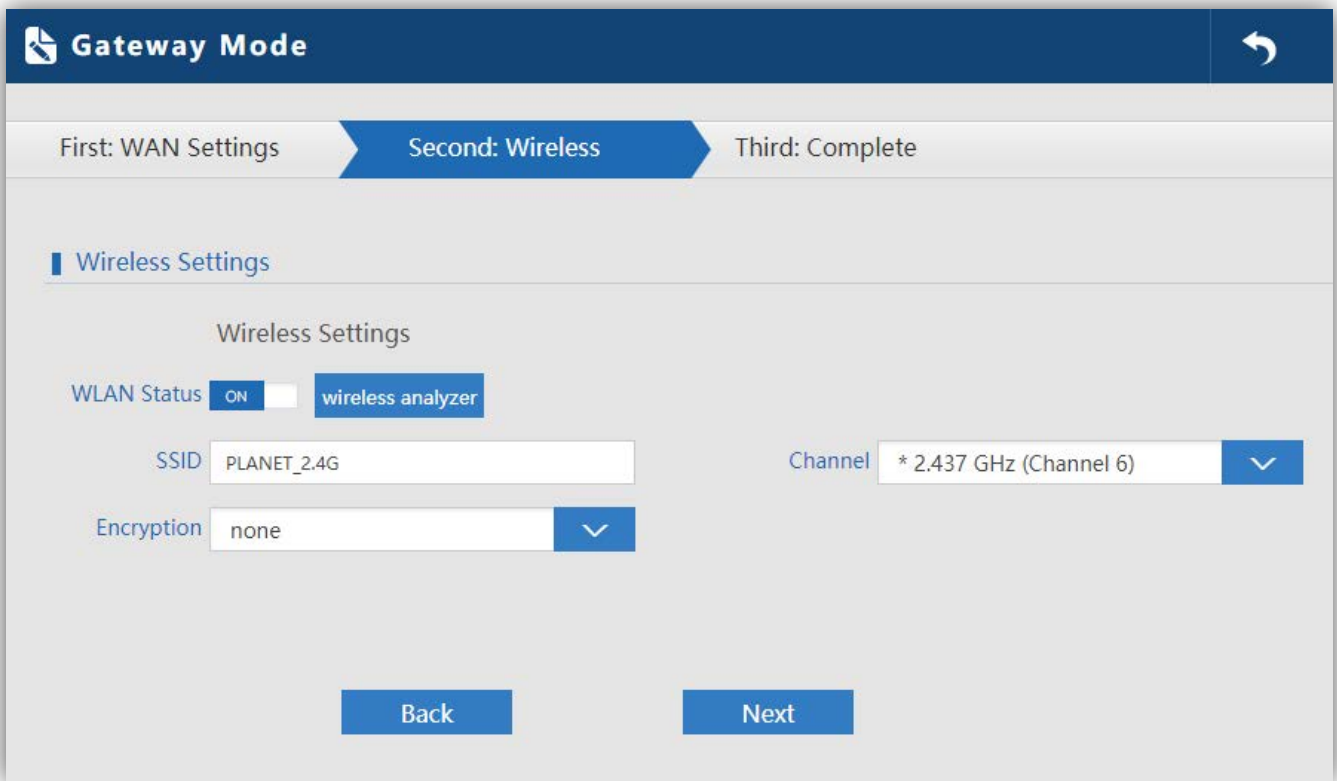


Figure 5-7 Gateway – Wireless




The page includes the following fields:

Object	Description
<b>WLAN Status</b>	Select <b>ON</b> or <b>OFF</b> to enable or disable wireless LAN.
<b>Wireless Analyzer</b>	Press the button to check your wireless environment.
<b>SSID</b>	It is the wireless network name. The default SSID is <b>PLANET_2.4G</b> or <b>PLANET_5G</b> .
<b>Channel</b>	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
<b>Encryption</b>	Select the wireless encryption. The default is <b>None</b> .

### 5.3 Repeater Mode (Universal Repeater)

In the Repeater mode, the user can access wireless AP; devices can be connected to other wireless network using the wireless. All interfaces are bridged together without NAT, firewall and all network-related functions.

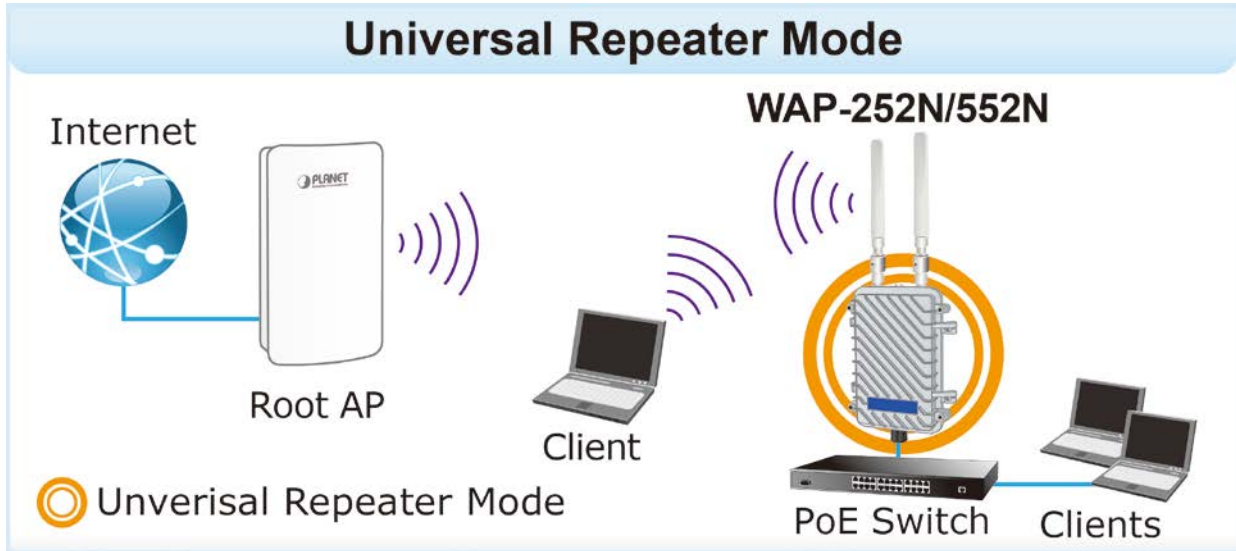

Click "Wizard" → "Repeater Mode" and the following page will be displayed. This section allows you to configure the Repeater mode.

The screenshot shows the "Repeater Mode" configuration wizard. At the top, there is a "Repeater Mode" header with a back arrow. Below the header, a progress bar shows "First: Repeater" as the active step and "Second: Complete" as the next step. The main configuration area is titled "Wireless Repeater" and contains the following fields and controls:

- Repeater SSID:** A text input field with a "Scan AP" button to its right.
- lockmac:** A checkbox that is currently unchecked.
- Authentication:** A dropdown menu set to "none".
- Band Width:** A dropdown menu set to "20MHz".
- WDS Passthrough:** A checked checkbox.

At the bottom of the configuration area, there are two buttons: "Back" and "Next".

Figure 5-8 Repeater Mode

The page includes the following fields:

Object	Description
Repeater SSID	Enter the root AP's SSID or press "Scan AP" to select
Lockmac	Check to lock the root AP' MAC address
Authentication	Select the wireless encryption of root AP
Bandwidth	Select the operating channel width, "20MHz" or "40MHz"
WDS Passthrough	Check to enable WDS to pass through if the root AP is the same model as client

Press **Scan AP** to show the root AP that you need to repeat and press **Choice** to select the AP.

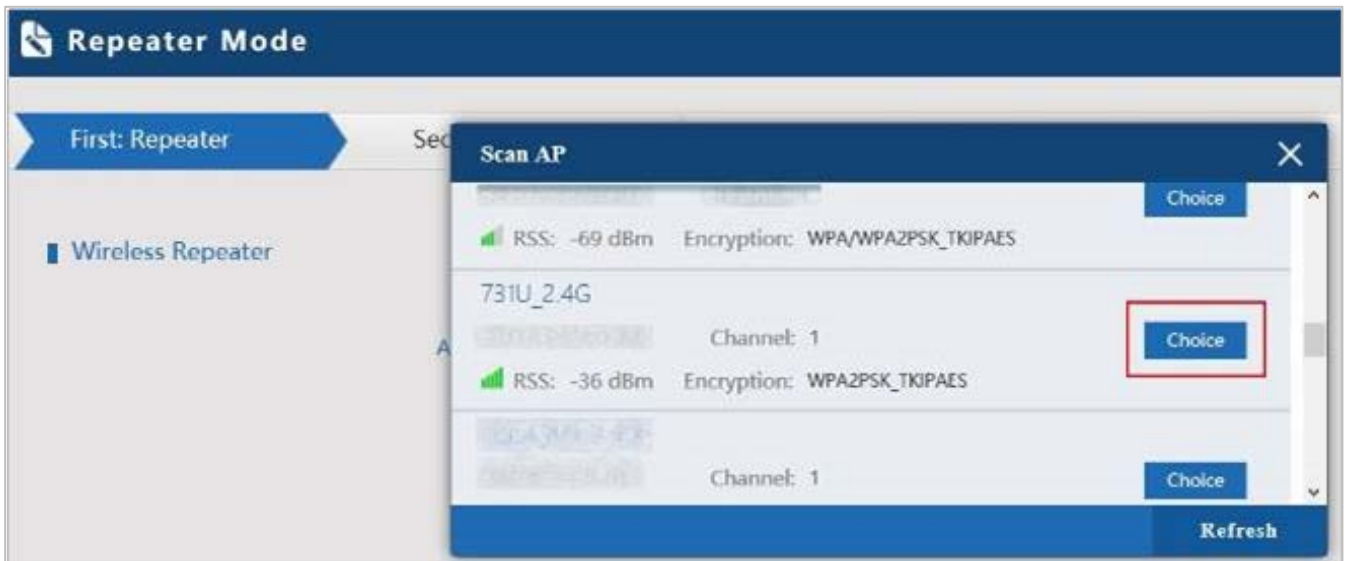


Figure 5-9 Repeater Mode - Scan AP

Select the authentication and bandwidth which are the same as root AP to establish the connection.


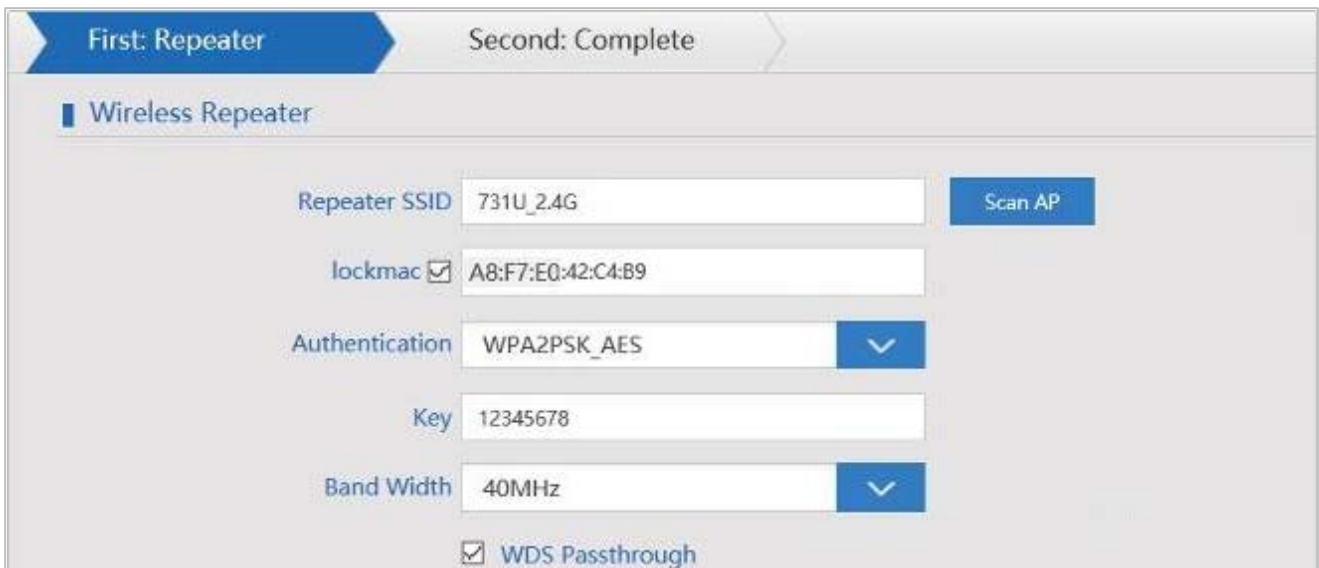


Figure 5-10 Repeater Mode - Select AP

## 5.4 WISP Mode (Client Router)

- In WISP mode, all Ethernet ports are bridged together and wireless client will connect ISP access point.
- The NAT is enabled and PCs in Ethernet port share the same IP to ISP through wireless LAN.
- User must set the wireless to client mode first and connect to the ISP AP in Site-Survey page.
- The connection type can be set up on the WAN page by using PPPoE, DHCP client and static IP.

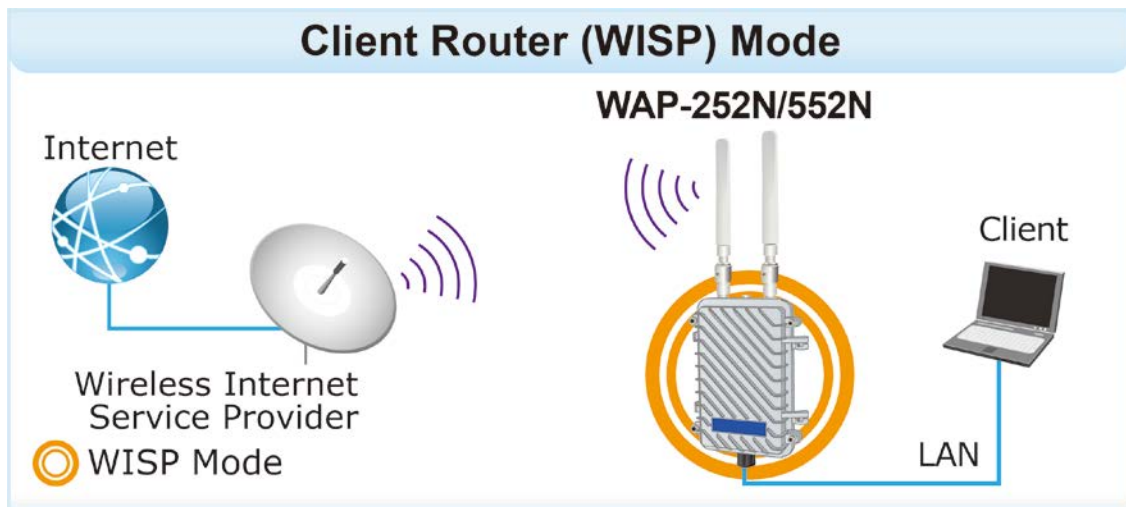

Click "Wizard" → "WISP Mode" and the following page will be displayed. This section allows you to configure the WISP mode.


The screenshot shows the "WISP Mode" configuration wizard. The title bar reads "WISP Mode" with a back arrow on the right. Below the title bar, there are three steps: "First: Repeater" (highlighted in blue), "Second: WAN", and "Third: Complete". Under the "First: Repeater" step, the "Wireless Repeater" section is active. It contains the following fields and controls:

- "Repeater SSID" text input field with a "Scan AP" button to its right.
- "lockmac" checkbox, which is currently unchecked.
- "Authentication" dropdown menu set to "none".
- "Back" and "Next" buttons at the bottom.

Figure 5-11 WISP Mode

The page includes the following fields:

Object	Description
Repeater SSID	Enter the root AP's SSID or press "Scan AP" to select
Lockmac	Check to lock the root AP' MAC address
Authentication	Select the wireless encryption of root AP

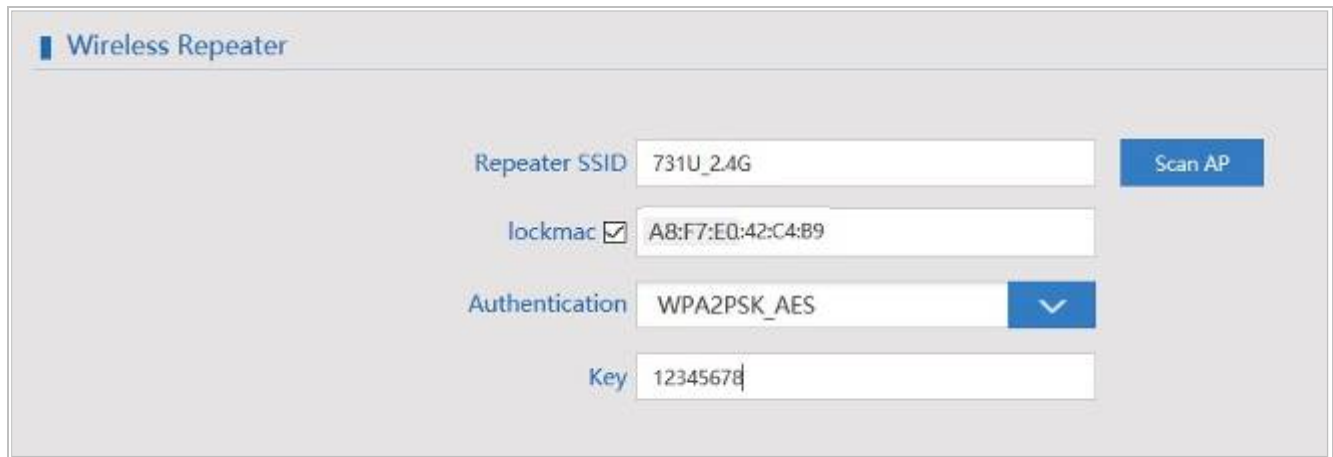

Wireless Repeater

Repeater SSID: 731U\_2.4G Scan AP

lockmac  A8:F7:E0:42:C4:B9

Authentication: WPA2PSK\_AES

Key: 12345678

Figure 5-12 WISP Mode – Select AP




Static IP      PPPoE(ADSL)      DHCP

The current access mode is DHCP, Please click next to configure.

Figure 5-13 WISP Mode – Select WAN type

## 5.5 AP Mode (AP Bridge)

- In AP mode, the AP wireless interface and cable interface are bridging together.
- Without NAT, firewall and all network-related functions

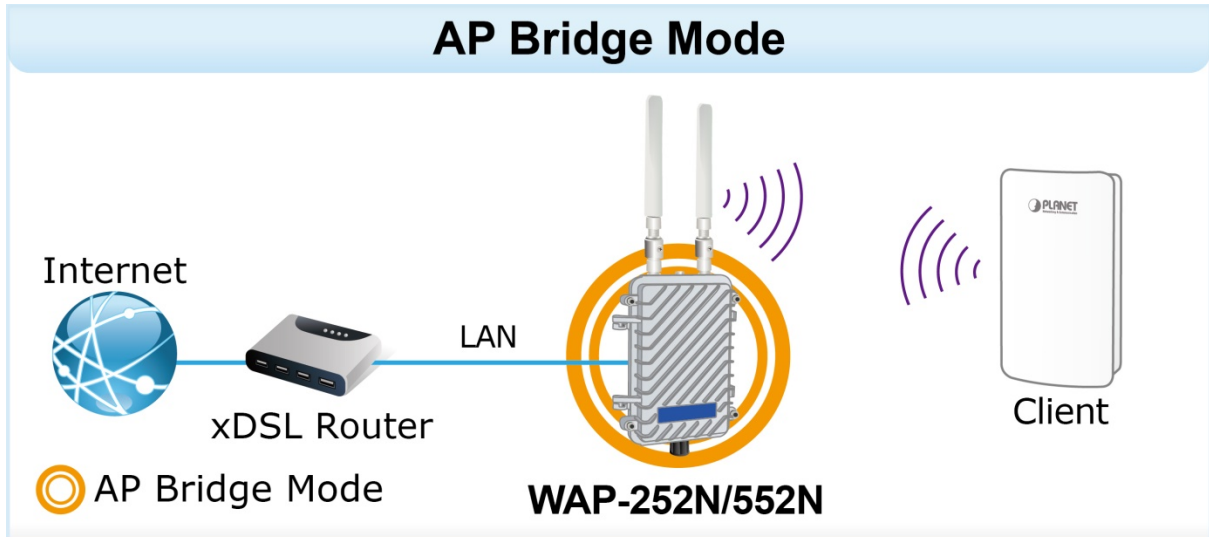

Click "Wizard" → "AP Mode" and the following page will be displayed. This section allows you to configure the AP mode.

The screenshot shows the "AP Mode" configuration wizard. The interface has a dark blue header with "AP Mode" and a back arrow. Below the header, there are three steps: "First: Wireless" (highlighted in blue), "Second: LAN", and "Third: Complete". Under the "Wireless Settings" section, there are several fields: "WLAN Status" is set to "ON" with a "wireless analyzer" button; "SSID" is "PLANET\_2.4G"; "Channel" is "\* 2.437 GHz (Channel 6)"; and "Encryption" is "none". Below this is the "Location Information" section with "AP Name" and "AP Location" input fields. At the bottom, there are "Back" and "Next" buttons.

Figure 5-14 AP Mode

The page includes the following fields:

Object	Description
WLAN Status	Select "ON" or "OFF" to enable or disable wireless LAN
Wireless Analyzer	Press the button to check your wireless environment
SSID	It is the wireless network name. The default SSID is "PLANET_2.4G" or "PLANET_5G"
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
Encryption	Select the wireless encryption. The default is "None"
AP Name	Enter the name of AP
AP Location	Enter the location of AP

Enter the LAN IP address.

First: Wireless
Second: LAN
Third: Complete



LAN settings

IP

Subnet Mask

## 5.6 Super WDS Mode (WDS Bridge in PtP/PtMP)

- In Super WDS mode, the wireless interface can be connected with other wireless AP through WDS, and the wireless interface and cable interface.
- Without NAT, firewall and all network-related functions

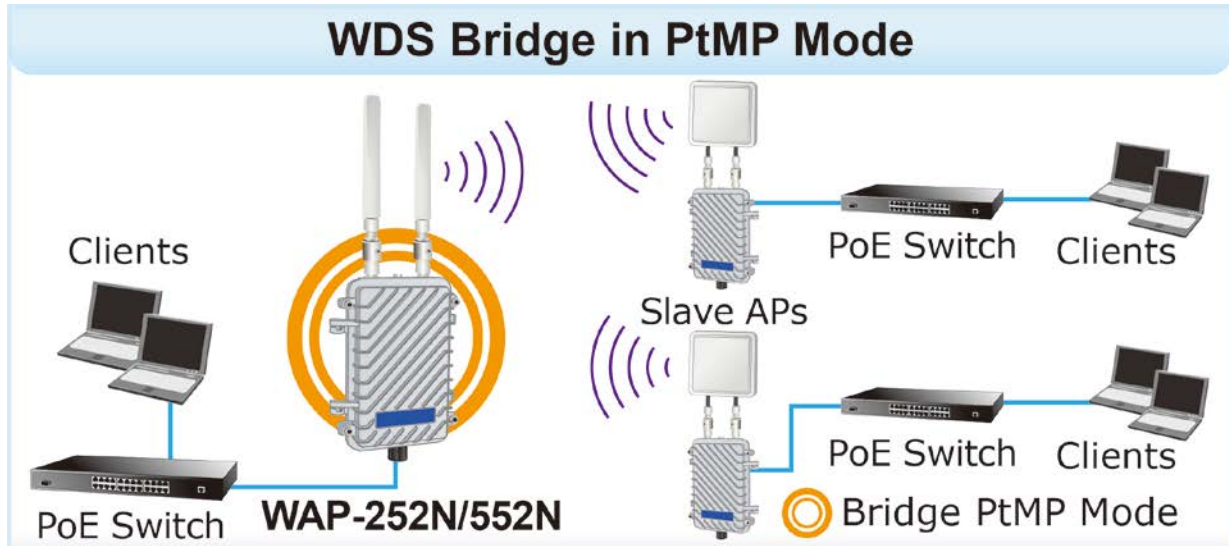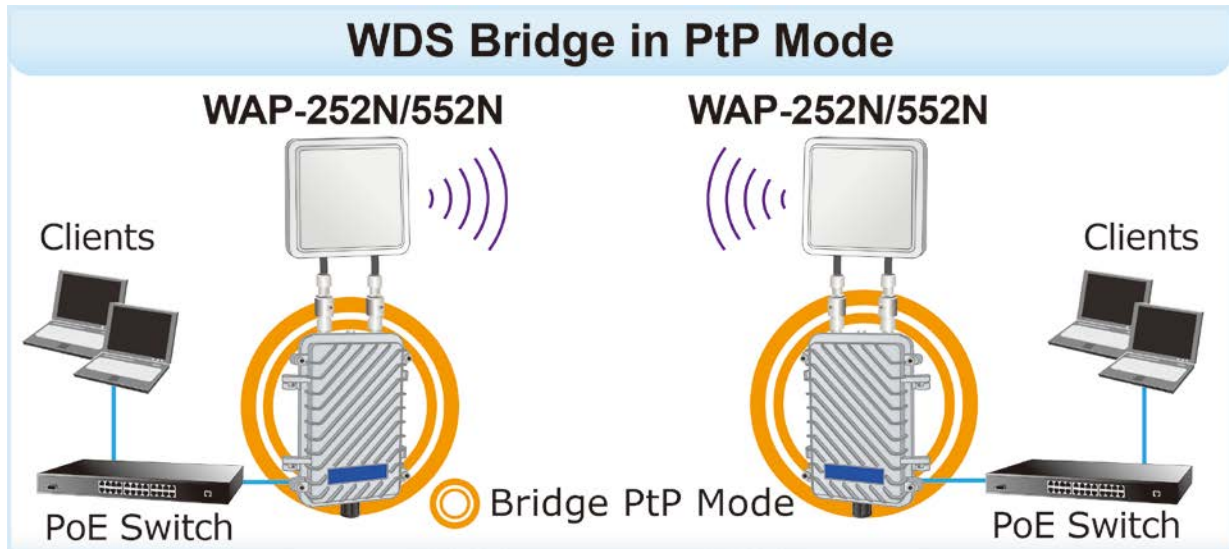



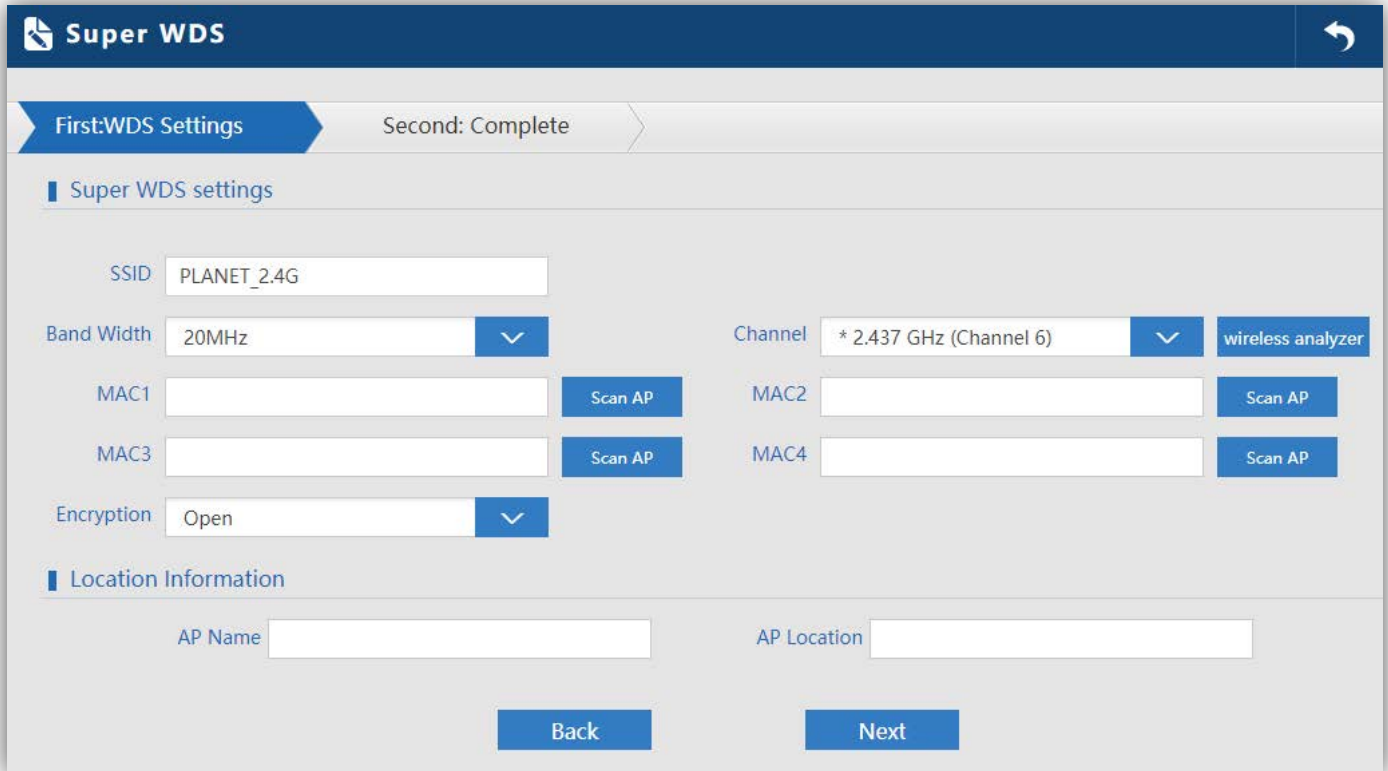


Figure 5-15 Super WDS Mode

The page includes the following fields:

Object	Description
SSID	It is the wireless network name. The default SSID is “PLANET_2.4G” or “PLANET_5G”
Bandwidth	Select the operating channel width, “20MHz” or “40MHz”
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
MAC	Enter the MAC address of slave AP
Encryption	Select the wireless encryption. The default is “None”
AP Name	Enter the name of AP
AP Location	Enter the location of AP

AP1 enters the MAC address of AP2. And AP2 enters the MAC address of AP1. Then select the same Channel to establish the connection.

Super WDS settings

SSID	PLANET_2.4G				
Band Width	40MHz	▼	Channel	* 2.437 GHz (Channel 6)	▼ wireless analyzer
MAC1	A8:F7:E0:11:22:33	MAC of AP2	Scan AP	MAC2	Scan AP
MAC3		Scan AP	MAC4		Scan AP
Encryption	Open	▼			

Figure 5-16 Super WDS Mode – AP1

Super WDS settings

SSID	PLANET_2.4G				
Band Width	40MHz	▼	Channel	* 2.437 GHz (Channel 6)	▼ wireless analyzer
MAC1	A8:F7:E0:44:55:66	MAC of AP1	Scan AP	MAC2	Scan AP
MAC3		Scan AP	MAC4		Scan AP
Encryption	Open	▼			

Figure 5-17 Super WDS Mode – AP2

## 5.7 Advanced

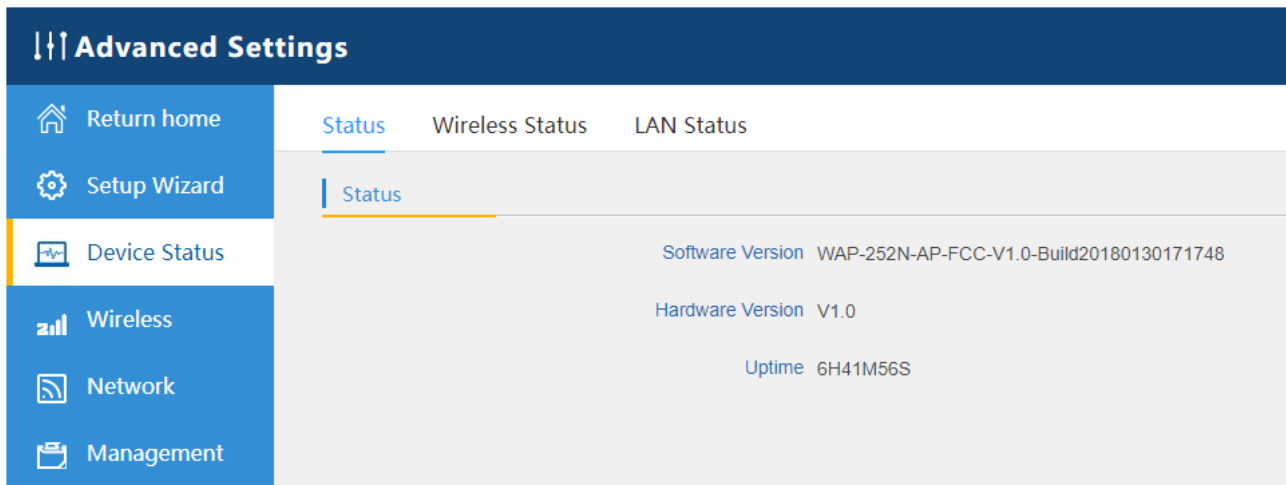


Figure 5-18 Advanced

### 5.7.1 Device Status

#### 5.7.1.1. Status

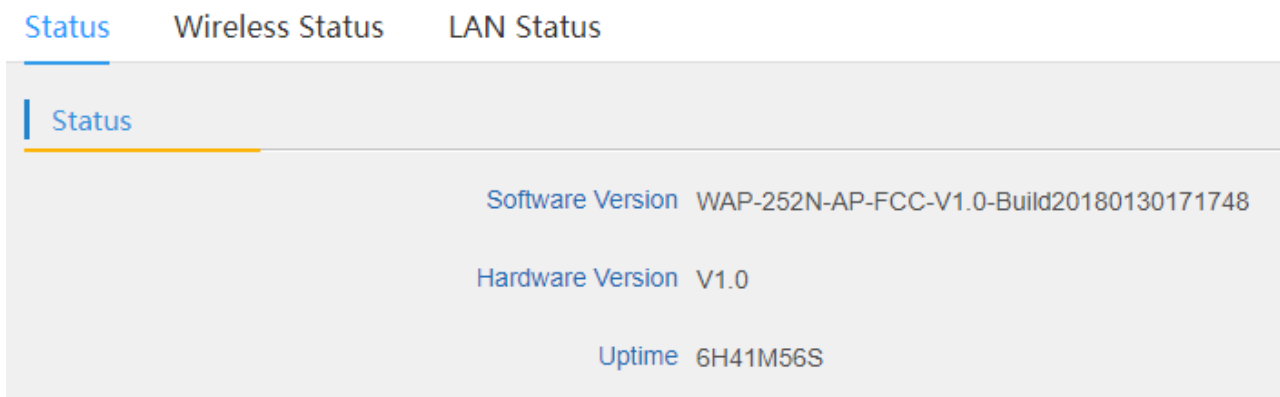


Figure 5-19 Status

The page includes the following fields:

Object	Description
Software Version	It shows the firmware version of AP
Hardware Version	It shows the hardware version of AP
Uptime	It shows the AP uptime

### 5.7.1.2. Wireless Status

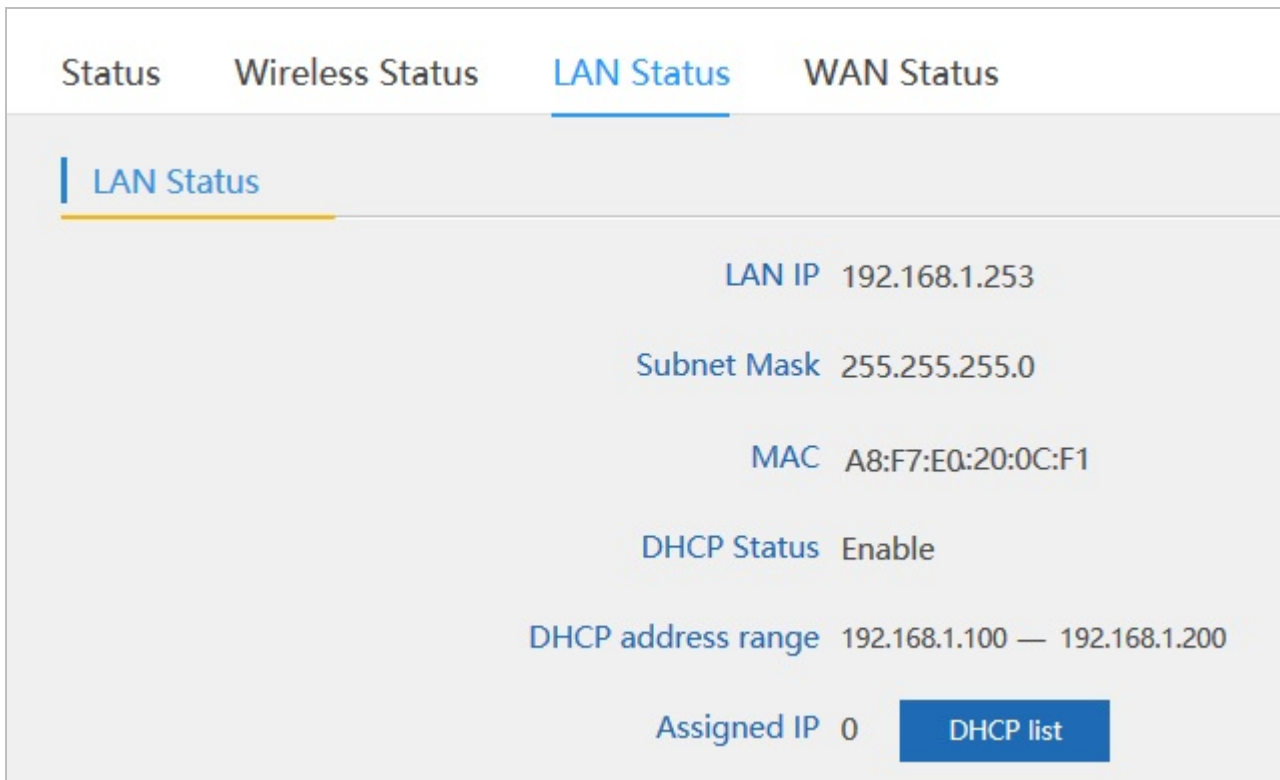


Figure 5-20 Wireless Status

The page includes the following fields:

Object	Description
<b>Wireless Status</b>	It shows the wireless status is <b>Enable</b> or <b>Disable</b>
<b>SSID</b>	It shows the SSID of the AP. Default is <b>PLANET_2.4G</b> or <b>PLANET_5G</b>
<b>MAC</b>	It shows the MAC address of the AP
<b>Channel</b>	It shows the channel of the AP. Default 2.4GHz is channel 6 and 5GHz is channel 36.
<b>Encryption</b>	It shows the wireless encryption
<b>Connected Users</b>	It shows the wireless connected users

### 5.7.1.3. LAN Status



The screenshot displays the LAN Status configuration page. At the top, there are navigation tabs: Status, Wireless Status, LAN Status (which is underlined in blue), and WAN Status. Below the tabs, the LAN Status section is highlighted with a blue vertical bar and the text 'LAN Status'. The main content area shows the following information:

- LAN IP: 192.168.1.253
- Subnet Mask: 255.255.255.0
- MAC: A8:F7:E0:20:0C:F1
- DHCP Status: Enable
- DHCP address range: 192.168.1.100 — 192.168.1.200
- Assigned IP: 0
- A blue button labeled 'DHCP list' is located to the right of the Assigned IP field.

Figure 5-21 LAN Status

The page includes the following fields:

Object	Description
LAN IP	It shows the IP of the AP. Default is <b>192.168.1.253</b>
Subnet Mask	It shows the subnet mask of the AP. Default is <b>255.255.255.0</b>
MAC	It shows the MAC address of the LAN port
DHCP Status	It shows the DHCP is <b>Enable</b> or <b>Disable</b> if selected to <b>Gateway mode</b> or <b>WISP mode</b>
DHCP Address Range	It shows the DHCP range. Default is 192.168.1.100 to 192.168.1.200
Assigned IP	It shows the client assigned IP address by DHCP server

#### 5.7.1.4. WAN Status

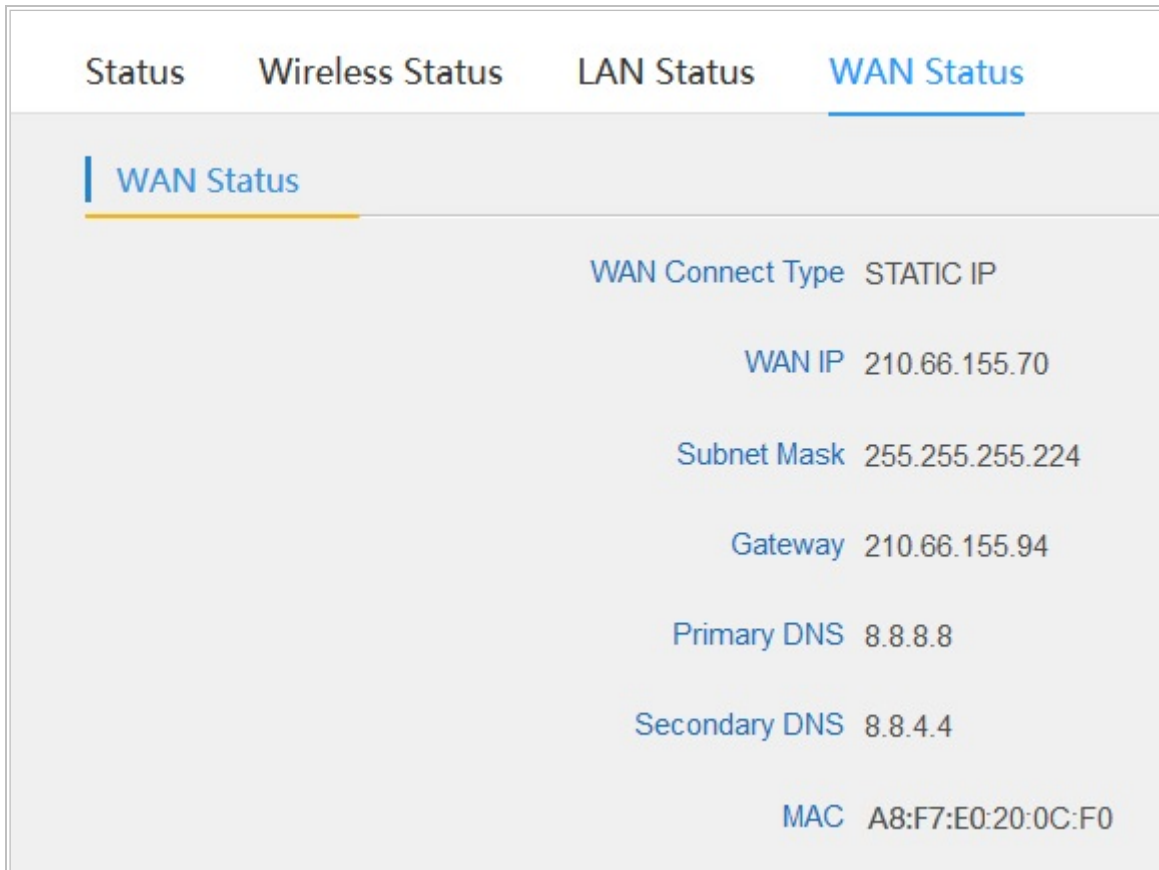


Figure 5-22 WAN Status

The page includes the following fields:

Object	Description
<b>WAN Connection Type</b>	It shows WAN connection type, <b>PPPoE</b> , <b>DHCP</b> or <b>STATIC IP</b>
<b>WAN IP</b>	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
<b>Subnet Mask</b>	Enter WAN Subnet Mask provided by your ISP
<b>Gateway</b>	Enter the WAN Gateway address provided by your ISP
<b>Primary DNS</b>	Enter the necessary DNS address provided by your ISP
<b>Secondary DNS</b>	Enter the secondary DNS address provided by your ISP
<b>MAC</b>	It shows the MAC address of WAN port

## 5.7.2 Wireless

### 5.7.2.1. Basic Settings

Basic Settings
Virtual AP
Access Control
Advanced Settings

**Wireless Basic Settings**

Wireless Status  ON  Disable wireless analyzer

SSID

Broadcast SSID  Disable  Enable

WMM  Disable  Enable

**Channel**

Band Width  v

Channel  v

**Authentication**

Encryption  v

Apply

Figure 5-23 Basic Settings

The page includes the following fields:

Object	Description
<b>Wireless Status</b>	It shows the wireless status is <b>Enable</b> or <b>Disable</b>
<b>SSID</b>	It shows the SSID of the AP. Default is <b>PLANET_2.4G</b> or <b>PLANET_5G</b>
<b>Broadcast SSID</b>	Select <b>Enable</b> or <b>Disable</b> the SSID
<b>WMM</b>	It supports Wi-Fi multimedia and default is enabled
<b>Bandwidth</b>	It displays operating channel width which is <b>20MHz</b> or <b>40MHz</b>
<b>Channel</b>	It shows the channel of the AP. Default 2.4GHz is <b>Channel 6</b> and 5GHz is <b>Channel 36</b> .
<b>Encryption</b>	It shows the wireless encryption

### 5.7.2.2. Virtual AP

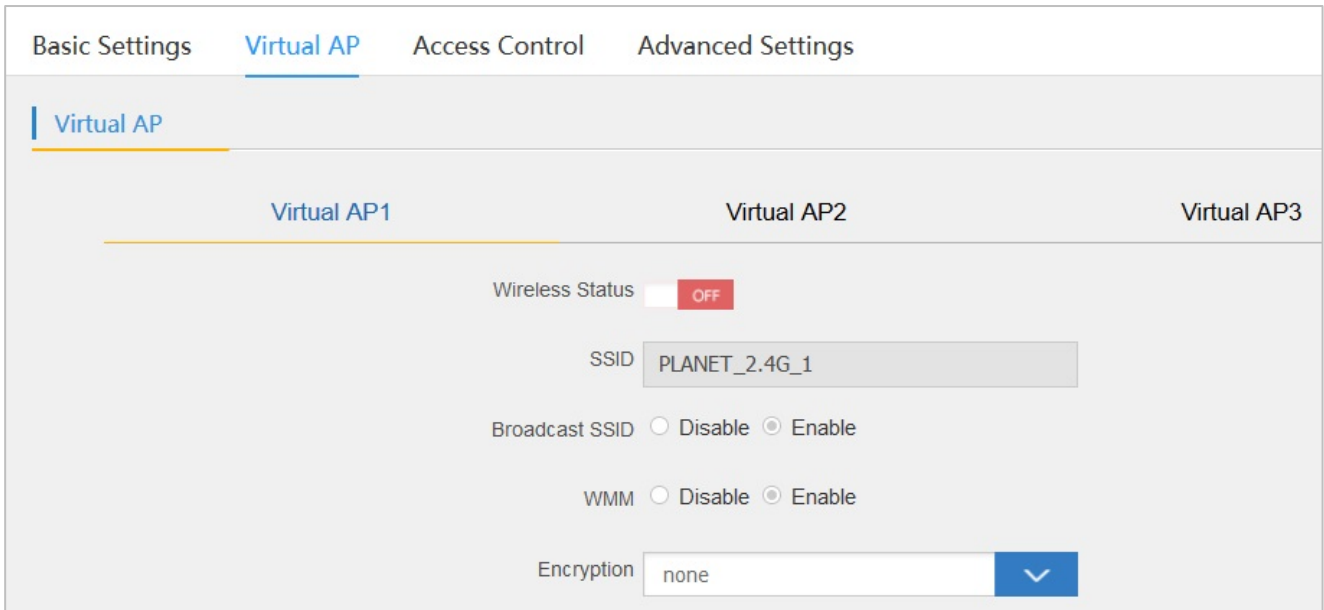


Figure 5-24 Virtual AP

The page includes the following fields:

Object	Description
Wireless Status	It shows the wireless status is <b>ON</b> or <b>OFF</b>
SSID	It shows the SSID of the AP. Default is <b>PLANET_2.4G_1</b> or <b>PLANET_5G_1</b>
Broadcast SSID	Select <b>Enable</b> or <b>Disable</b> the SSID
WMM	It supports Wi-Fi multimedia and default is enabled
Encryption	It shows the wireless encryption

### 5.7.2.3. Access Control

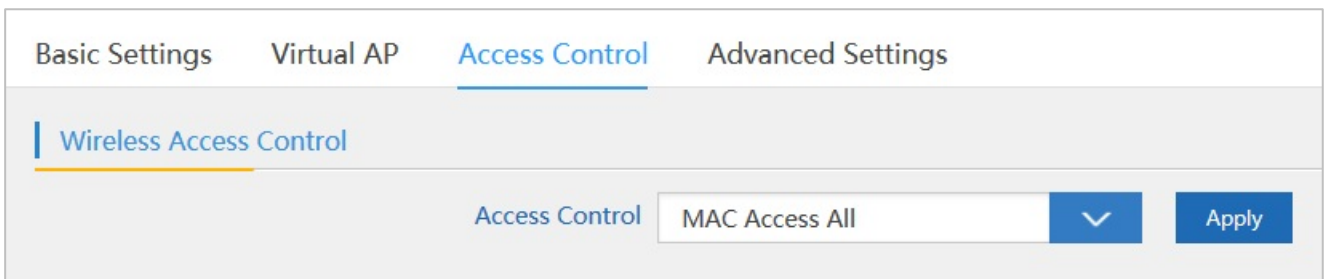


Figure 5-25 Access Control - Access All



Basic Settings   Virtual AP   **Access Control**   Advanced Settings

Wireless Access Control

Access Control

MAC

Access Control List    Association STA list

<input type="checkbox"/> ALL	MAC

<input type="checkbox"/> ALL	MAC

**Figure 5-26** Access Control – Allow Listed

The page includes the following fields:

Object	Description
<b>Access Control</b>	Select <b>MAC Access All</b> , <b>Allow Listed</b> or <b>Deny Listed</b>
<b>MAC</b>	Enter the MAC address that you need to allow or deny to access
<b>Clear</b>	Delete the MAC address that you select

### 5.7.2.4. Advanced Settings

Basic Settings
Virtual AP
Access Control
Advanced Settings

Advanced Settings

Regional

▼

MODE

▼

RF Output Power

▼

Packet Threshold

(256-2346)

Beacon interval

(100-1024)ms

MAX User

(Range 0-64 0 not limited)

Coverage Threshold

(-95dBm~-65dBm)

Distance(0 Meter-20000 Meter)

Aggregation

Short GI

User isolation

Figure 5-27 Advanced Settings

The page includes the following fields:

Object	Description
<b>Regional</b>	It shows <b>FCC</b> or <b>ETSI</b> depending on the firmware.
<b>Mode</b>	Select <b>802.11N/G</b> or <b>802.11B/G</b> in 2.4G AP Select <b>802.11A</b> or <b>802.11AN</b> in 5G AP
<b>RF Output Power</b>	The range of transmit power is <b>100%, 75%, 50%, 25%</b> or <b>12.5%</b> . In case of shortening the distance and the coverage of the wireless network, input a smaller value to reduce the radio transmission power.
<b>Packet Threshold</b>	When the length of a data packet exceeds this value, the router will send an RTS frame to the destination wireless node, and the latter will reply with a CTS frame, and thus they are ready to communicate. The default value is <b>2346</b> .
<b>Beacon Interval</b>	Set beacon interval, the value range is from 100 to 1024. The default value is <b>100</b> .
<b>Maximum Users</b>	The maximum users are <b>64</b> .
<b>Coverage Threshold</b>	The coverage threshold is to limit the weak signal of clients occupying session. The default is -95dBm.
<b>Distance</b>	Select a specified distance of the two nodes.
<b>Aggregation</b>	A part of the 802.11n standard that allows sending multiple frames per single access to the medium by combining frames together into one larger frame. It creates the larger frame by combining smaller frames


---

<b>Object</b>	<b>Description</b>
	with the same physical source, destination end points, and traffic class (QoS) into one large frame with a common MAC header
<b>Short GI</b>	Guard intervals are used to ensure that distinct transmissions do not interfere with one another.
<b>User Isolation</b>	Enable it to isolate each connected wireless client so that they cannot access mutually.

---


### 5.7.3 Network

#### 5.7.3.1. LAN Settings

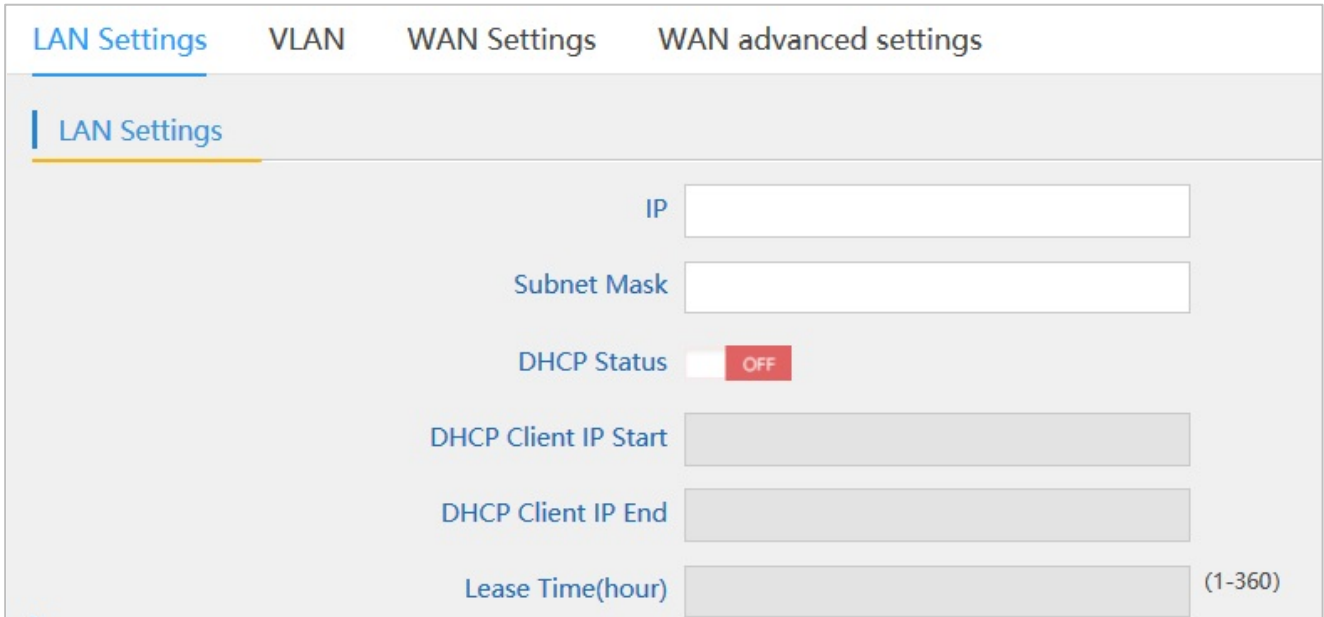

The screenshot shows the LAN Settings configuration page. At the top, there are tabs for 'LAN Settings', 'VLAN', 'WAN Settings', and 'WAN advanced settings'. The 'LAN Settings' tab is selected. Below the tabs, there are several input fields: 'IP', 'Subnet Mask', 'DHCP Status' (a toggle switch currently set to 'OFF'), 'DHCP Client IP Start', 'DHCP Client IP End', and 'Lease Time(hour)' (with a range of 1-360). The 'DHCP Status' is currently turned off.

Figure 5-28 LAN Settings

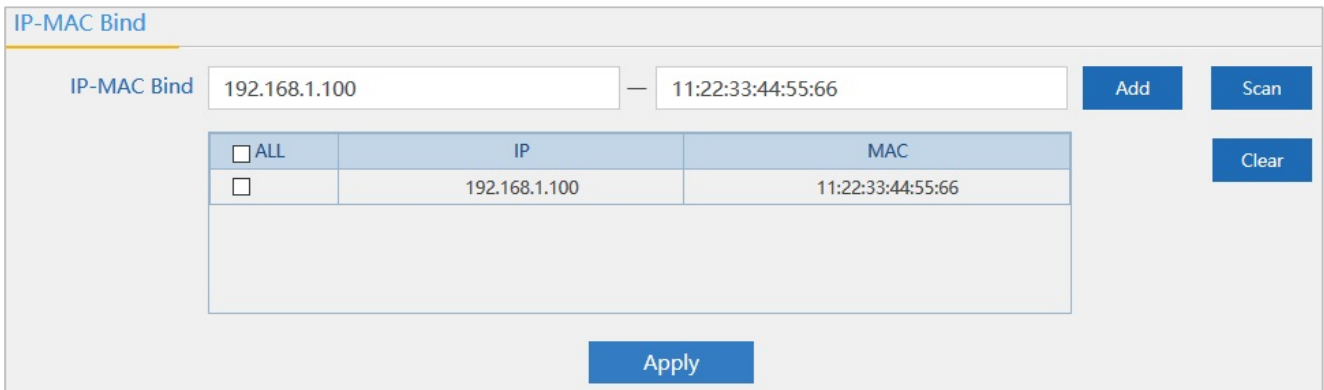

The screenshot shows the IP-MAC Bind configuration page. At the top, there is a tab labeled 'IP-MAC Bind'. Below the tab, there are two input fields for IP and MAC addresses, with 'Add' and 'Scan' buttons to the right. Below these fields is a table with columns for 'ALL', 'IP', and 'MAC'. The table contains one entry with an unchecked checkbox, IP '192.168.1.100', and MAC '11:22:33:44:55:66'. There are 'Clear' and 'Apply' buttons at the bottom of the page.

Figure 5-29 IP-MAC Bind

The page includes the following fields:

Object	Description
<b>IP</b>	Enter an IP address of LAN.
<b>Subnet Mask</b>	Enter a subnet mask of LAN.
<b>DHCP Status</b>	Select <b>ON</b> or <b>OFF</b> to enable or disable DHCP server.
<b>DHCP Client IP Start</b>	Enter the starting IP address for the DHCP server's IP assignment.
<b>DHCP Client IP End</b>	Enter the ending IP address for the DHCP server's IP assignment.
<b>Lease Time (hour)</b>	Select the time for using one assigned IP from the DHCP server. After the lease time, the AP automatically assigns new IP addresses to all connected clients.
<b>Add</b>	Press to add the IP and MAC address.
<b>Scan</b>	Scan the client list.
<b>Clear</b>	Delete the IP and MAC address that you select.

### 5.7.3.2. VLAN

LAN Settings
VLAN
WAN Settings
WAN advanced settings

VLAN

VLAN-ID(3-4094)	AP	VAP1	VAP2	VAP3
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 5-30 VLAN

The page includes the following fields:

Object	Description
<b>VLAN ID</b>	Enter the VLAN ID from 3 to 4094.
<b>AP</b>	Select AP or VAP included in the VLAN.

### 5.7.3.3. SNMP

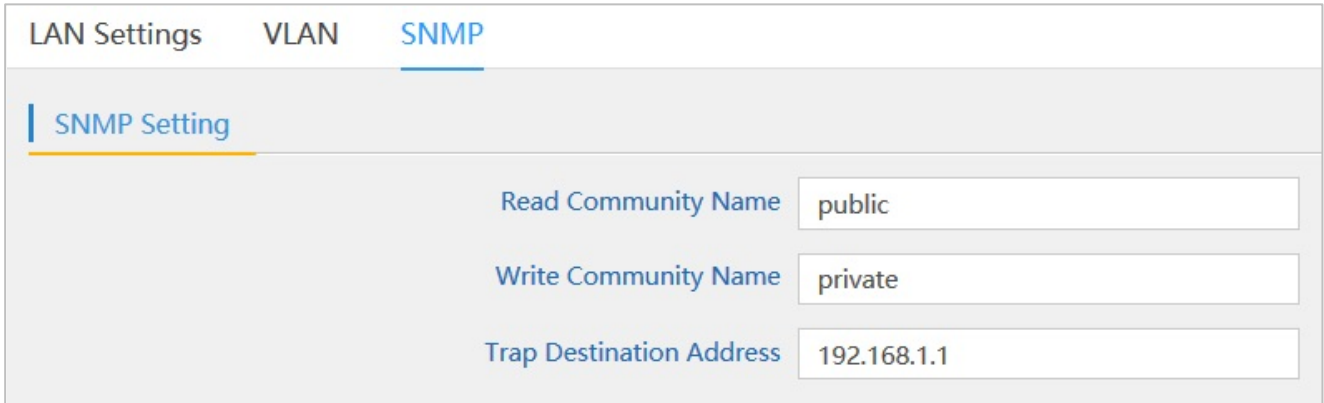


Figure 5-31 SNMP

The page includes the following fields:

Object	Description
Read Community	Enter the read community, default is <b>public</b> .
Write Community	Enter the write community, default is <b>private</b> .
Trap Destination Address	Enter the SNMP trap IP address; default is <b>192.168.1.1</b> .

### 5.7.3.4. WAN Settings

#### Static IP

If your ISP offers you static IP Internet connection type, select “**Static IP**” and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.

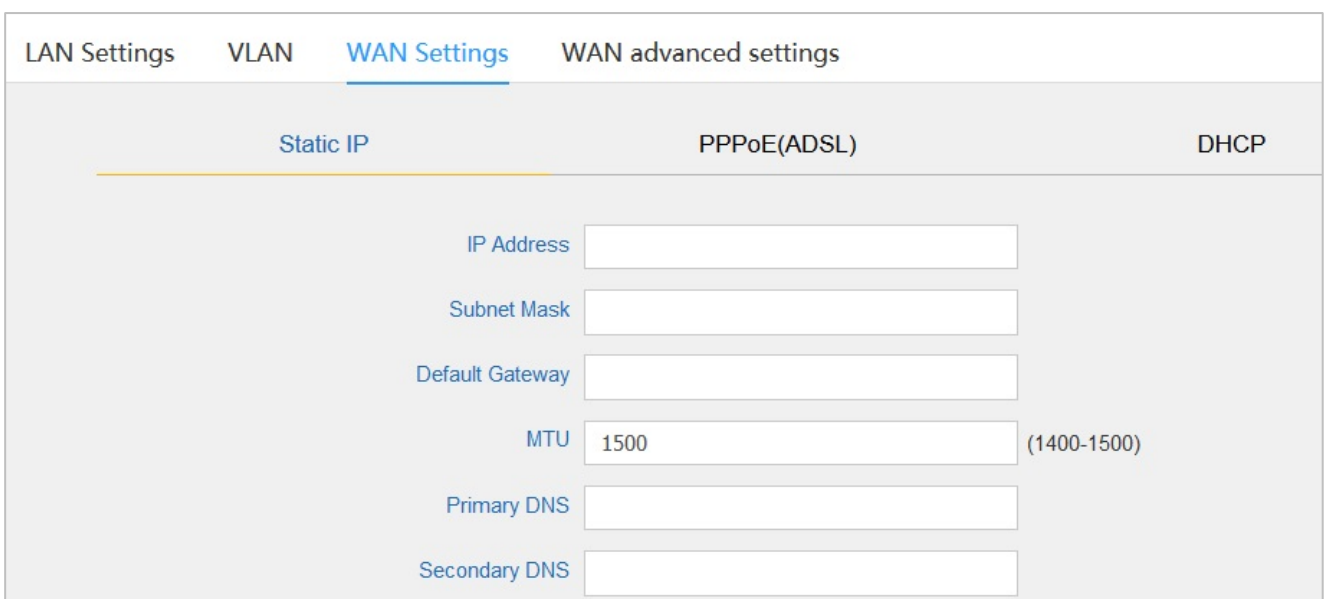



Figure 5-32 Static IP

The page includes the following fields:

Object	Description
IP Address	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear.
Subnet Mask	Enter WAN Subnet Mask provided by your ISP.
Default Gateway	Enter the WAN Gateway address provided by your ISP.
MTU	Maximum Transmission Unit. Default is 1500.
Primary DNS	Enter the necessary DNS address provided by your ISP.
Secondary DNS	Enter the secondary DNS address provided by your ISP.

**PPPoE (ADSL)**

Select **PPPOE** if your ISP is using a PPPoE connection and provide you with PPPoE user name and password info.

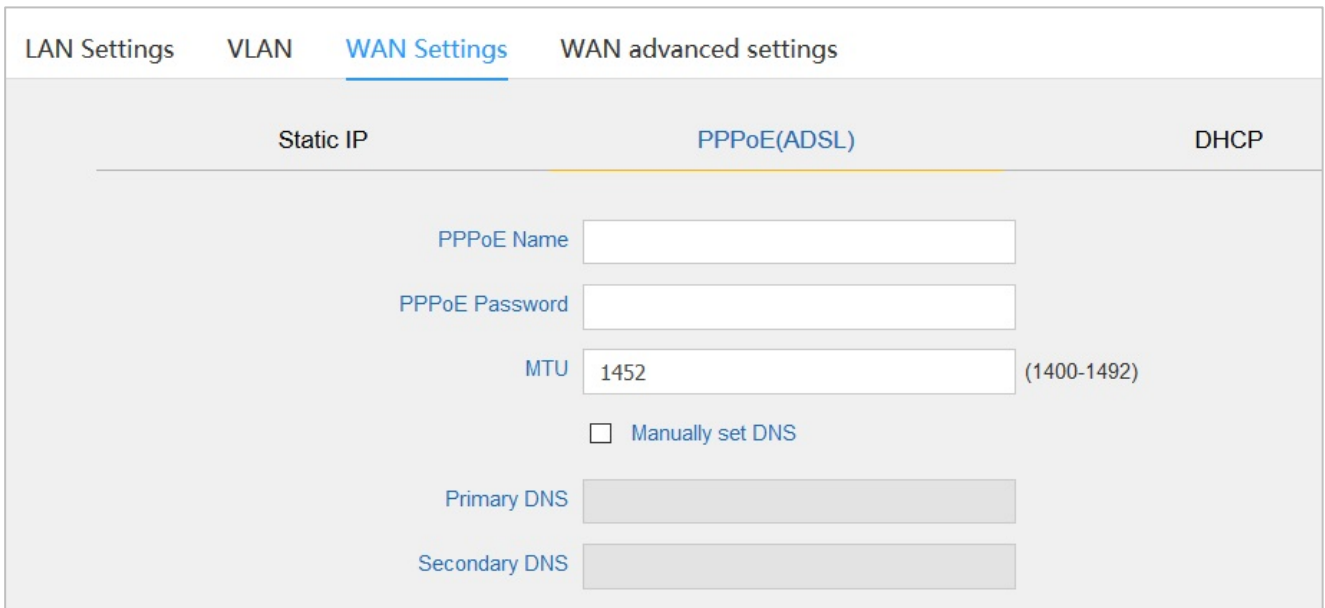

The screenshot shows the WAN Settings configuration page. At the top, there are tabs for 'LAN Settings', 'VLAN', 'WAN Settings' (which is selected), and 'WAN advanced settings'. Below the tabs, there are three radio button options: 'Static IP', 'PPPoE(ADSL)' (which is selected), and 'DHCP'. Under the 'PPPoE(ADSL)' option, there are several input fields: 'PPPoE Name' and 'PPPoE Password' (both empty), 'MTU' (set to 1452, with a range of 1400-1492 shown), a checkbox for 'Manually set DNS' (which is unchecked), 'Primary DNS' (empty), and 'Secondary DNS' (empty).


**Figure 5-33** PPPoE (ADSL)

The page includes the following fields:

Object	Description
PPPoE Name	Enter the User Name provided by your ISP.
PPPoE Password	Enter the password provided by your ISP.
MTU	Maximum Transmission Unit. Default is 1452.
Primary DNS	Enter the necessary DNS address provided by your ISP.
Secondary DNS	Enter the secondary DNS address provided by your ISP.

**DHCP**

Choose “**DHCP**” and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

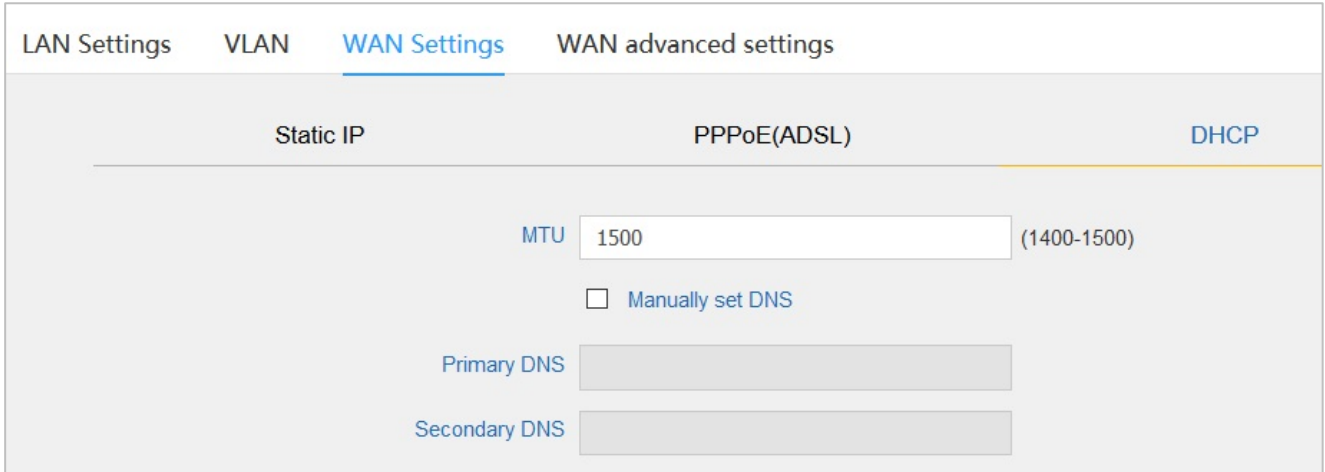

The screenshot shows the WAN Settings configuration page. At the top, there are tabs for 'LAN Settings', 'VLAN', 'WAN Settings' (which is selected), and 'WAN advanced settings'. Below the tabs, there are three options: 'Static IP', 'PPPoE(ADSL)', and 'DHCP'. The 'DHCP' option is selected and highlighted with a yellow underline. Under the 'DHCP' section, there is a field for 'MTU' with the value '1500' and a range '(1400-1500)'. Below this is a checkbox labeled 'Manually set DNS' which is unchecked. There are also two empty input fields for 'Primary DNS' and 'Secondary DNS'.

**Figure 5-34** DHCP

The page includes the following fields:

Object	Description
MTU	Maximum Transmission Unit. Default is 1500.
Primary DNS	Enter the necessary DNS address provided by your ISP.
Secondary DNS	Enter the secondary DNS address provided by your ISP.



### 5.7.3.5. WAN advanced settings

LAN Settings
VLAN
WAN Settings
WAN advanced settings

WAN advanced settings

MAC clone

Enable Web Server Access on WAN
 

Web Port

8080

Enable uPnP

Enable IGMP Proxy

Enable Ping Access on WAN

Enable IPsec pass through on VPN connection

Enable PPTP pass through on VPN connection

Enable L2TP pass through on VPN connection

Figure 5-35 WAN advanced settings

The page includes the following fields:

Object	Description
MAC clone	Enable and scan to clone the MAC address
Enable Web Server Access on WAN	Enable to access from WAN
Web Port	Enter the web port to access
Enable uPnP	Check to enable the UPnP function. The UPnP feature allows the devices, such as Internet computers, to access the local host resources or devices as needed. UPnP devices can be automatically discovered by the UPnP service application on the LAN.
Enable IGMP Proxy	Check to enable the IGMP Proxy function.
Enable Ping Access on WAN	<b>Enable</b> or <b>Disable</b> this function.
Enable IPsec passthrough on VPN connection	<b>Enable</b> or <b>disable</b> IPsec to pass through IPsec communication data.
Enable PPTP passthrough on VPN connection	<b>Enable</b> or <b>disable</b> PPTP to pass through PPTP communication data.
Enable L2TP passthrough on VPN connection	<b>Enable</b> or <b>disable</b> L2TP to pass through L2TP communication data.

## 5.7.4 Firewall

### 5.7.4.1. IP/Port Filtering

IP/Port Filtering
MAC Filtering
URL Filtering
Port Forwarding
DMZ Host

IP Filtering Settings

IP Filtering Black List ▼ Apply

IP 192.168.1.150 — 192.168.1.150 Scan

Port 80 — 80 (1-65535)

protocol TCP ▼

Add
Clear


<input type="checkbox"/> ALL	IP Address	port	protocol
<input type="checkbox"/>	192.168.1.150	80	tcp

Figure 5-36 IP/Port Filtering

The page includes the following fields:

Object	Description
IP Filtering	Select <b>Black List</b> or <b>White List</b> .
IP	Enter the IP that you need to put in black or white list.
Port	Enter the web port to access.
Protocol	Select <b>TCP</b> , <b>UDP</b> or <b>TCP+UDP</b> .
Add	Press to add in the black or white list.
Clear	Press to delete the black or white list.

### 5.7.4.2. MAC Filtering

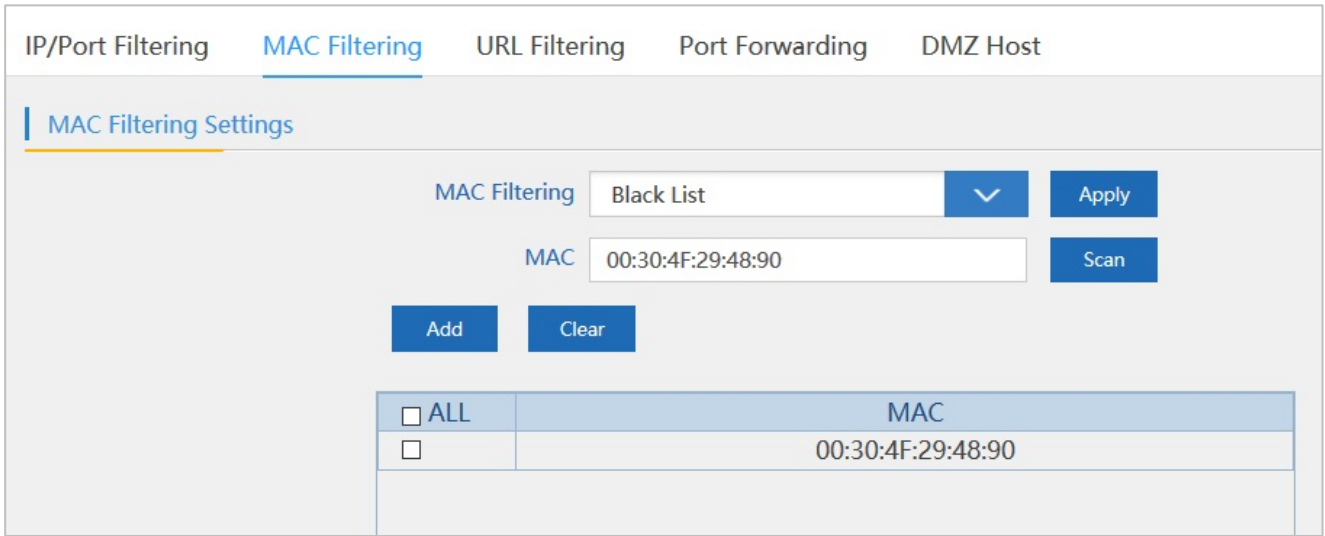

IP/Port Filtering   **MAC Filtering**   URL Filtering   Port Forwarding   DMZ Host

**MAC Filtering Settings**

MAC Filtering: Black List [v] [Apply]

MAC: 00:30:4F:29:48:90 [Scan]

[Add] [Clear]


<input type="checkbox"/> ALL	MAC
<input type="checkbox"/>	00:30:4F:29:48:90

Figure 5-37 MAC Filtering

The page includes the following fields:

Object	Description
MAC Filtering	Select <b>Black List</b> or <b>White List</b> .
MAC	Enter the MAC address that you need to put in black or white list.
Add	Press to add in the black or white list.
Clear	Press to delete the black or white list.

### 5.7.4.3. URL Filtering

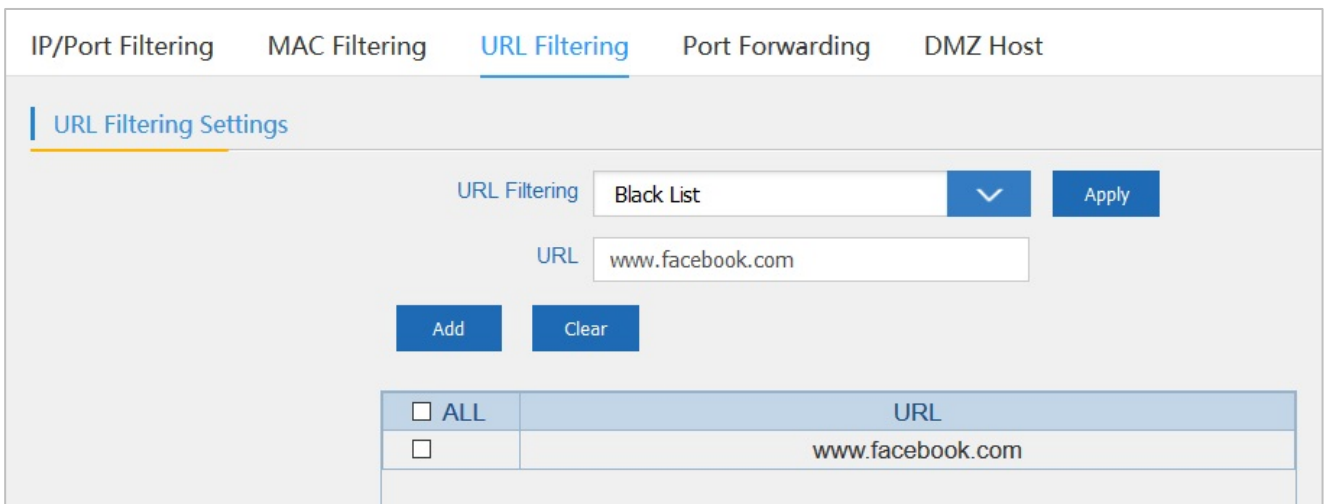

IP/Port Filtering   MAC Filtering   **URL Filtering**   Port Forwarding   DMZ Host

**URL Filtering Settings**

URL Filtering: Black List [v] [Apply]

URL: www.facebook.com

[Add] [Clear]


<input type="checkbox"/> ALL	URL
<input type="checkbox"/>	www.facebook.com

Figure 5-38 URL Filtering

The page includes the following fields:

Object	Description
URL Filtering	Select <b>Disable</b> or <b>Black List</b>
URL	Enter the URL that you need to put in black list
Add	Press to add in the black list
Clear	Press to delete the black list

#### 5.7.4.4. Port Forwarding

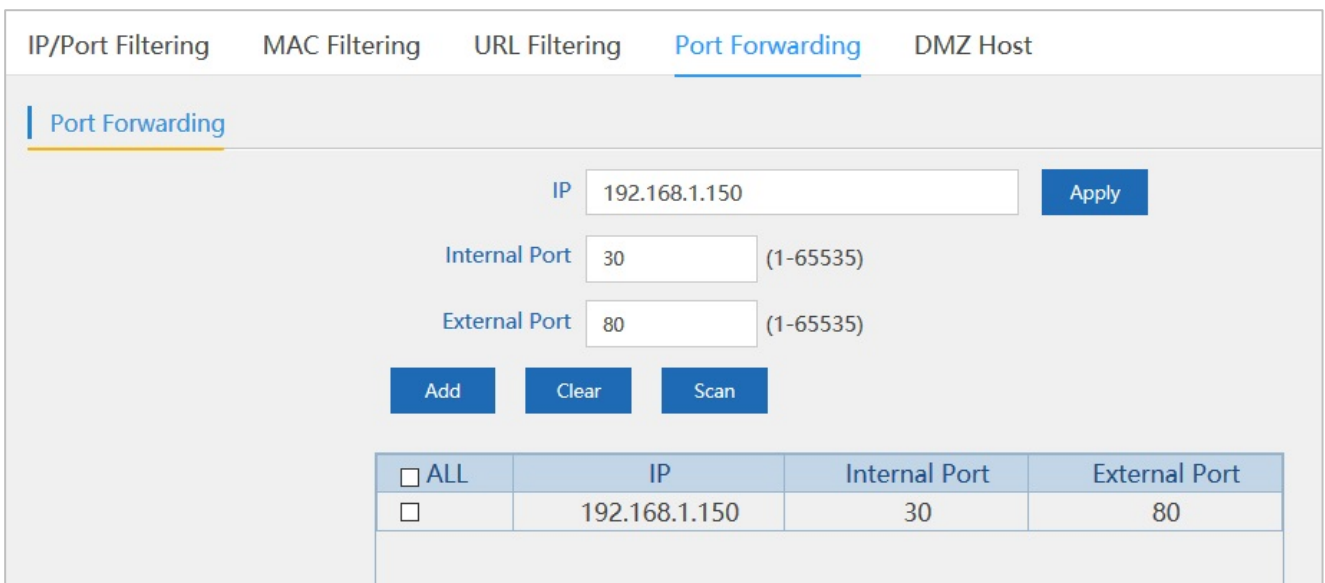

IP/Port Filtering    MAC Filtering    URL Filtering    **Port Forwarding**    DMZ Host

**Port Forwarding**

IP: 192.168.1.150 Apply

Internal Port: 30 (1-65535)

External Port: 80 (1-65535)

Add Clear Scan

<input type="checkbox"/> ALL	IP	Internal Port	External Port
<input type="checkbox"/>	192.168.1.150	30	80

Figure 5-39 Port Forwarding

The page includes the following fields:

Object	Description
IP	Enter the IP address that you need for port forwarding.
Internal Port	Enter the internal port.
External Port	Enter the external port.
Add	Press to add the IP address.
Clear	Press to delete the IP address.

### 5.7.4.5. DMZ Host

**Figure 5-40 DMZ**

The page includes the following fields:

Object	Description
DMZ Settings	Select <b>Enable DMZ</b> or <b>Disable</b> .
DMZ LAN IP	Enter the DMZ IP.

## 5.7.5 Management

### 5.7.5.1. System Time

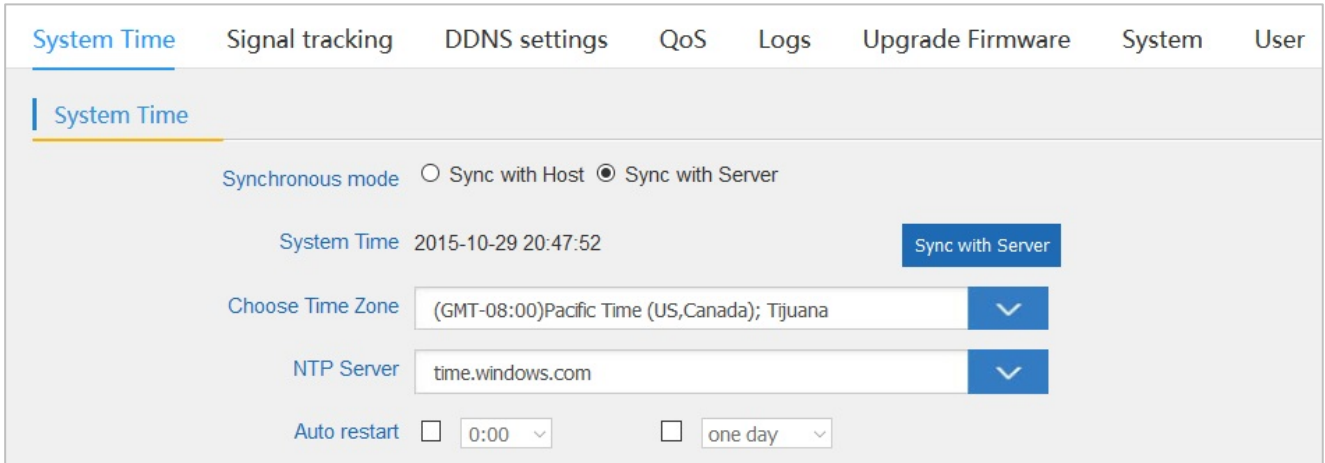


Figure 5-41 System Time

The page includes the following fields:

Object	Description
Synchronous Mode	Select <b>Sync with Host</b> or <b>Sync with Server</b> .
System Time	It shows the system time.
Choose Time Zone	Select the time zone of your country/region. If your country/region is not listed, please select another country/region whose time zone is the same as yours.
NTP Server	Select the NTP server from the list or enter the host name or IP address of the time server if you wish.
Auto Restart	Select the time that you want to reboot

### 5.7.5.2. Signal Tracking

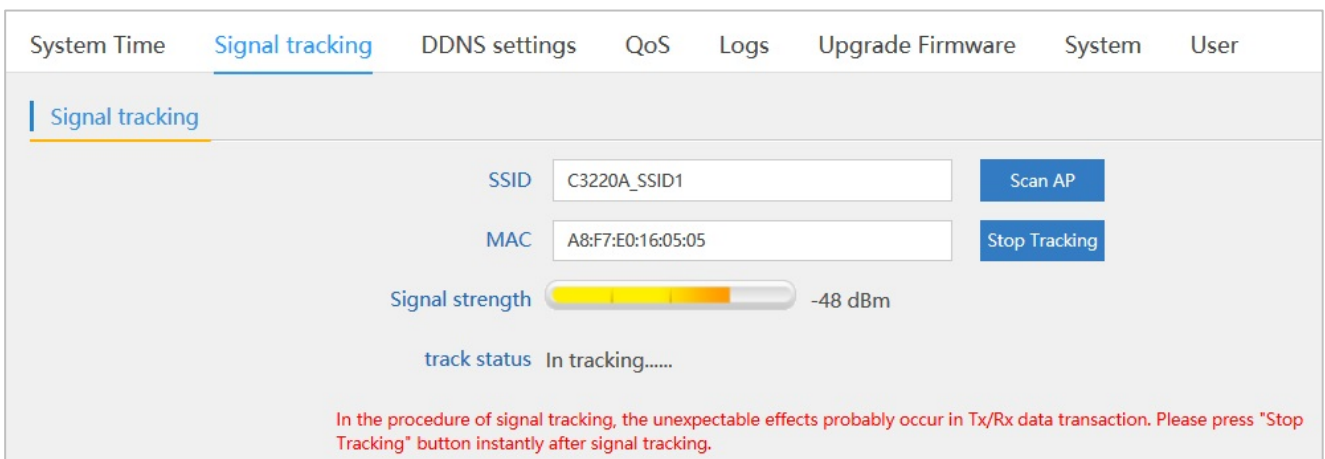


Figure 5-42 Signal tracking

The page includes the following fields:

Object	Description
SSID	Select the SSID you need to check by pressing the <b>Scan AP</b> button.
MAC	It shows the MAC address of the tracked AP.
Signal Strength	It shows the signal strength of the AP.

### 5.7.5.3. DDNS settings

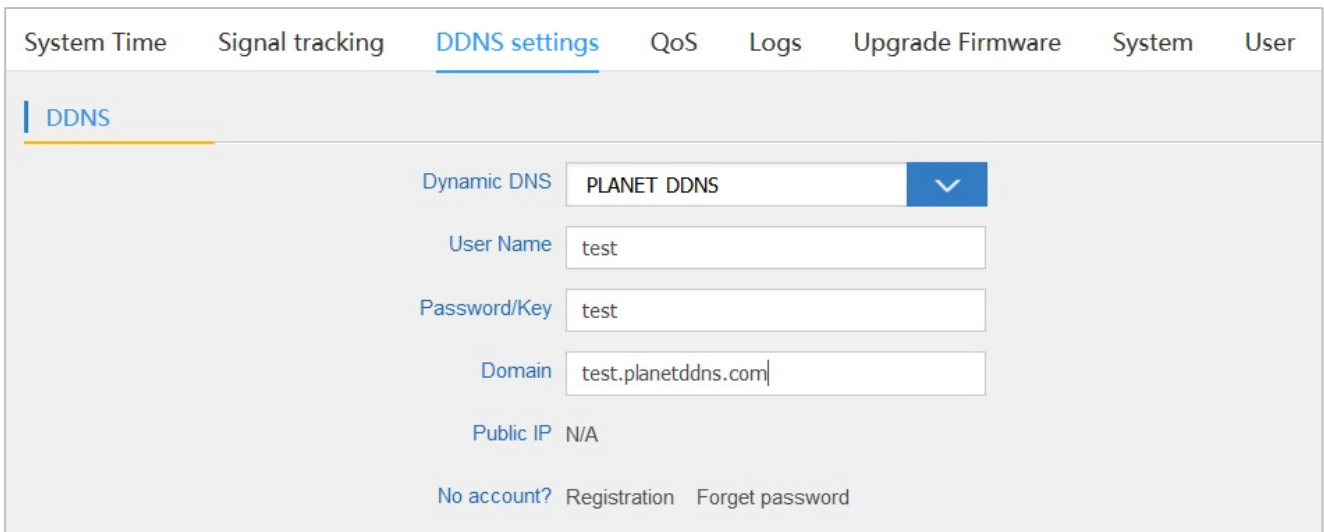


Figure 5-43 DDNS settings

The page includes the following fields:

Object	Description
Dynamic DNS	Select <b>PLANET DDNS</b> or <b>PLANET Easy DDNS</b> .
User Name	Enter the DDNS user name of the DDNS account.
Password/Key	Enter the DDNS password of the DDNS account.
Domain	Enter the domain name provided by PLANET DDNS.
Public IP	It shows the public IP if you connect to the DDNS successfully.

### 5.7.5.4. QoS

System Time
Signal tracking
DDNS settings
QoS
Logs
Upgrade Firmware
System
User

QoS

ON
Apply

Upload

1024000

Range:(100-1024000)Kbps

Download

1024000

Range:(100-1024000)Kbps

QoS Rule settings

IP range
 

—

Mode
 Share total bandwidth with all IP address.
  Assign bandwidth for each IP address.

Bandwidth Upload

102400

Kbps

Download

102400

Kbps

Comment


Add
Clear

<input type="checkbox"/> ALL	Start IP	End IP	Mode	Upload(Kbps)	Download(Kbps)	Comment
<input type="checkbox"/>	192.168.1.100	192.168.1.150	Share	102400	102400	

Figure 5-44 QoS

The page includes the following fields:

Object	Description
Upload	Enter the Internet upload speed.
Download	Enter the Internet download speed.
IP Range	Enter the IP range of bandwidth control.
Mode	Select <b>Share total bandwidth with all IP address</b> or <b>Assign bandwidth for each IP address</b> .
Bandwidth	Enter the limitation of bandwidth.
Comment	Enter the comment of the QoS configuration.



### 5.7.5.5. Logs

System Time
Signal tracking
DDNS settings
QoS
Logs
Upgrade Firmware
System
User

System Logs

Remote Log Server

IP  Apply

```

Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.450000] CABMinfree = 48
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.450000] UAPSDMinfree = 0
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.450000] ATH_TXBUF=540
Oct 29 19:37:08 WBS-202N kern.info kernel: [ 22.460000] Enterprise mode: 0x03fc0000
Oct 29 19:37:08 WBS-202N kern.info kernel: [ 22.470000] Restoring Cal data from DRAM
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.470000]
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.470000] ART Version : -48.0.0
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.480000] SW Image Version : -48.0.0.0.0
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.480000] Board Revision :
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.480000] ar9300_attach: nf_2_nom -110 nf_2_max -60
nf_2_min -125
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.490000] SPECTRAL : get_capability not registered
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.500000] HAL_CAP_PHYDIAG : Capable
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.500000] SPECTRAL : Need to fix the capability
check for RADAR (spectral_attach : 231)
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.510000] SPECTRAL : get_capability not registered
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.520000] HAL_CAP_RADAR : Capable
Oct 29 19:37:08 WBS-202N kern.warn kernel: [ 22.520000] SPECTRAL : Need to fix the capability
check for SPECTRAL.
          
```

Refresh
Clear

Figure 5-45 Logs

The page includes the following fields:

Object	Description
Remote Log Server	Enable remote log server
IP	Enter the IP of remote log server
Refresh	Press to refresh the system log
Clear	Press to clear the system log

### 5.7.5.6. Upgrade Firmware




**Figure 5-46** Upgrade Firmware

The page includes the following fields:

Object	Description
Browse	Press to select the firmware file.
Upgrade	Press to upgrade the firmware.
Restore Factory Settings	Select to reset the device to default when upgrading firmware.

### 5.7.5.7. System

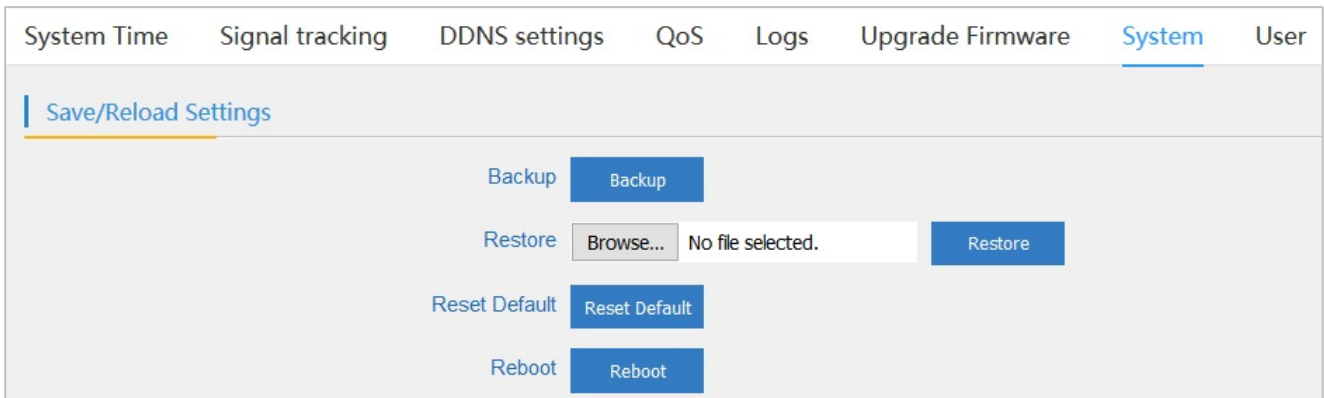

**Figure 5-47** System

The page includes the following fields:

Object	Description
Backup	Press to back up the configuration
Browse	Press to select the configuration file
Restore	Press to restore the configuration
Reset Default	Press to reset the device to default
Reboot	Press to reboot the device

### 5.7.5.8. User

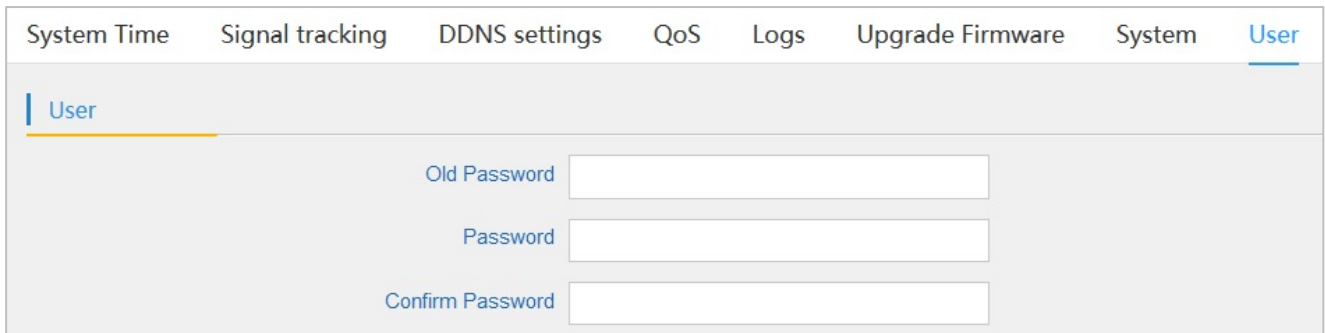


Figure 5-48 User

The page includes the following fields:

Object	Description
Old Password	Enter the old password
Password	Enter the new password
Confirm Password	Enter the new password again

# Chapter 6. Quick Connection to a Wireless Network

In the following sections, the **default SSID** of the WAP-252N/WAP-552N is configured to “**default**”.

## 6.1 Windows XP (Wireless Zero Configuration)

**Step 1:** Right-click on the **wireless network icon** displayed in the system tray



Figure 6-1 System Tray – Wireless Network Icon

**Step 2:** Select [View Available Wireless Networks]

**Step 3:** Highlight and select the wireless network (SSID) to connect

- (1) Select SSID [default]
- (2) Click the [Connect] button

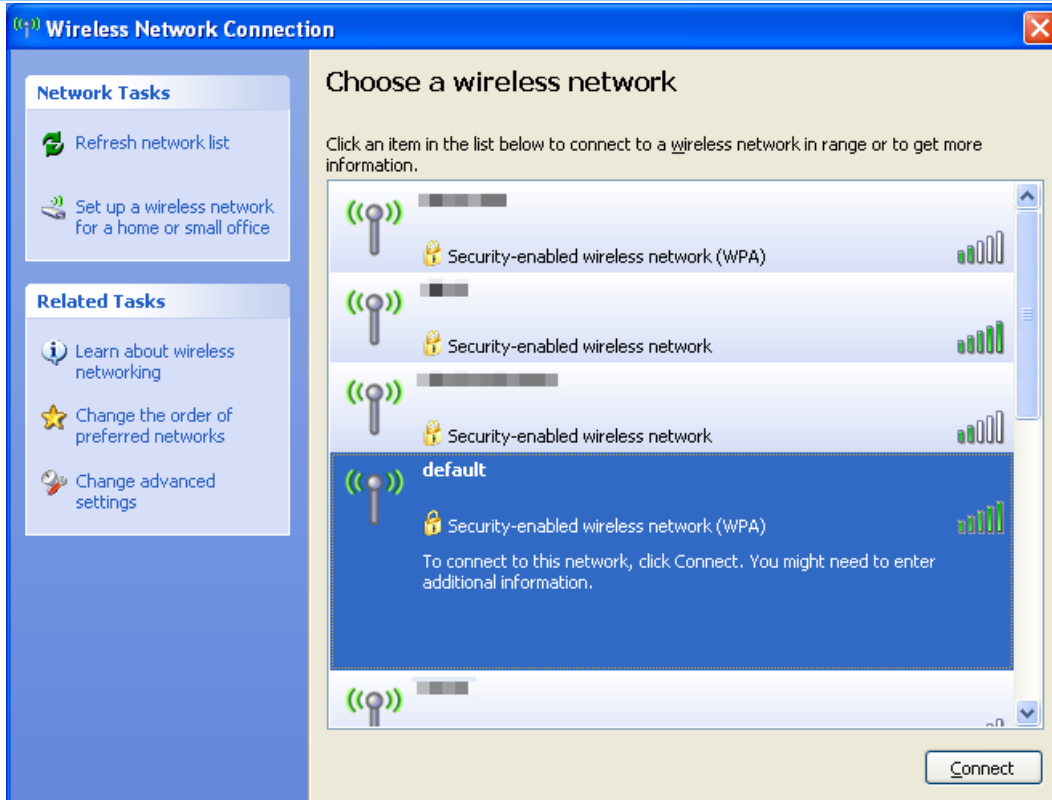


Figure 6-2 Choosing a Wireless Network

**Step 4:** Enter the **encryption key** of the wireless AP

- (1) The Wireless Network Connection box will appear
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Click the [Connect] button



Figure 6-3 Entering the Network Key

**Step 5:** Check if “**Connected**” is displayed

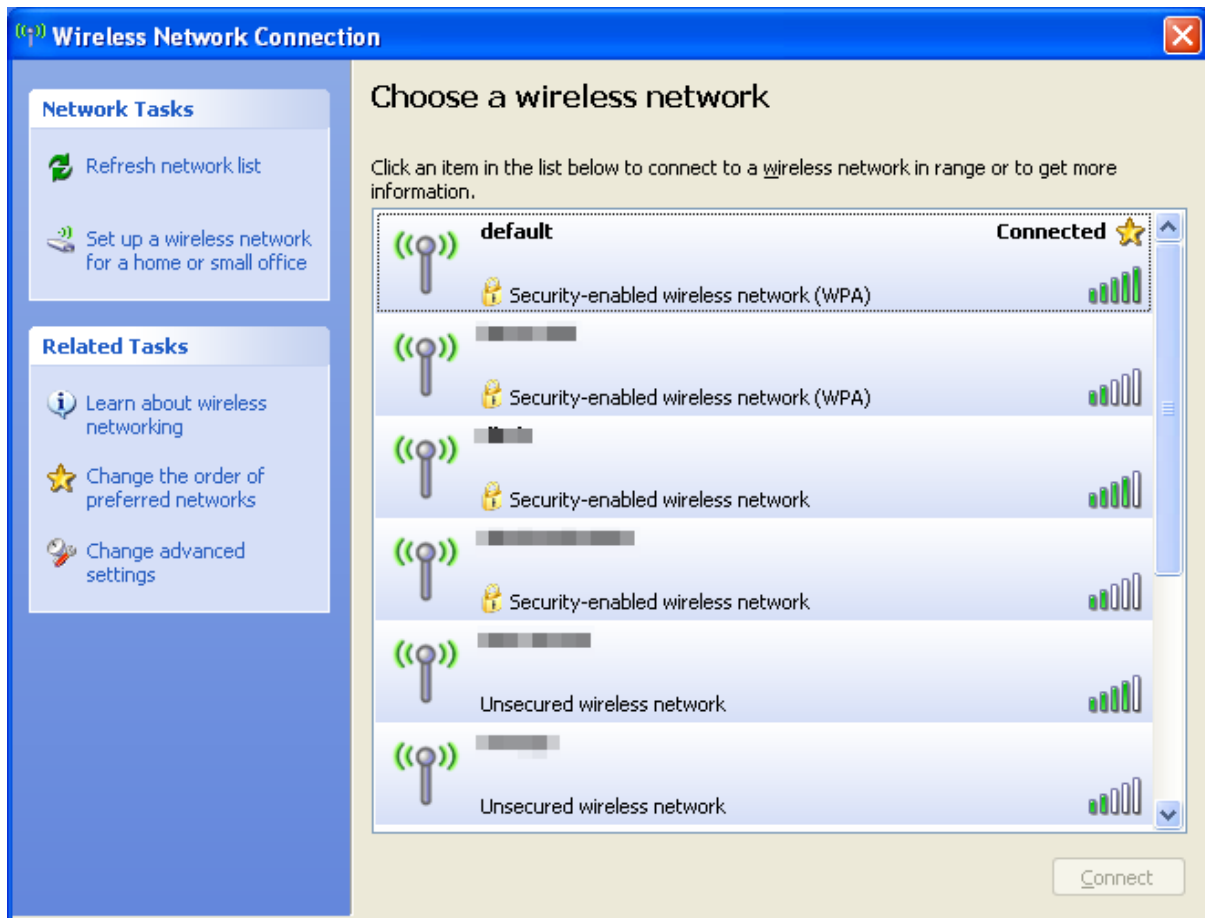


Figure 6-4 Choosing a Wireless Network -- Connected



Some laptops are equipped with a “Wireless ON/OFF” switch for the internal wireless LAN. Make sure the hardware wireless switch is switched to “ON” position.

## 6.2 Windows 7 (WLAN AutoConfig)

WLAN AutoConfig service is built in Windows 7 that can be used to detect and connect to wireless network. This built-in wireless network connection tool is similar to wireless zero configuration tool in Windows XP.

**Step 1:** Right-click on the **network icon** displayed in the system tray



Figure 6-5 Network Icon

**Step 2:** Highlight and select the wireless network (SSID) to connect

- (1) Select SSID [**default**]
- (2) Click the [**Connect**] button

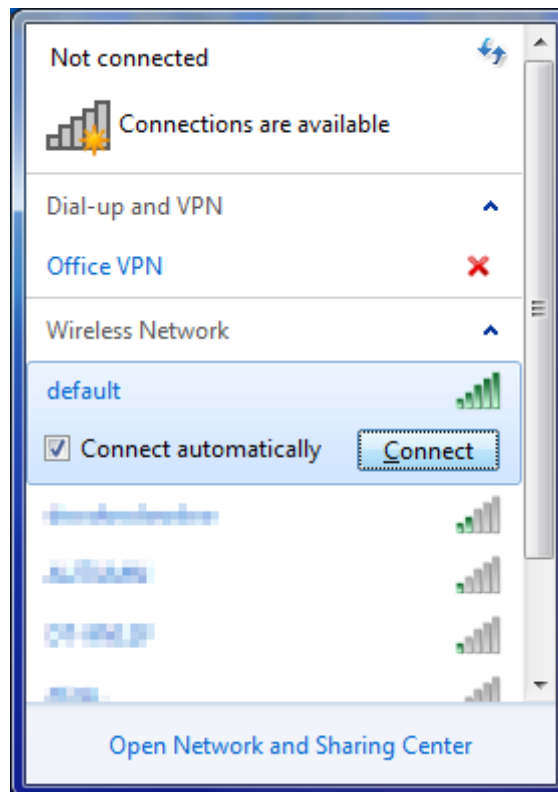


Figure 6-6 WLAN AutoConfig




If you will be connecting to this Wireless AP in the future, check **[Connect automatically]**.

**Step 4:** Enter the **encryption key** of the wireless AP

- (1) The Connect to a Network box will appear
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Click the [OK] button




**Figure 6-7** Typing the Network Key

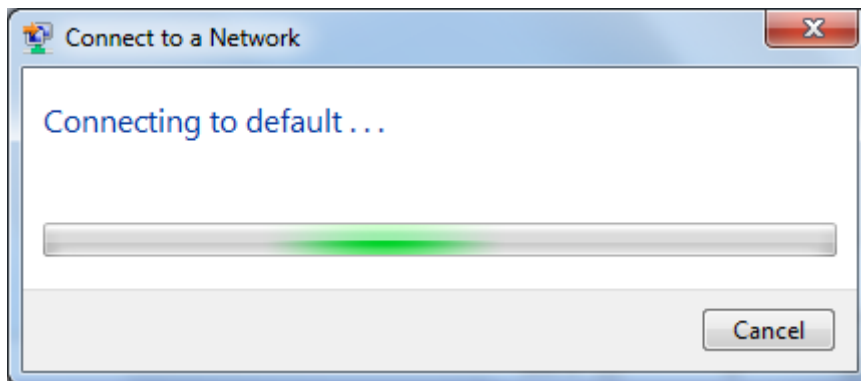

**Figure 6-8** Connecting to a Network

**Step 5:** Check if “**Connected**” is displayed

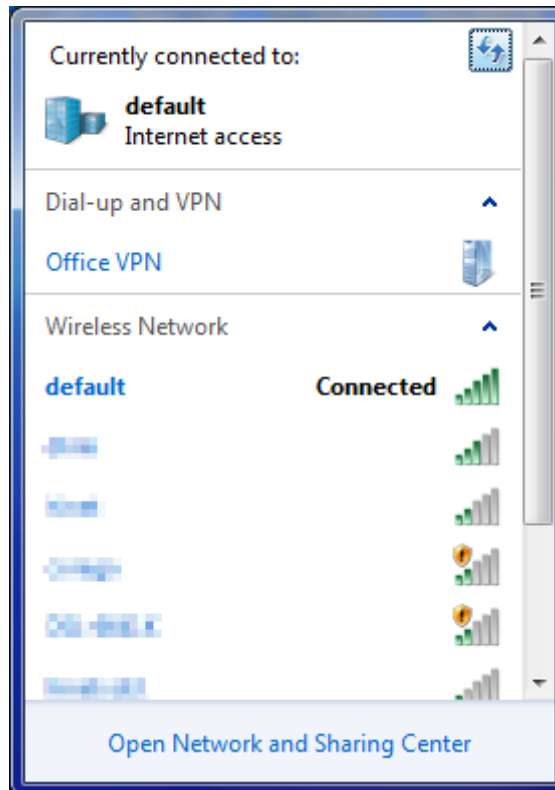

**Figure 6-9** Connected to a Network



## 6.3 Mac OS X 10.x

In the following sections, the default SSID of the WAP-252N/WAP-552N is configured to “default”.

**Step 1:** Right-click on the **network icon** displayed in the system tray

The AirPort Network Connection menu will appear



Figure 6-10 Mac OS – Network Icon

**Step 2:** Highlight and select the wireless network (SSID) to connect

- (1) Select and SSID [**default**]
- (2) Double-click on the selected SSID



Figure 6-11 Highlighting and Selecting the Wireless Network

**Step 4:** Enter the **encryption key** of the wireless AP

- (1) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (2) Click the [OK] button

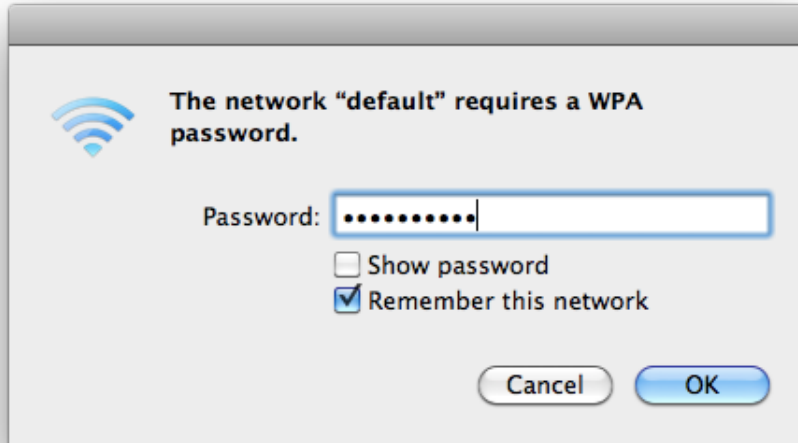


Figure 6-12 Enter the Password



If you will be connecting to this Wireless AP in the future, check **[Remember this network]**.

**Step 5:** Check if the AirPort is connected to the selected wireless network.

If "Yes", then there will be a "check" symbol in front of the SSID.

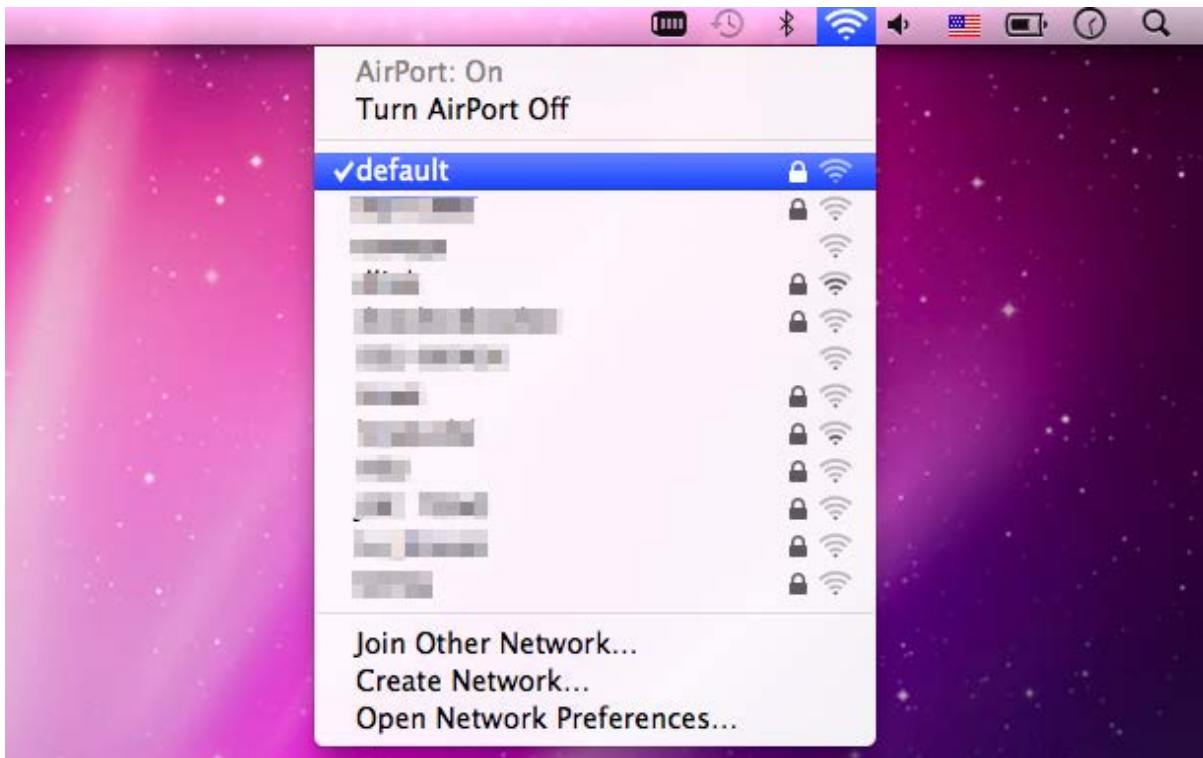


Figure 6-13 Connected to the Network

There is another way to configure the MAC OS X wireless settings:

**Step 1:** Click and open the [System Preferences] by going to **Apple > System Preference** or **Applications**

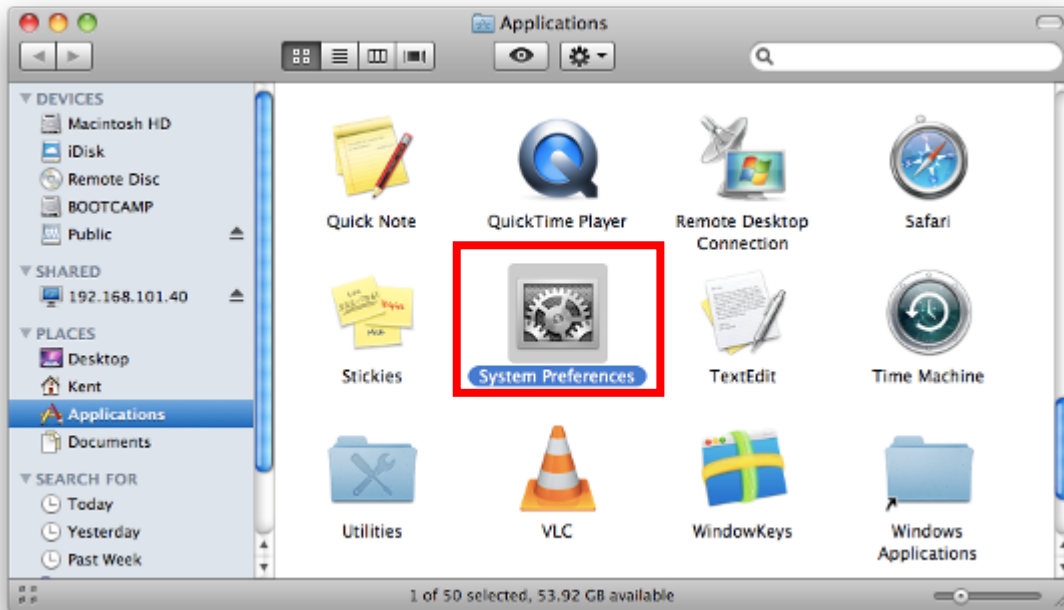


Figure 6-14 System Preferences

**Step 2:** Open **Network Preference** by clicking on the [Network] icon


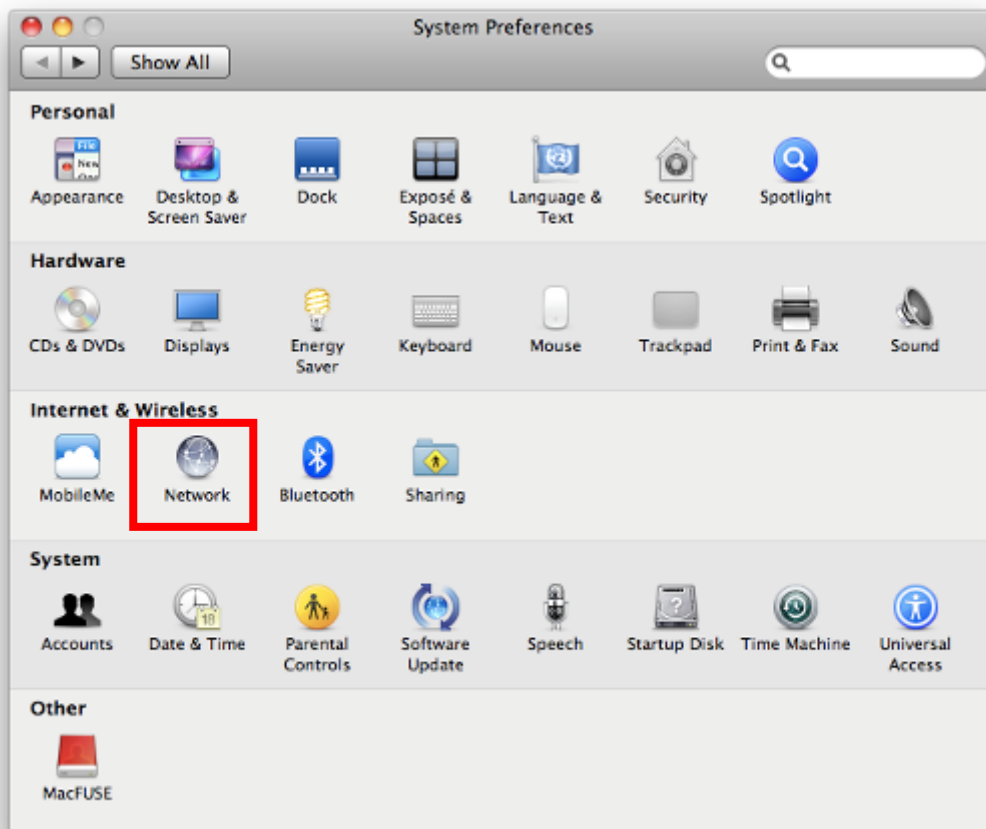


Figure 6-15 System Preferences -- Network

**Step 3:** Check Wi-Fi setting and select the available wireless network

- (1) Choose the **AirPort** on the left-menu (make sure it is ON)
- (2) Select Network Name **[default]** here

If this is the first time to connect to the Wireless AP, it should show "Not network selected".

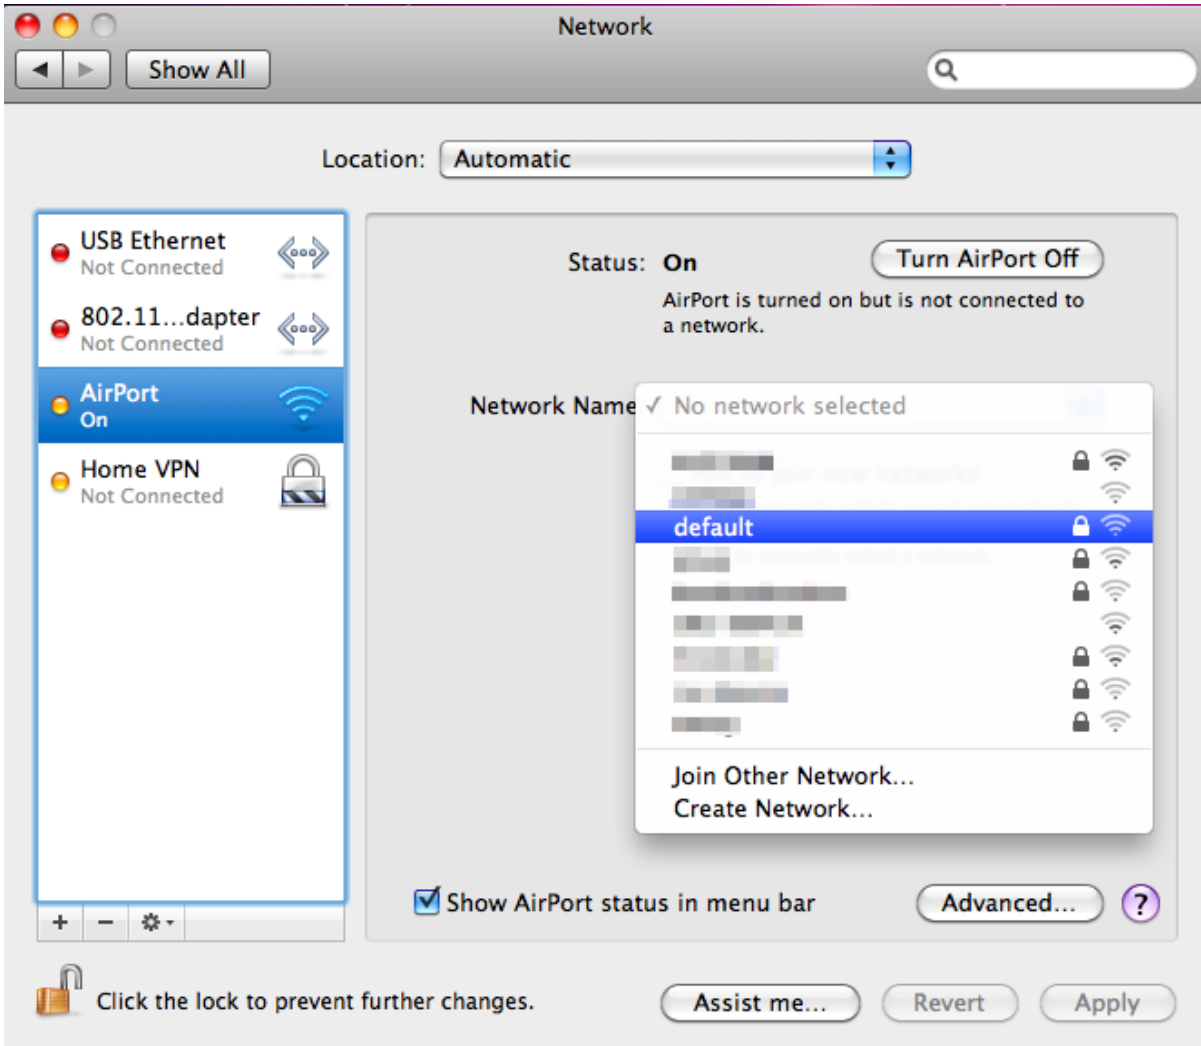

**Figure 6-16** Selecting the Wireless Network

## 6.4 iPhone/iPod Touch/iPad

In the following sections, the **default SSID** of the WAP-252N/WAP-552N is configured to “**default**”.

**Step 1:** Tap the [Settings] icon displayed in the home screen

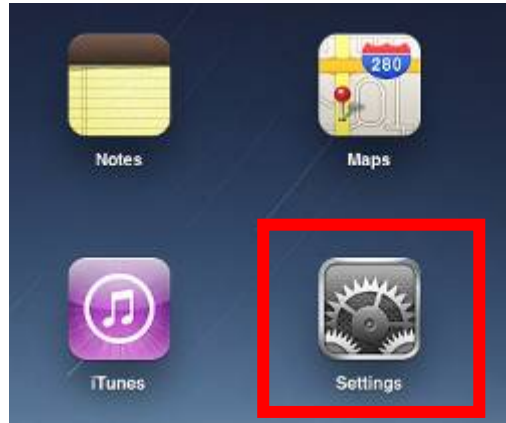


Figure 6-17 iPhone – Settings icon

**Step 2:** Check Wi-Fi setting and select the available wireless network

(1) Tap [General] \ [Network]

(2) Tap [Wi-Fi]

If this is the first time to connect to the Wireless AP, it should show “Not Connected”.



Figure 6-18 Wi-Fi Setting



Figure 6-19 Wi-Fi Setting – Not Connected

**Step 3:** Tap the target wireless network (SSID) in “Choose a Network...”

- (1) Turn on Wi-Fi by tapping “Wi-Fi”
- (2) Select SSID [default]



Figure 6-20 Turning on Wi-Fi

**Step 4:** Enter the **encryption key** of the Wireless AP

- (1) The password input screen will be displayed.
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Tap the [Join] button.

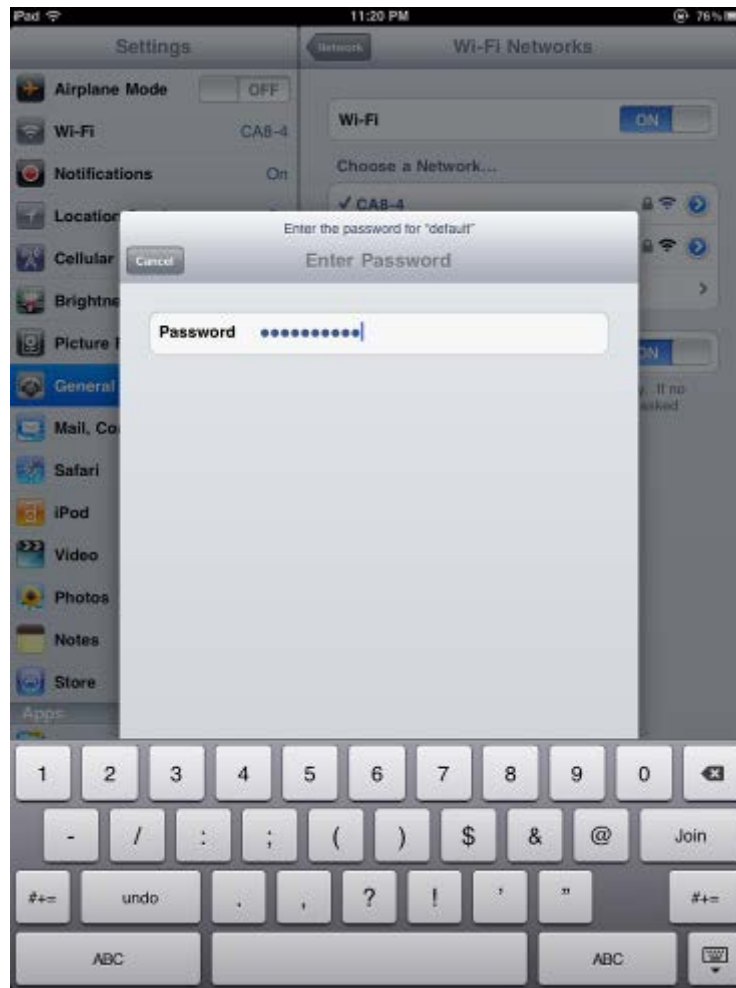


Figure 6-21 iPhone -- Entering the Password

**Step 5:** Check if the device is connected to the selected wireless network.

If "Yes", then there will be a "check" symbol in front of the SSID.



Figure 6-22 iPhone -- Connected to the Network

# Appendix A: Planet Smart Discovery Utility

To easily list the WAP-252N/WAP-552N in your Ethernet environment, the Planet Smart Discovery Utility is an ideal solution.


The following installation instructions guide you to running the Planet Smart Discovery Utility.

**Step 1:** Deposit the **Planet Smart Discovery Utility** in administrator PC.

**Step 2:** Run this utility and the following screen appears.



**Step 3:** Press **“Refresh”** for the current connected devices in the discovery list as shown in the following screen:

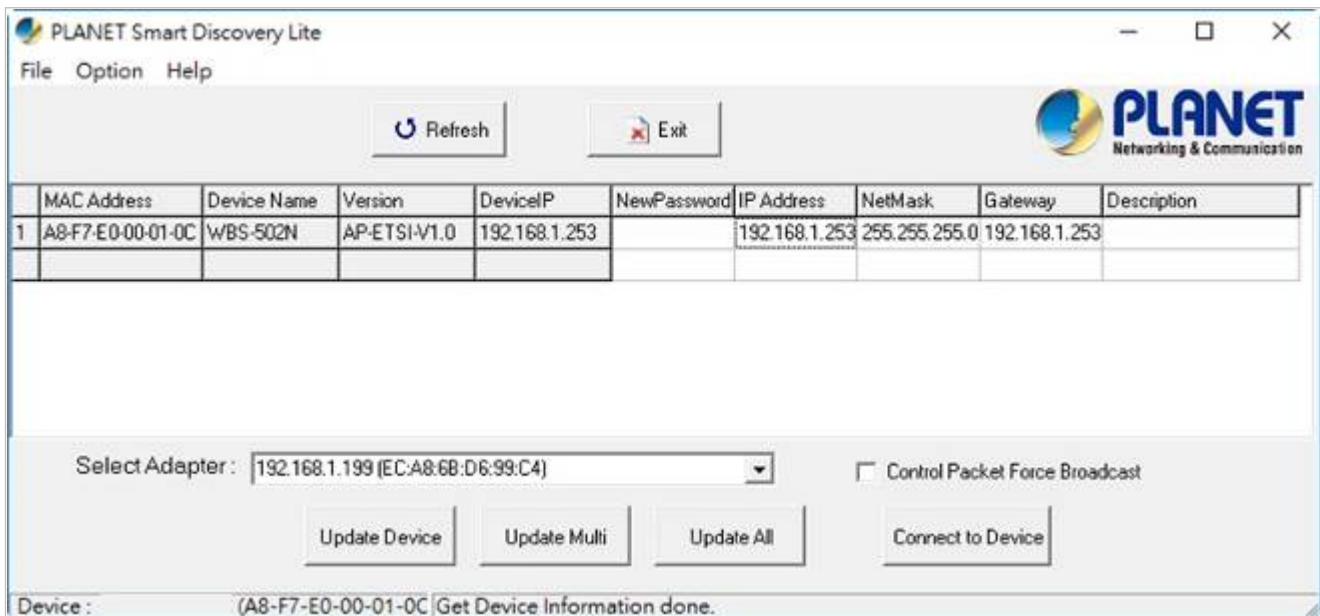

**Step 3:** Press **“Connect to Device”** and then the Web login screen appears.




The fields in white background can be modified directly and then you can apply the new setting by clicking **“Update Device”**.




## Appendix B: FAQs

### Q1: How to set up the AP Client Connection

**Topology:**

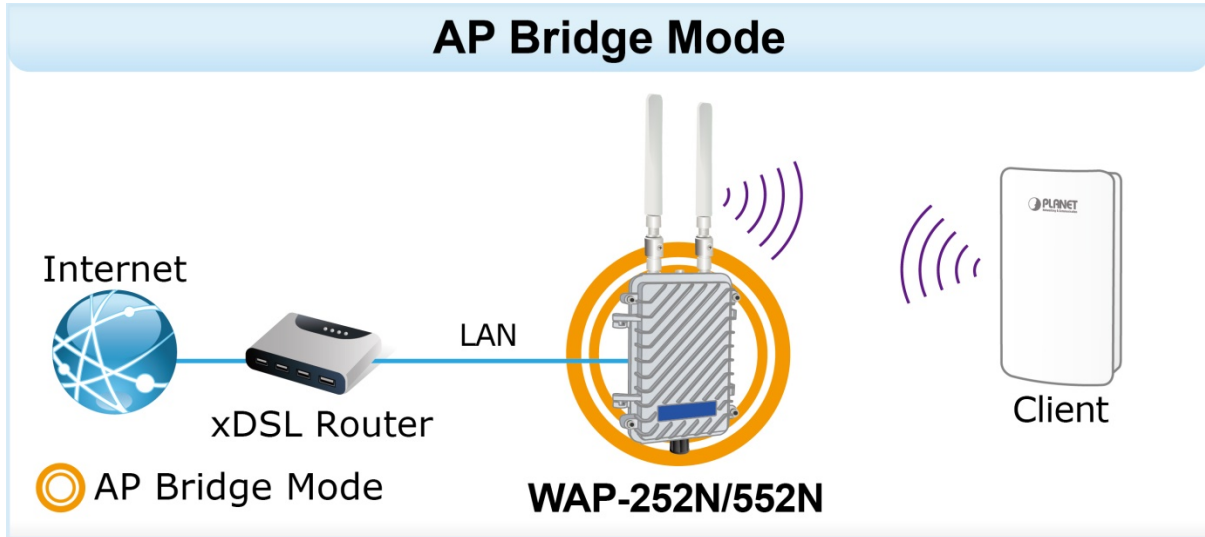

**Step1.** Use static IP in the PCs that are connected with AP-1(Site-1) and AP-2(Site-2). In this case, Site-1 is "192.168.1.100", and Site-2 is "192.168.1.200".

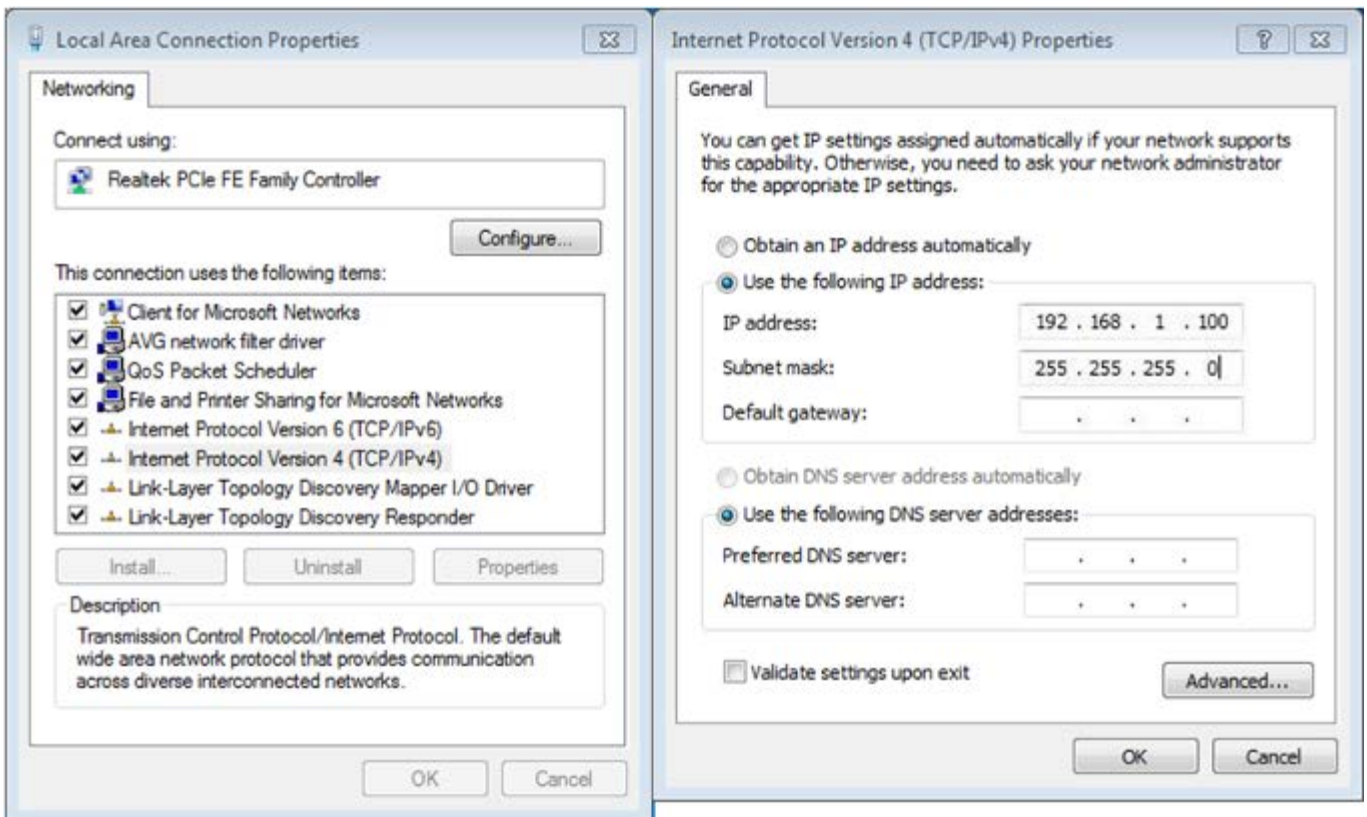

**Step2.** In AP-2, change the default IP to the same IP range but different from AP-1. In this case, the IP is changed to **192.168.1.252**.



LAN Settings

IP 192.168.1.252

Subnet Mask 255.255.255.0

**Step 3.** In AP-1, go to “**Wizard**” to configure it to **AP Mode**. In AP-2, configure it to **Repeater Mode**.

AP-1



Choose Operation Mode

Choose the mode you want to configure

Gateway Mode Repeater Mode WISP Mode **AP Mode** Super WDS

AP-2



Choose Operation Mode

Choose the mode you want to configure

Gateway Mode **Repeater Mode** WISP Mode AP Mode Super WDS

**Step 4.** In AP-2, press **Scan AP** to search the AP-1. You can also enter the MAC address, SSID, encryption and bandwidth if you know what they are.

**Scan AP** ✕

PLANET\_5G

A8:F7:E0:22:85:C5      Channel: 36      Choice

RSS: -12 dBm      Encryption: none

**Refresh**

**Wireless Repeater**

Repeater SSID  Scan AP

lockmac

Authentication  ▼

Key

Band Width  ▼

WDS Passthrough

**Step 5.** Click “Next” to finish the setting.

**Step 6.** Click “Device Status” to check connection status.

**wireless connection Status**

Repeater SSID PLANET\_5G      channel 36

BSSID A8:F7:E0:22:85:C5

Signal strength -13 dBm


Link Quality 100%

Tx Rate 79M      Tx throughput 2.748 Mbps


Rx Rate 162M      Rx throughput 281.256 Kbps

**Step 7.** Use command line tool to ping each other to ensure the link is successfully established.


From Site-1, ping 192.168.1.200; and in Site-2, ping 192.168.1.100.

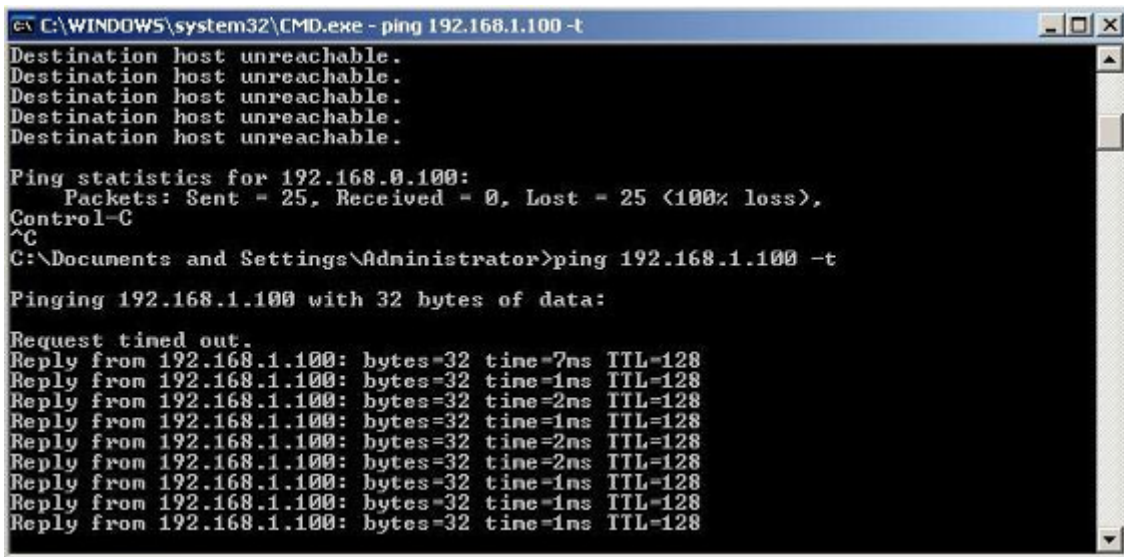

**Step 8.** Configure the TCP/IP settings of Site-2 to “Obtain an IP address automatically”.

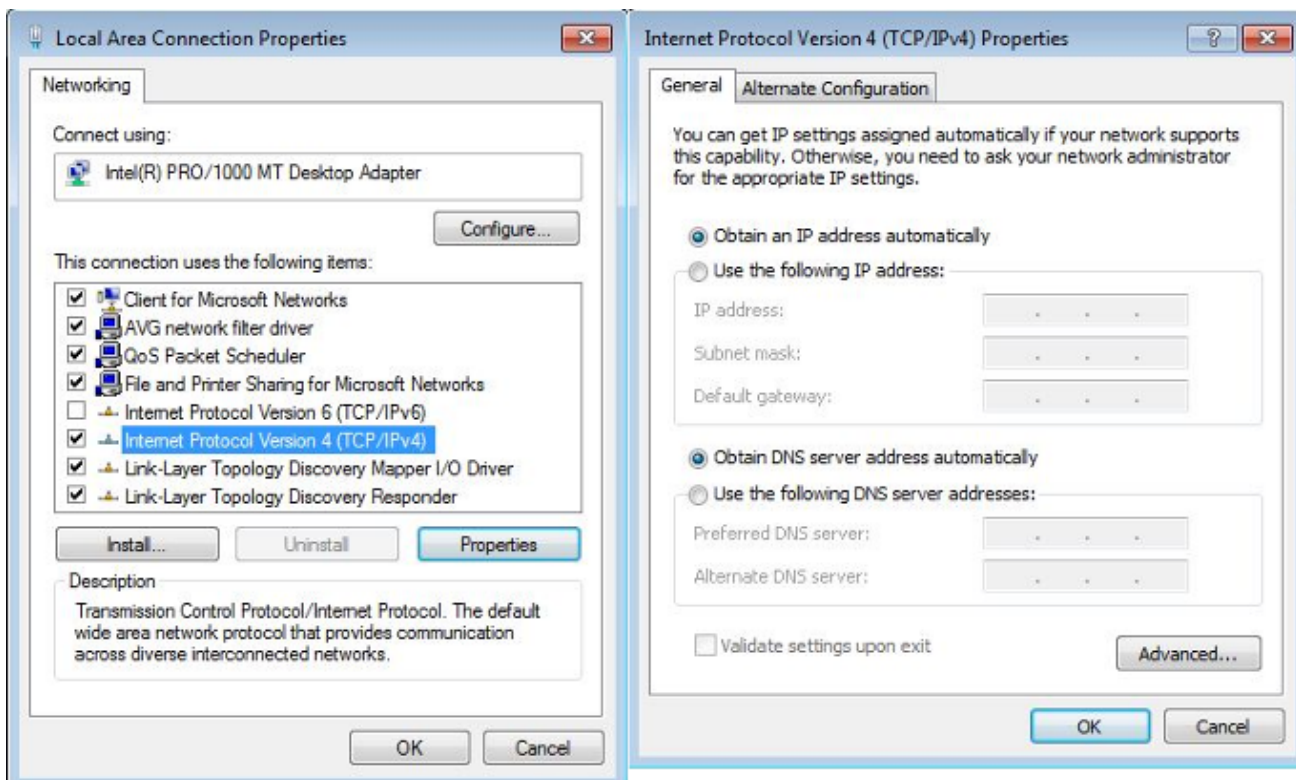

**Step 9.** Use command line tool to ping the DNS (e.g., Google) to ensure Site-2 can access internet through the wireless connection.

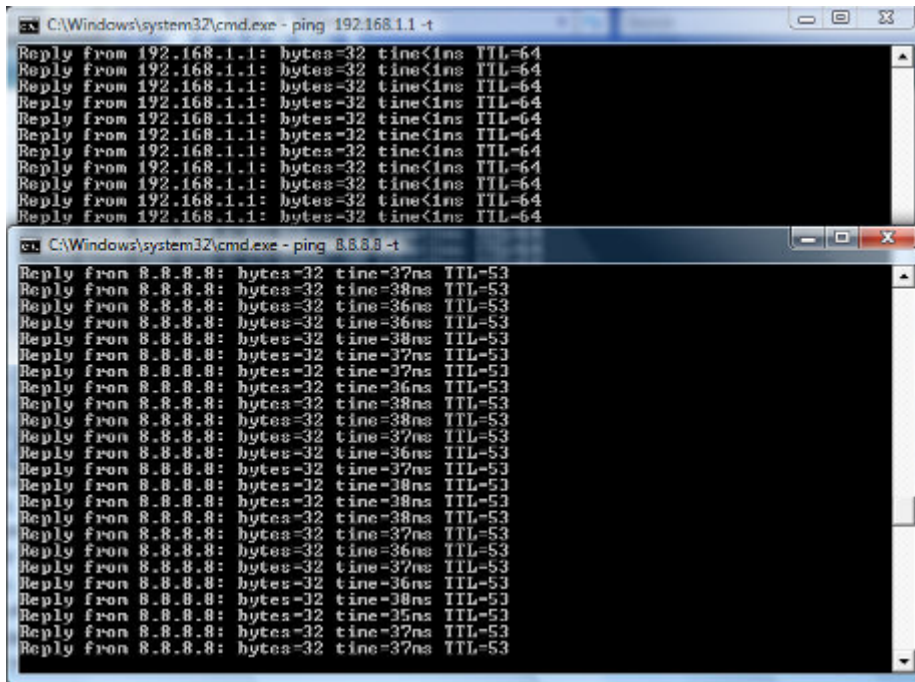


The following hints should be noted:


- 1) The encryption method must be the same as that of both sites if configured.
- 2) Both sites should be Line-of-Sight.
- 3) For the short distance connection less than 1km, please reduce the "RF Output Power" of both sites.
- 4) For the long distance connection over 1km, please adjust the "Distance" to the actual distance or double the actual distance.

## Q2: How to set up the WDS Connection

### Topology:

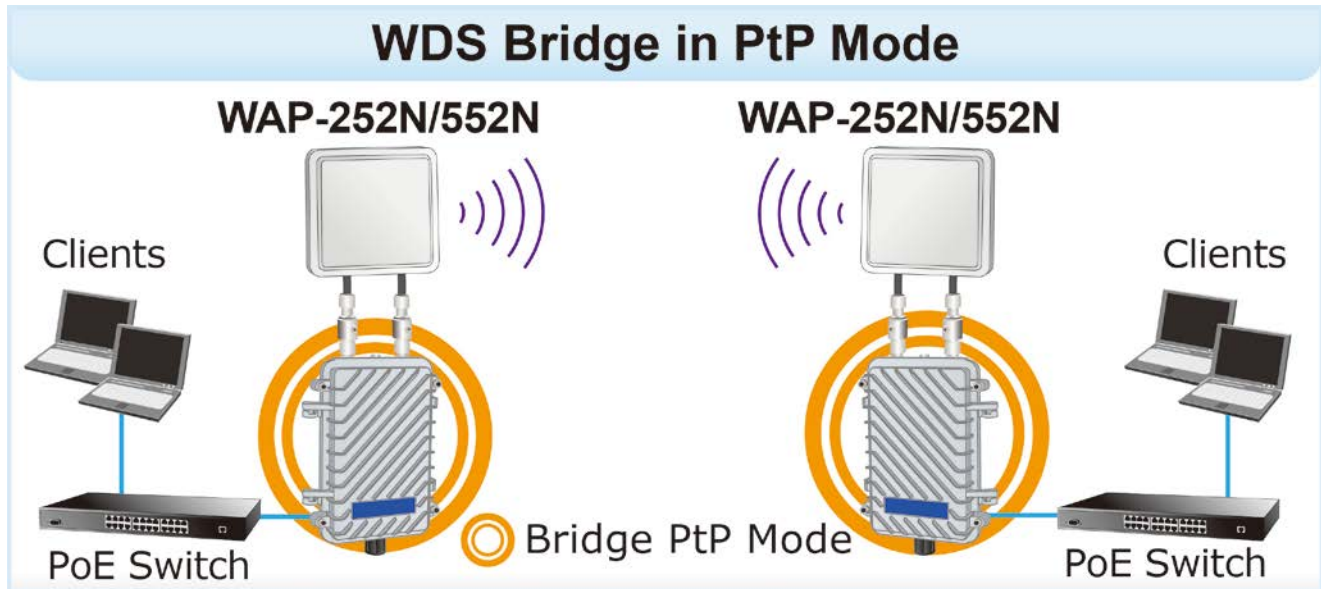

**Step 1.** Use static IP in the PCs that are connected with WAP-252N/WAP-552N-1 (Site-1) and WAP-252N/WAP-552N -2 (Site-2). In this case, Site-1 is “192.168.1.100”, and Site-2 is “192.168.1.200”.

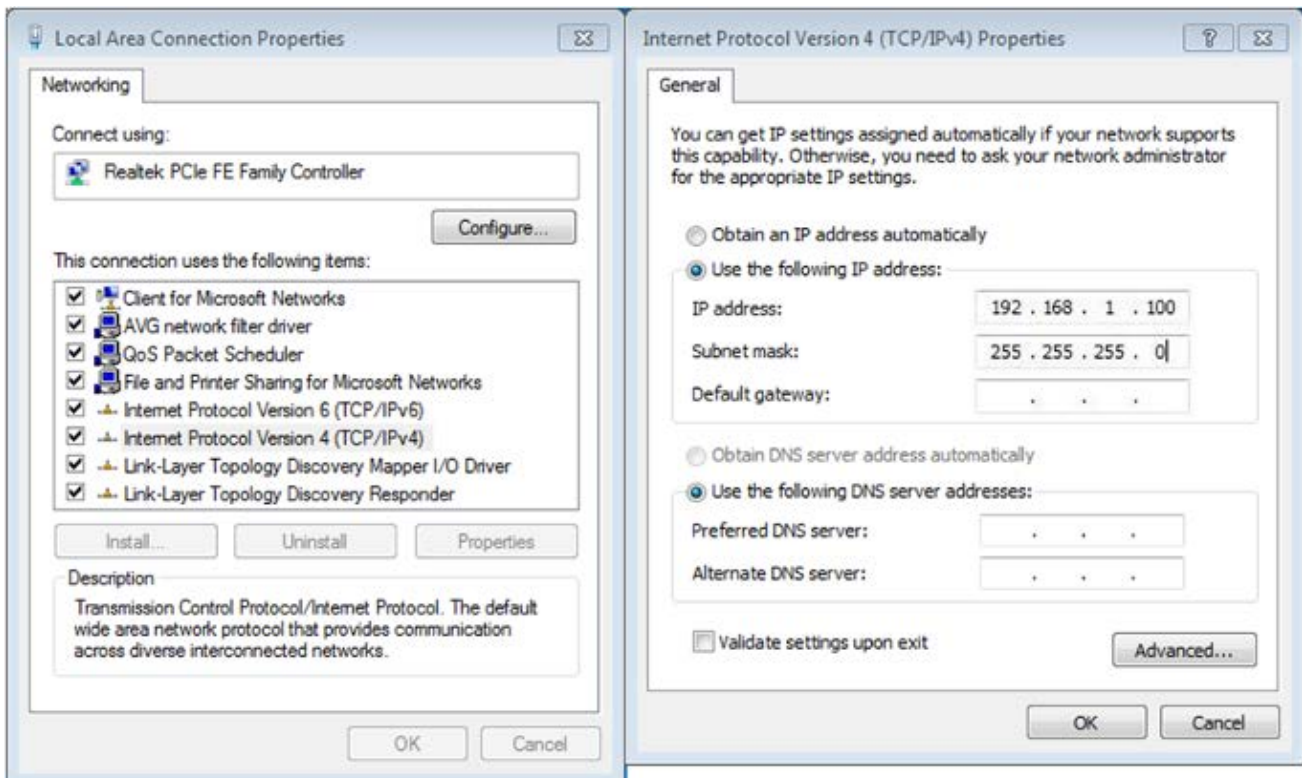

**Step 2.** In AP-2, change the default IP to the same IP range but different from AP-1. In this case, the IP is changed to **192.168.1.252**.



LAN Settings

IP 192.168.1.252

Subnet Mask 255.255.255.0

**Step 3.** In both APs, go to “Wizard” to configure it in **Super WDS** Mode.




Choose Operation Mode

Choose the mode you want to configure

Gateway Mode Repeater Mode WISP Mode AP Mode Super WDS

**Step 4.** Go to “Wireless” and press **Scan AP** to search the other AP. You can also enter the MAC address and SSID if you know what they are.

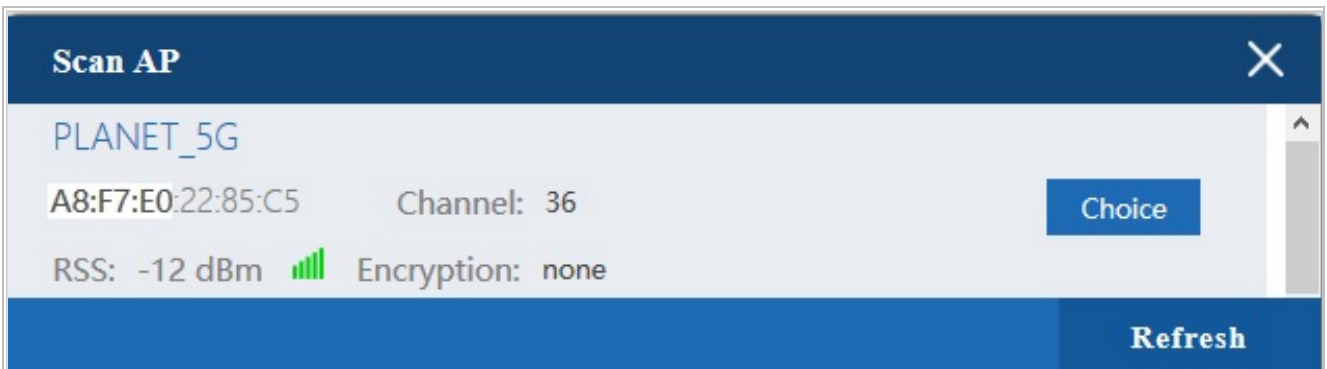

Scan AP

PLANET\_5G

A8:F7:E0:22:85:C5 Channel: 36 Choice

RSS: -12 dBm Encryption: none


Refresh

**Super WDS settings**

SSID <input type="text" value="PLANET_5G"/>	One-click Connection <input checked="" type="checkbox"/> ON
Band Width <input type="button" value="40MHz"/>	Channel <input type="button" value="5.180 GHz (Channel 36)"/> wireless analyzer
MAC1 <input type="text" value="A8:F7:EC:22:85:C5"/>	SSID1 <input type="text" value="PLANET_5G"/> <input type="button" value="Scan AP"/>
MAC2 <input type="text"/>	SSID2 <input type="text"/> <input type="button" value="Scan AP"/>
MAC3 <input type="text"/>	SSID3 <input type="text"/> <input type="button" value="Scan AP"/>
MAC4 <input type="text"/>	SSID4 <input type="text"/> <input type="button" value="Scan AP"/>
Encryption <input type="button" value="Open"/>	

**Step 5.** Click “Apply” to finish the setting.

**Step 6.** Click “Return home” to check WDS status.

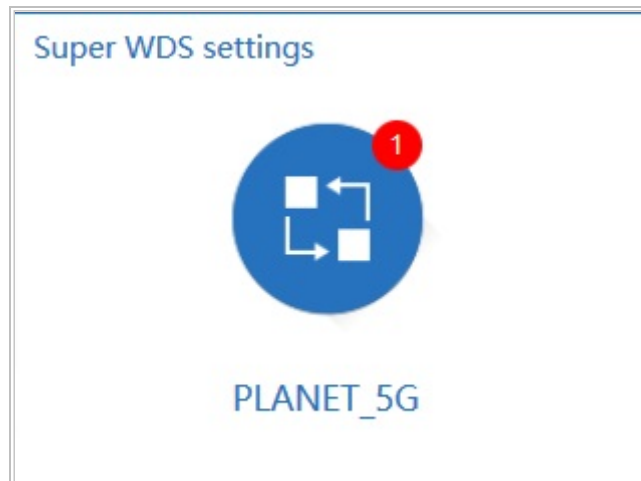

**Step 7.** Use command line tool to ping each other to ensure the link is successfully established.

From Site-1, ping 192.168.1.200; and in Site-2, ping 192.168.1.100.

```

C:\WINDOWS\system32\CMD.exe - ping 192.168.1.100 -t
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.0.100:
    Packets: Sent = 25, Received = 0, Lost = 25 (100% loss),
Control-C
^C
C:\Documents and Settings\Administrator>ping 192.168.1.100 -t

Pinging 192.168.1.100 with 32 bytes of data:

Request timed out.
Reply from 192.168.1.100: bytes=32 time=7ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128

```





---

The following hints should be noted:

- 1) The encryption method must be the same as that of both sites if configured.
  - 2) Both sites should be Line-of-Sight.
  - 3) For the short distance connection less than 1km, please reduce the "RF Output Power" of both sites.
  - 4) For the long distance connection over 1km, please adjust the "Distance" to the actual distance or double the actual distance.
-

## Appendix B: Troubleshooting

If you find the AP is working improperly or stop responding to you, please read this troubleshooting first before contacting the dealer for help. Some problems can be solved by yourself within a very short time.

Scenario	Solution
The AP is not responding to me when I want to access it by Web browser.	<ul style="list-style-type: none"> <li>a. Please check the connection of the power cord and the Ethernet cable of this AP. All cords and cables should be correctly and firmly inserted into the AP.</li> <li>b. If all LEDs on this AP are off, please check the status of power adapter, and make sure it is correctly powered.</li> <li>c. You must use the same IP address section which AP uses.</li> <li>d. Are you using MAC or IP address filter? Try to connect the AP by another computer and see if it works; if not, please reset the AP to the factory default settings by pressing the 'reset' button for over 7 seconds.</li> <li>e. Use the Smart Discovery Tool to see if you can find the AP or not.</li> <li>f. If you did a firmware upgrade and this happens, contact your dealer of purchase for help.</li> <li>g. If all the solutions above don't work, contact the dealer for help.</li> </ul>
I can't get connected to the Internet.	<ul style="list-style-type: none"> <li>a. Go to 'Status' -&gt; 'Internet Connection' menu on the router connected to the AP, and check Internet connection status.</li> <li>b. Please be patient, sometimes Internet is just that slow.</li> <li>c. If you've connected a computer to Internet directly before, try to do that again, and check if you can get connected to Internet with your computer directly attached to the device provided by your Internet service provider.</li> <li>d. Check PPPoE / L2TP / PPTP user ID and password entered in the router's settings again.</li> <li>e. Call your Internet service provider and check if there's something wrong with their service.</li> <li>f. If you just can't connect to one or more website, but you can still use other internet services, please check URL/Keyword filter.</li> <li>g. Try to reset the AP and try again later.</li> <li>h. Reset the device provided by your Internet service provider too.</li> </ul>

Scenario	Solution
	<ul style="list-style-type: none"> <li>i. Try to use IP address instead of host name. If you can use IP address to communicate with a remote server, but can't use host name, please check DNS setting.</li> </ul>
<p>I can't locate my AP by my wireless device.</p>	<ul style="list-style-type: none"> <li>a. 'Broadcast ESSID' set to off?</li> <li>b. Both two antennas are properly secured.</li> <li>c. Are you too far from your AP? Try to get closer.</li> <li>d. Please remember that you have to input ESSID on your wireless client manually, if ESSID broadcast is disabled.</li> </ul>
<p>File downloading is very slow or breaks frequently.</p>	<ul style="list-style-type: none"> <li>a. Are you using QoS function? Try to disable it and try again.</li> <li>b. Internet is slow sometimes. Please be patient.</li> <li>c. Try to reset the AP and see if it's better after that.</li> <li>d. Try to know what computers do on your local network. If someone's transferring big files, other people will think Internet is really slow.</li> <li>e. If this never happens before, call you Internet service provider to know if there is something wrong with their network.</li> </ul>
<p>I can't log into the web management interface; the password is wrong.</p>	<ul style="list-style-type: none"> <li>a. Make sure you're connecting to the correct IP address of the AP!</li> <li>b. Password is case-sensitive. Make sure the 'Caps Lock' light is not illuminated.</li> <li>c. If you really forget the password, do a hard reset.</li> </ul>
<p>The AP becomes hot</p>	<ul style="list-style-type: none"> <li>a. This is not a malfunction, if you can keep your hand on the AP's case.</li> <li>b. If you smell something wrong or see the smoke coming out from AP or A/C power adapter, please disconnect the AP and power source from utility power (make sure it's safe before you're doing this!), and call your dealer of purchase for help.</li> </ul>

## Appendix C: Glossary

- **802.11ac** - 802.11ac is a wireless networking standard in the 802.11 family (which is marketed under the brand name Wi-Fi), developed in the IEEE Standards Association process, providing high-throughput wireless local area networks (WLANs) on the 5 GHz band.
- **802.11n** - 802.11n builds upon previous 802.11 standards by adding MIMO (multiple-input multiple-output). MIMO uses multiple transmitter and receiver antennas to allow for increased data throughput via spatial multiplexing and increased range by exploiting the spatial diversity, perhaps through coding schemes like Alamouti coding. The Enhanced Wireless Consortium (EWC) [3] was formed to help accelerate the IEEE 802.11n development process and promote a technology specification for interoperability of next-generation wireless local area networking (WLAN) products.
- **802.11a** - 802.11a was an amendment to the IEEE 802.11 wireless local network specifications that defined requirements for an orthogonal frequency division multiplexing (OFDM) communication system. It was originally designed to support wireless communication in the unlicensed national information infrastructure (U-NII) bands (in the 5–6 GHz frequency range) as regulated in the United States by the Code of Federal Regulations, Title 47, Section 15.407.
- **802.11b** - The 802.11b standard specifies a wireless networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.
- **802.11g** - specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.
- **DDNS (Dynamic Domain Name System)** - The capability of assigning a fixed host and domain name to a dynamic Internet IP Address.
- **DHCP (Dynamic Host Configuration Protocol)** - A protocol that automatically configure the TCP/IP parameters for the all the PC(s) that are connected to a DHCP server.
- **DMZ (Demilitarized Zone)** - A Demilitarized Zone allows one local host to be exposed to the Internet for a special-purpose service such as Internet gaming or videoconferencing.
- **DNS (Domain Name System)** - An Internet Service that translates the names of websites into IP addresses.
- **Domain Name** - A descriptive name for an address or group of addresses on the Internet.
- **DSL (Digital Subscriber Line)** - A technology that allows data to be sent or received over existing traditional phone lines.
- **ISP (Internet Service Provider)** - A company that provides access to the Internet.

- **MTU (Maximum Transmission Unit)** - The size in bytes of the largest packet that can be transmitted.
- **NAT (Network Address Translation)** - NAT technology translates IP addresses of a local area network to a different IP address for the Internet.
- **PPPoE (Point to Point Protocol over Ethernet)** - PPPoE is a protocol for connecting remote hosts to the Internet over an always-on connection by simulating a dial-up connection.
- **SSID - A Service Set Identification** is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name.
- **WEP (Wired Equivalent Privacy)** - A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.
- **Wi-Fi** - A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see <http://www.wi-fi.net>), an industry standards group promoting interoperability among 802.11b devices.
- **WLAN (Wireless Local Area Network)** - A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.

## EC Declaration of Conformity

<b>English</b>	Hereby, <b>PLANET Technology Corporation</b> , declares that this <b>300Mbps 802.11n Wireless Outdoor AP</b> is in compliance with the essential requirements and other relevant provisions of Directive <b>2014/53/EU</b> .	<b>Lietuviškai</b>	Šiuo <b>PLANET Technology Corporation</b> , skelbia, kad <b>300Mbps 802.11n Wireless Outdoor AP</b> tenkina visus svarbiausius <b>2014/53/EU</b> direktyvos reikalavimus ir kitas svarbias nuostatas.
<b>Česky</b>	Společnost <b>PLANET Technology Corporation</b> , tímto prohlašuje, že tato <b>300Mbps 802.11n Wireless Outdoor AP</b> splňuje základní požadavky a další příslušná ustanovení směrnice <b>2014/53/EU</b> .	<b>Magyar</b>	A gyártó <b>PLANET Technology Corporation</b> , kijelenti, hogy ez a <b>300Mbps 802.11n Wireless Outdoor AP</b> megfelel az <b>2014/53/EK</b> irányelv alapkövetelményeinek és a kapcsolódó rendelkezéseknek.
<b>Dansk</b>	<b>PLANET Technology Corporation</b> , erklærer herved, at følgende udstyr <b>300Mbps 802.11n Wireless Outdoor AP</b> overholder de væsentlige krav og øvrige relevante krav i direktiv <b>2014/53/EU</b>	<b>Malti</b>	Hawnhekk, <b>PLANET Technology Corporation</b> , jiddikjara li dan <b>300Mbps 802.11n Wireless Outdoor AP</b> jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva <b>2014/53/EU</b>
<b>Deutsch</b>	Hiermit erkläre <b>PLANET Technology Corporation</b> , dass sich dieses Gerät <b>300Mbps 802.11n Wireless Outdoor AP</b> in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie <b>2014/53/EU</b> befindet". (BMW i)	<b>Nederlands</b>	Hierbij verklaart <b>PLANET Technology Corporation</b> , dat <b>300Mbps 802.11n Wireless Outdoor AP</b> in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn <b>2014/53/EU</b>
<b>Eestikeeles</b>	Käesolevaga kinnitab <b>PLANET Technology Corporation</b> , et see <b>300Mbps 802.11n Wireless Outdoor AP</b> vastab Euroopa Nõukogu direktiivi <b>2014/53/EU</b> põhinõuetele ja muudele olulistele tingimustele.	<b>Polski</b>	Niniejszym firma <b>PLANET Technology Corporation</b> , oświadcza, że <b>300Mbps 802.11n Wireless Outdoor AP</b> spełnia wszystkie istotne wymogi i klauzule zawarte w dokumencie „Directive <b>2014/53/EU</b> ”.
<b>Ελληνικά</b>	<i>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ</i> , <b>PLANET Technology Corporation</b> , <i>ΔΗΛΩΝΕΙ ΟΤΙ ΑΥΤΟ 300Mbps 802.11n Wireless Outdoor ΑΡΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU</i>	<b>Português</b>	<b>PLANET Technology Corporation</b> , declara que este <b>300Mbps 802.11n Wireless Outdoor AP</b> está conforme com os requisitos essenciais e outras disposições da Directiva <b>2014/53/EU</b> .
<b>Español</b>	Por medio de la presente, <b>PLANET Technology Corporation</b> , declara que <b>300Mbps 802.11n Wireless Outdoor AP</b> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva <b>2014/53/EU</b>	<b>Slovensky</b>	Výrobca <b>PLANET Technology Corporation</b> , týmto deklaruje, že táto <b>300Mbps 802.11n Wireless Outdoor AP</b> je v súlade so základnými požiadavkami a ďalšími relevantnými predpismi smernice <b>2014/53/EU</b> .
<b>Français</b>	Par la présente, <b>PLANET Technology Corporation</b> , déclare que les appareils du <b>300Mbps 802.11n Wireless Outdoor AP</b> sont conformes aux exigences essentielles et aux autres dispositions pertinentes de la directive <b>2014/53/EU</b>	<b>Slovensko</b>	<b>PLANET Technology Corporation</b> , s tem potrjuje, da je ta <b>300Mbps 802.11n Wireless Outdoor AP</b> skladen/a z osnovnimi zahtevami in ustreznimi določili Direktive <b>2014/53/EU</b> .
<b>Italiano</b>	Con la presente, <b>PLANET Technology Corporation</b> , dichiara che questo <b>300Mbps 802.11n Wireless Outdoor AP</b> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva <b>2014/53/EU</b> .	<b>Suomi</b>	<b>PLANET Technology Corporation</b> , vakuuttaa täten että <b>300Mbps 802.11n Wireless Outdoor AP</b> tyyppinen laite on direktiivin <b>2014/53/EU</b> oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
<b>Latviski</b>	Ar šo <b>PLANET Technology Corporation</b> , apliecinu, ka šī <b>300Mbps 802.11n Wireless Outdoor AP</b> atbilst Direktīvas <b>2014/53/EU</b> pamatprasībām un citiem atbilstošiem noteikumiem.	<b>Svenska</b>	Härmed intygar, <b>PLANET Technology Corporation</b> , att denna <b>300Mbps 802.11n Wireless Outdoor AP</b> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv <b>2014/53/EU</b> .

