


# User's Manual

## 802.11n 300Mbps Outdoor Wireless CPE

▶ WBS-202N/WBS-502N

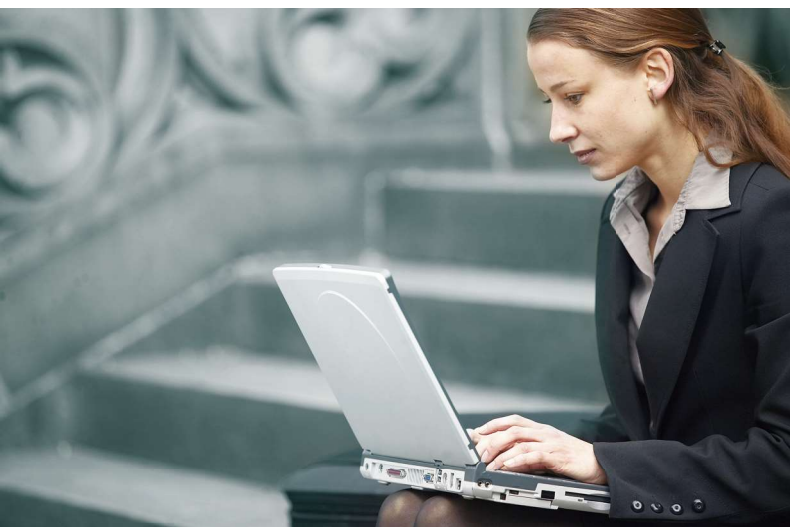

## Copyright

Copyright © 2020 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

## Federal Communication Commission Interference Statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

## FCC Caution

To assure continued compliance, use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 26cm between the radiator & your body.

## CE Compliance Statement

This device meets the RED 2014/53/EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection. The device complies with RF specifications when it is used at a safe distance of 20 cm from your body.

## Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

## National Restrictions

This device is intended for home and office use in all EU countries (and other countries following the EU directive 1999/5/EC) without any limitation except for the countries mentioned below:

Country	Restriction	Reasons/remarks
Bulgaria	None	General authorization required for outdoor use and public service
France	Outdoor use; limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz	Military Radiolocation use. Refarming of the 2.4 GHz band has been ongoing in recent years to allow current relaxed regulation. Full implementation planned 2012
Italy	None	If used outside of own premises, general authorization is required
Luxembourg	None	General authorization required for network and service supply(not for spectrum)
Norway	Implemented	This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund
Russian Federation	None	Only for indoor applications

**Note:** Please don't use the product outdoors in France.

## WEEE regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

## **Revision**

User Manual of PLANET 802.11n 300Mbps Outdoor Wireless CPE

Model: WBS-202N / WBS-502N

Rev: 3.0 (July, 2020)

Part No. EM-WBS-202N\_WBS-502N \_v3.0

# CONTENTS

<b>Chapter 1.Product Introduction .....</b>	<b>1</b>
<b>1.1 Package Contents .....</b>	<b>1</b>
<b>1.2 Product Description .....</b>	<b>2</b>
<b>1.3 Product Features .....</b>	<b>5</b>
<b>1.4 Product Specifications .....</b>	<b>6</b>
<b>Chapter 2.Hardware Installation .....</b>	<b>9</b>
<b>2.1 Product Outlook .....</b>	<b>9</b>
Port and Button .....	11
Hardware Description .....	11
<b>Chapter 3.Connecting to the CPE .....</b>	<b>12</b>
<b>3.1 System Requirements .....</b>	<b>12</b>
<b>3.2 Installing the CPE .....</b>	<b>12</b>
<b>Chapter 4.Quick Installation Guide .....</b>	<b>14</b>
<b>4.1 Manual Network Setup -- TCP/IP Configuration .....</b>	<b>14</b>
Configuring the IP Address Manually .....	14
<b>4.2 Starting Setup in the Web UI .....</b>	<b>18</b>
<b>Chapter 5.Configuring the CPE .....</b>	<b>19</b>
<b>5.1 Wizard .....</b>	<b>20</b>
<b>5.2 Gateway Mode .....</b>	<b>20</b>
WAN Settings .....	21
Wireless .....	23
<b>5.3 Super WDS Mode .....</b>	<b>24</b>
<b>5.4 WISP Mode .....</b>	<b>28</b>
<b>5.5 AP Mode .....</b>	<b>30</b>
<b>5.6 Repeater Mode .....</b>	<b>32</b>
<b>5.7 Wi-Fi .....</b>	<b>35</b>
2.4G/5G Wi-Fi .....	35
MAC ACL .....	37
Wi-Fi Timer Off .....	38
Advanced .....	39
<b>5.8 Network .....</b>	<b>41</b>
<b>5.9 Security .....</b>	<b>47</b>
<b>5.10 Manage .....</b>	<b>54</b>
<b>Chapter 6.Quick Connection to a Wireless Network .....</b>	<b>65</b>
<b>6.1 Windows XP (Wireless Zero Configuration) .....</b>	<b>65</b>

6.2	Windows 7 (WLAN AutoConfig).....	67
6.3	Mac OS X 10.x.....	70
6.4	iPhone/iPod Touch/iPad .....	74
Appendix A: Planet Smart Discovery Utility.....		77
Appendix B: FAQs.....		78
	Q1: How to set up the AP Client Connection.....	78
	Q2: How to set up the WDS Connection .....	83
Appendix C: Troubleshooting.....		88
Appendix D: Glossary.....		90

# FIGURE

<b>FIGURE 2-1</b> WBS-202N/502N FRONT SIDE.....	9
<b>FIGURE 2-2</b> WBS-202N/502N REAR SIDE .....	9
<b>FIGURE 2-3</b> WBS-202N RIGHT SIDE .....	10
<b>FIGURE 2-4</b> WBS-502N RIGHT SIDE .....	10
<b>FIGURE 2-5</b> WBS-202N/WBS-502N INTERFACE .....	11
<b>FIGURE 3-1</b> CONNECTING THE ANTENNA.....	12
<b>FIGURE 3-2</b> CONNECTING THE ETHERNET CABLE .....	13
<b>FIGURE 3-3</b> CONNECTING THE PoE INJECTOR.....	13
<b>FIGURE 4-1</b> TCP/IP SETTING .....	15
<b>FIGURE 4-2</b> WINDOWS START MENU .....	16
<b>FIGURE 4-3</b> SUCCESSFUL RESULT OF PING COMMAND .....	16
<b>FIGURE 4-4</b> FAILED RESULT OF PING COMMAND .....	17
<b>FIGURE 4-5</b> LOGIN BY DEFAULT IP ADDRESS.....	18
<b>FIGURE 4-6</b> LOGIN WINDOW .....	18
<b>FIGURE 5-1</b> MAIN MENU .....	19
<b>FIGURE 5-2</b> OPERATION MODE .....	20
<b>FIGURE 5-3</b> GATEWAY MODE.....	20
<b>FIGURE 5-4</b> GATEWAY- STATIC IP.....	21
<b>FIGURE 5-5</b> GATEWAY – PPPoE (ADSL) .....	22
<b>FIGURE 5-6</b> GATEWAY – DHCP.....	23
<b>FIGURE 5-7</b> GATEWAY – WIRELESS.....	23
<b>FIGURE 5-13</b> WISP MODE .....	28
<b>FIGURE 5-16</b> AP MODE.....	30
<b>FIGURE 5-24</b> MAC ACL.....	37
<b>FIGURE 5-30</b> VLAN SETTINGS .....	42
<b>FIGURE 5-33</b> DHCP.....	45
<b>FIGURE 5-34</b> WAN ADVANCED SETTINGS .....	45
<b>FIGURE 6-1</b> SYSTEM TRAY – WIRELESS NETWORK ICON .....	65
<b>FIGURE 6-2</b> CHOOSING A WIRELESS NETWORK .....	65
<b>FIGURE 6-3</b> ENTERING THE NETWORK KEY .....	66
<b>FIGURE 6-4</b> CHOOSING A WIRELESS NETWORK -- CONNECTED .....	66
<b>FIGURE 6-5</b> NETWORK ICON .....	67
<b>FIGURE 6-6</b> WLAN AUTOCONFIG .....	67
<b>FIGURE 6-7</b> TYPING THE NETWORK KEY .....	68
<b>FIGURE 6-8</b> CONNECTING TO A NETWORK .....	68
<b>FIGURE 6-9</b> CONNECTED TO A NETWORK.....	69
<b>FIGURE 6-10</b> MAC OS – NETWORK ICON.....	70
<b>FIGURE 6-11</b> HIGHLIGHTING AND SELECTING THE WIRELESS NETWORK.....	70
<b>FIGURE 6-12</b> ENTER THE PASSWORD .....	71
<b>FIGURE 6-13</b> CONNECTED TO THE NETWORK .....	71
<b>FIGURE 6-14</b> SYSTEM PREFERENCES .....	72
<b>FIGURE 6-15</b> SYSTEM PREFERENCES -- NETWORK.....	72





<b>FIGURE 6-16</b> SELECTING THE WIRELESS NETWORK .....	73
<b>FIGURE 6-17</b> IPHONE – SETTINGS ICON.....	74
<b>FIGURE 6-18</b> WI-FI SETTING .....	74
<b>FIGURE 6-19</b> WI-FI SETTING – NOT CONNECTED .....	75
<b>FIGURE 6-20</b> TURNING ON WI-FI.....	75
<b>FIGURE 6-21</b> IPHONE -- ENTERING THE PASSWORD.....	76
<b>FIGURE 6-22</b> IPHONE -- CONNECTED TO THE NETWORK .....	76



## Chapter 1. Product Introduction

### 1.1 Package Contents

Thank you for choosing PLANET WBS-202N or WBS-502N Wireless AP. Please verify the contents inside the package box.

Package Contents of WBS-202N/WBS-502N			
WBS-202N / WBS-502N	Quick Guide	Ethernet Cable	Mounting Strap
			



If there is any item missing or damaged, please contact the seller immediately.


## 1.2 Product Description

### Flexible and Reliable Outdoor Characteristics

With the standard **IEEE 802.3at** Power over Ethernet (PoE) design, the WBS-202N and WBS-502N (outdoor wireless CPE) can be easily installed in the areas where power outlets are not available. The outdoor wireless CPE is definitely suitable for wireless IP surveillance, and bridge link of building to building and backbone of public service. Additionally, the **self-healing** capability keeps connection alive all the time. With the **IP55-rated** outdoor enclosure, the outdoor wireless CPE can perform normally under rigorous weather conditions, meaning it can be installed in any harsh, outdoor environments


### Designed for Various Requirements

The outdoor wireless CPE is specially designed for long-distance outdoor surveillance and wireless backhaul solutions that are capable of establishing stable bridge connection through the embedded antenna. To provide maximum performance, the outdoor wireless CPE can implement up to 8 operation modes where a multitude of applications in communities, warehouses, campuses, harbors, etc. can be made.

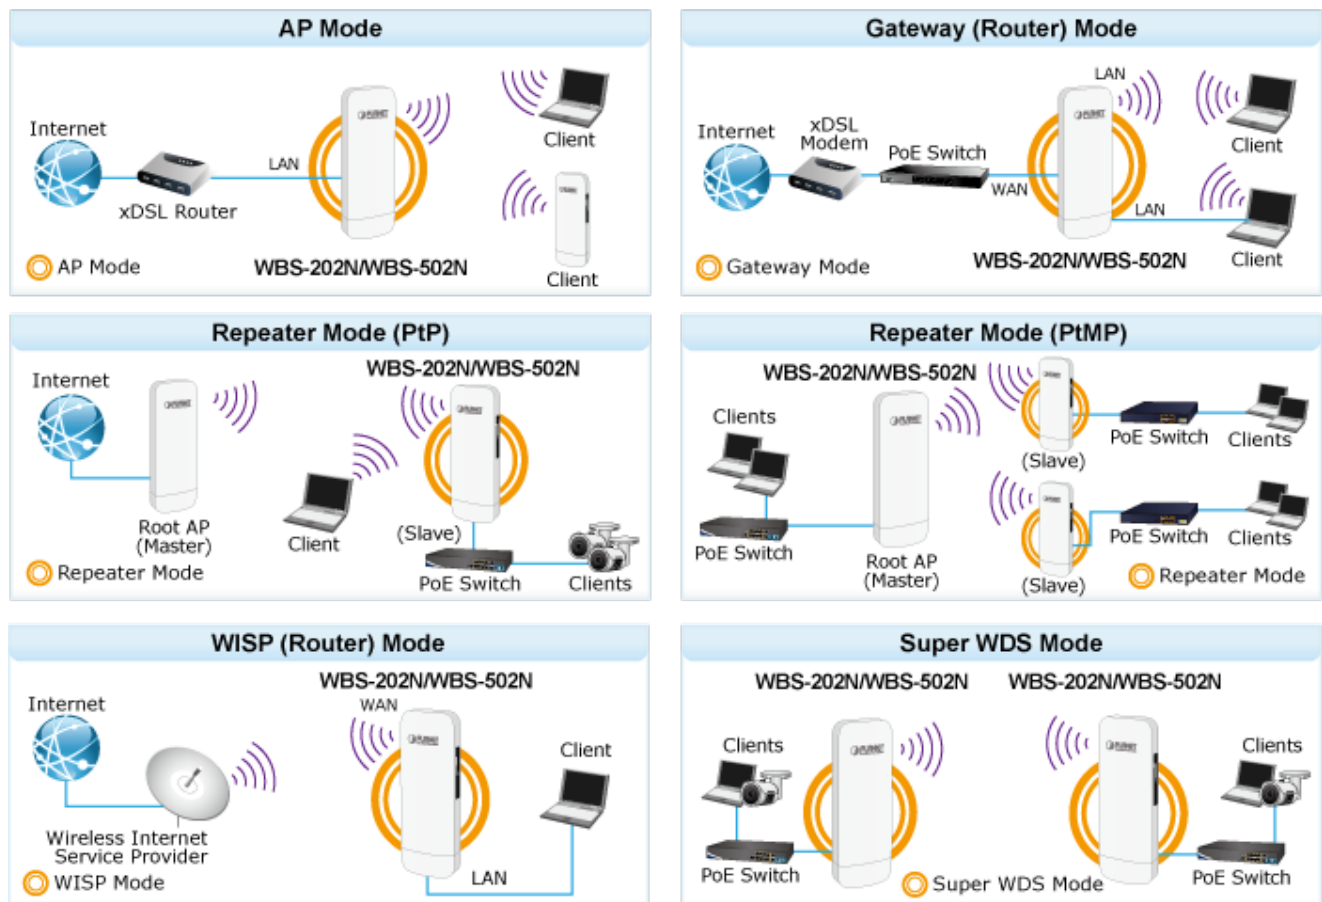

### Multiple SSIDs with VLAN Tagging

The outdoor wireless CPE supports WPA/WPA2, and the 802.1X RADIUS authentication to secure the wireless connection. Besides, the supported IEEE 802.1Q VLAN allows multiple VLAN tags to be mapped to multiple SSIDs to distinguish the wireless access. This makes it possible for the outdoor wireless CPE to work with managed Ethernet switches to have VLANs assigned to a different access level and authority.

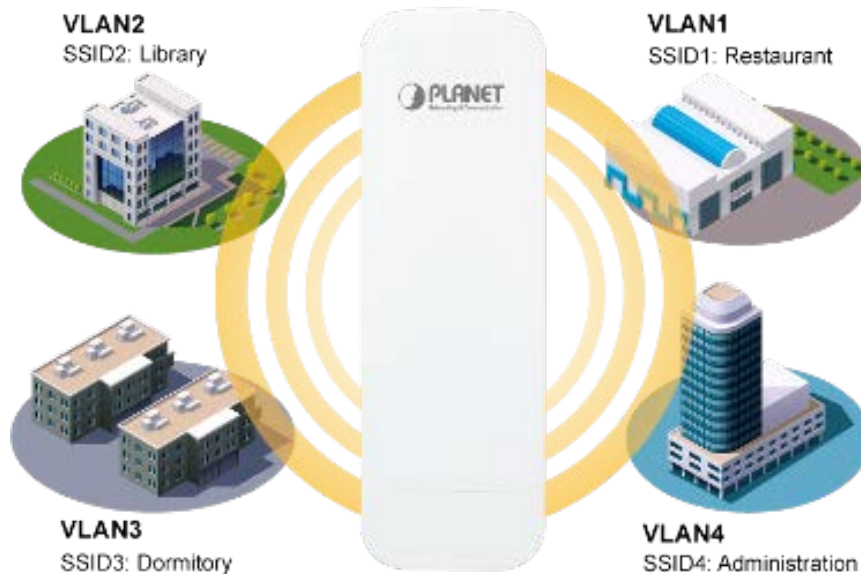

**Multi-SSIDs + VLANs**

### 3 Simple Steps to Set Up WDS


Without needing to enter the Web interface for configuration, the outdoor wireless CPE needs three simple steps to establish the WDS PtP connection without any difficulty. By just clicking the **Pair** button on the WBS-202N and within 2 minutes, you can connect two WBS-202Ns without complicated configuration.

## 3 Steps to Set Up PtP Connection



### Optimized Efficiency in AP Management

The brand-new GUI configuration wizard helps the system administrator easily set up the outdoor wireless CPE step by step. Besides, the built-in Wi-Fi analyzer provides real-time channel utilization to prevent channel overlapping to assure greater performance. With the automatic transmission power mechanism, distance control and scheduling reboot setting, the outdoor wireless CPE is easier for the administrator to deploy and manage without on-site maintenance. Moreover, you can simply use PLANET AP controller and **SAPC (Smart AP Control)**, to deliver wireless profiles to multiple APs simultaneously, thus making the central management simple.

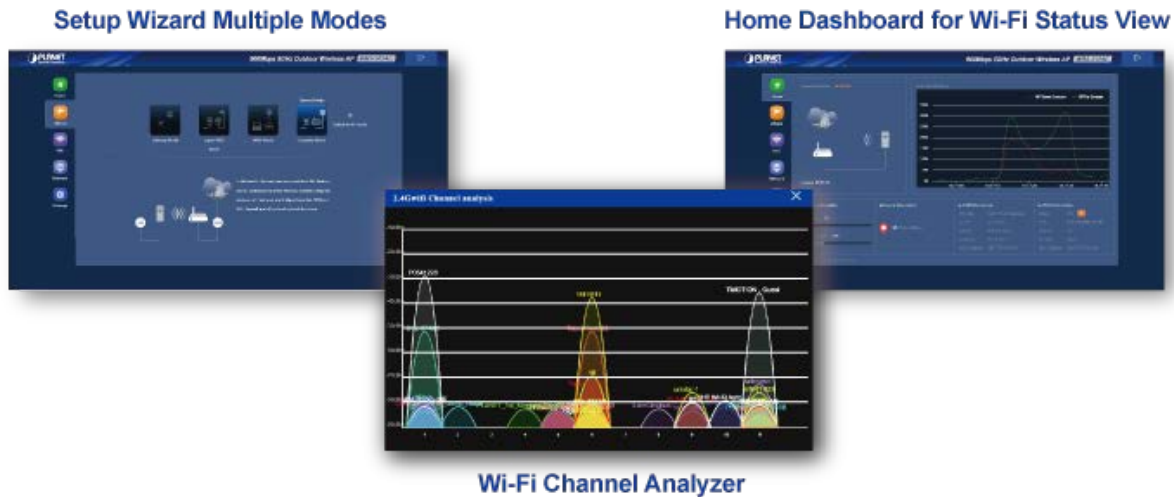

## 1.3 Product Features

- **Industrial Compliant Wireless LAN and LAN**
  - Compliant with the IEEE 802.11b/g/n and IEEE 802.11a/n wireless technology
  - 2T2R architecture with data rate of up to 300Mbps
  - Equipped with two 10/100Mbps RJ45 ports with auto MDI/MDI-X supported
- **Fixed Network Broadband Router**
  - Supported WAN connection types: DHCP, Static IP, PPPoE
  - Supports Port Forwarding and DMZ for various networking applications
  - Supports DHCP server in Gateway/WISP mode
- **RF Interface Characteristics**
  - Built-in 14dBi dual-polarization antenna (WBS-202N)
  - Built-in 15dBi dual-polarization antenna (WBS-502N)
  - High output power with multiply-adjustable transmit power control
- **Outdoor Environmental Characteristics**
  - IP55 rating
  - IEEE 802.3at Power over Ethernet design
  - Operating temperature: -20~70 degrees C
- **Multiple Operation Modes and Wireless Features**
  - Multiple operation modes: AP, Gateway, Repeater, WDS, WISP
  - WMM (Wi-Fi multimedia) provides higher priority to multimedia transmitting over wireless
  - Coverage threshold to limit the weak signal of clients occupying session
  - Real-time Wi-Fi channel analysis chart and client limit control for better performance
- **Secure Network Connection**
  - Full encryption supported: WPA/WPA2, WPA-PSK/WPA2-PSK and 802.1X RADIUS authentication
  - Supports 802.1Q VLAN and SSID-to-VLAN mapping
  - Supports IP/Port/MAC address/URL filtering, DoS, SPI Firewall
  - Supports DMZ and Port Forwarding
  - Bandwidth control per IP address to increase network stability
- **Easy Installation and Management**
  - 3 simple steps to establish WDS connection easily
  - Supports PLANET AP Controllers in AP mode
  - Easy discovery by PLANET Smart Discovery
  - Self-healing mechanism through system auto reboot setting
  - System status monitoring through remote Syslog Server
  - Supports PLANET DDNS/ Easy DDNS

## 1.4 Product Specifications

Model Name	WBS-202N			WBS-502N		
Description	WBS-202N: 2.4GHz 802.11n 300Mbps Outdoor Wireless CPE WBS-502N: 5GHz 802.11n 300Mbps Outdoor Wireless CPE					
Hardware Features						
Interfaces	Wireless IEEE802.11b/g/n, 2T2R			Wireless IEEE 802.11a/n, 2T2R		
	PoE: 1 x 10/100BASE-TX, auto-MDI/MDIX, 802.3at PoE In LAN: 1x 10/100BASE-TX, auto-MDI/MDIX					
Antennas	Built-in 14dBi directional antenna with dual polarization			Built-in 15dBi directional antenna with dual polarization		
Button	Reset/Pair button, WDS Switch					
Dimensions	87 x 38 x 260mm					
Weight	405g					
Power Requirements	48V 0.5A, IEEE 802.3at PoE+					
Power Consumption	< 13W					
Wireless Interface Specifications						
Standard	IEEE 802.11b/g/n IEEE 802.11i IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control			IEEE 802.11a/n IEEE 802.11i IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control		
Media Access Control	CSMA/CA					
Modulation	802.11g/n: OFDM (BPSK/ QPSK/ 16QAM/ 64QAM) 802.11b: DSSS (DBPSK/ DQPSK/ CCK)			802.11a/n: OFDM (BPSK/ QPSK/ 16QAM/ 64QAM)		
Frequency Band	FCC: 2.412~2.462GHz ETSI: 2.412~2.472GHz			FCC: 5.180~5.240GHz, 5.745~5.825GHz ETSI: 5.180~5.700GHz		
Operating Channels	FCC: 1~11 Channels ETSI: 1~13 Channels			FCC: 36, 40, 44, 48, 149, 153, 157, 161, 165 (9 channels) ETSI: 36, 40, 44, 48, 100, 104, 108, 112, 116, 132, 136, 140 (16 channels)  <b>5GHz channel list will vary in different countries according to their regulations.</b>		
Max. Transmit Power (dBm)	FCC: up to 29 ± 1dBm ETSI: < 20dBm (EIRP)			FCC: up to 27 ± 2dBm ETSI: < 20dBm (EIRP)		
	Network Mode	Data Rate	Receive Sensitivity (dBm)	Network Mode	Data Rate	Receive Sensitivity (dBm)
	802.11b	1Mbps	-95			

		11Mbps	-90			
	802.11g	6Mbps	-90	802.11a	6Mbps	-92
		54Mbps	-72		54Mbps	-75
	802.11n HT20	MCS0/MCS 8	-90	802.11n HT20	MCS0/MC S8	-91
		MCS7/MCS 15	-72/-68		MCS7/MC S15	-72
	802.11n HT40	MCS0/MCS 8	-90	802.11n HT40	MCS0/MC S8	-88
		MCS7/MCS 15	-72/-68		MCS7/MC S15	-70
	Environment & Certification					
Operating Temperature	-20 ~ 70 degrees C					
Operating Humidity	5 ~ 90% (non-condensing)					
IP Level	IP55					
ESD Protection	± 8kV air-gap discharge ± 4kV contact discharge					
Surge Protection	± 4kV					
Regulatory	CE, RoHS					
Software						
LAN	Static IP					
	Supports IP-MAC binding					
WAN Type (GW/WISP mode)	■ Static IP ■ Dynamic IP ■ PPPoE					
Wireless Modes	■ Access Point ■ Gateway ■ Repeater ■ Super WDS (AP/Bridge/Station) ■ WISP					
Channel Width	20MHz, 40MHz					
Encryption Type	WPA, WPA-PSK, WPA2, WPA2-PSK, 802.1X					
Wireless Security	Enable/Disable SSID Broadcast					
	Wireless MAC address filtering					
	User Isolation					
Max. SSIDs	4					
Max. Wireless Clients	64 per radio (50 is suggested, depending on usage)					
Max. WDS Peers	4 (Up to 3 peers )					

<b>Wireless QoS</b>	Supports Wi-Fi Multimedia (WMM)
<b>Wireless Advanced</b>	Auto Channel Selection
	5-level Transmit Power Control (100%, 75%, 50%, 25%, 12.5%)
	Client Limit Control, Coverage Threshold
	Distance control (Auto Ack Timeout)
	Wi-Fi channel analysis chart
	Fast Roaming
<b>Status Monitoring</b>	Device status, wireless client List
	PLANET Smart Discovery
	DHCP client table
	System Log supports remote syslog server
<b>VLAN</b>	IEEE 802.1Q VLAN (VID: 3~4094)
	SSID-to-VLAN mapping up to 4 SSIDs
<b>Self-healing</b>	Supports auto reboot settings per day/hour
<b>Management</b>	Remote management through PLANET DDNS/ Easy DDNS
	Configuration backup and restore
	Supports UPnP
	Supports IGMP Proxy
	Supports PPTP/L2TP/IPSec VPN Pass-through
	SNMP v1/v2c/v3 support, MIB I/II, Private MIB
<b>Central Management</b>	Applicable controllers: WAPC-500, WAPC-1000 and Smart AP Control(SAPC)



## Chapter 2. Hardware Installation

### 2.1 Product Outlook

#### **WBS-202N/502N**

- **Dimensions:** 87 x 38 x 260mm

##### **Front Side**



**Figure 2-1** WBS-202N/502N Front Side

##### **Rear Side**



**Figure 2-2** WBS-202N/502N Rear Side

## Right Side



Figure 2-3 WBS-202N Right Side



Figure 2-4 WBS-502N Right Side

## LED Definition

LED	State	Meaning
Power	On	The device is powered on
	Off	The device is powered off
WAN Port	On	Port linked
	Blinking	Data is transmitting or receiving data
	Off	No link
LAN Port	On	Port linked
	Blinking	Data is transmitting or receiving data
	Off	No link
WLAN	On	The wireless radio is on
	Blinking	Data is transmitting or receiving over wireless
	Off	The wireless radio is off

## Port and Button

It provides a simple interface monitoring the AP. Figure 2-5 shows the hardware interface of the WBS-202N/502N.

### WBS-202N/502N Hardware Interface:

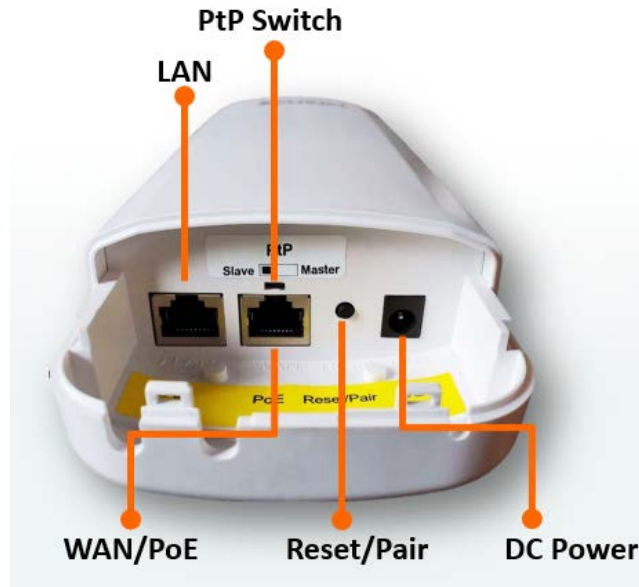


Figure 2-5 WBS-202N/WBS-502N Interface

## Hardware Description

### Hardware Interface Definition

Object	Description
PoE LAN Port	10/100Mbps RJ45 port, auto MDI/MDI-X
LAN Port	10/100Mbps RJ45 port, auto MDI/MDI-X
PtP Switch	Position " <b>Master</b> " to " <b>Slave</b> " on the AP.
Reset/Pair Button	Press and hold the <b>Reset</b> button on the device for over 15 seconds to return to the factory default setting. Press the " <b>Reset/Pair</b> " button on both APs to be connected in 2 minutes. The connection has been successfully established.

## Chapter 3. Connecting to the CPE

### 3.1 System Requirements

- Broadband Internet Access Service (Cable/xDSL/Ethernet connection)
- One IEEE 802.3at PoE switch (supply power to the WBS-202N/502N)
- PCs with a working Ethernet adapter and an Ethernet cable with RJ45 connectors
- PCs running Windows 98/ME, NT4.0, 2000/XP, Windows Vista / Win 7, MAC OS 9 or later, Linux, UNIX or other platforms compatible with **TCP/IP** protocols



1. The CPE in the following instructions refers to PLANET WBS-202N/WBS-502N.
2. It is recommended to use Internet Explorer 11, Firefox or Chrome to access the CPE.

### 3.2 Installing the CPE

Before installing the CPE, make sure your PoE switch is connected to the Internet through the broadband service successfully at this moment. If there is any problem, please contact your local ISP.

Please install the AP according to the following steps. Don't forget to pull out the power plug and keep your hands dry.

**Step 1.** Push the latch on the bottom of the Outdoor Wireless CPE to remove the sliding cover.


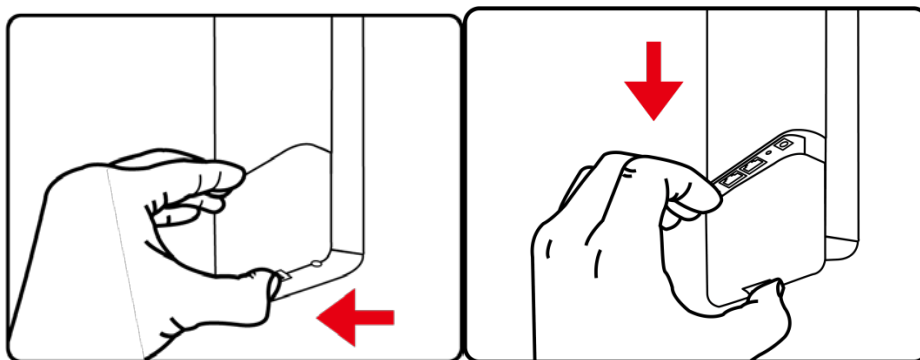



Figure 3-1 Connecting the Antenna

**Step 2.** Plug the RJ45 Ethernet cable into the PoE port of the Outdoor Wireless CPE. Then, slide back the cover to finish the installation.

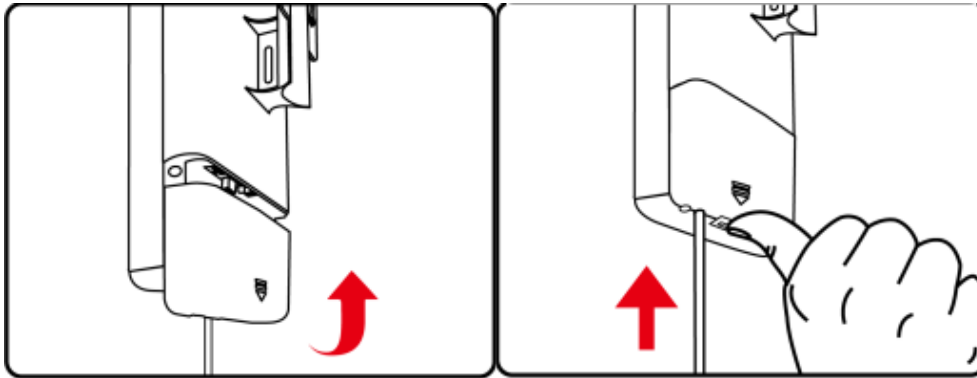

**Figure 3-2** Connecting the Ethernet cable

**Step 3.** Place the mounting strap through the slot on the back of the Outdoor Wireless CPE and then around the pole. Tighten the mounting strap to secure the Outdoor Wireless CPE.

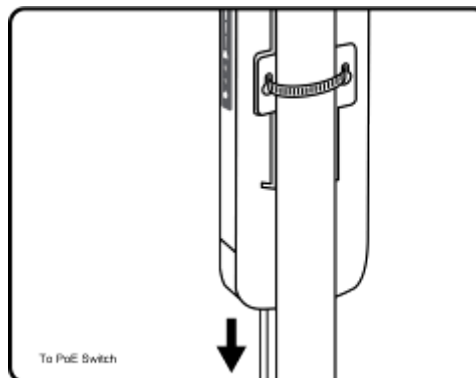

**Figure 3-3** Connecting the PoE injector

## Chapter 4. Quick Installation Guide

This chapter will show you how to configure the basic functions of your CPE within minutes.



A computer with wired Ethernet connection to the Wireless CPE is required for the first-time configuration.

### 4.1 Manual Network Setup -- TCP/IP Configuration

The default IP address of the WBS-202N/WBS-502N is **192.168.1.253**. And the default Subnet Mask is 255.255.255.0. These values can be changed as you want. In this guide, we use all the default values for description.


Connect the WBS-202N/WBS-502N with your PC by an Ethernet cable plugging in LAN port on one side and in LAN port of PC on the other side. Please power on the WBS-202N/WBS-502N by PoE switch through the PoE port.

In the following sections, we'll introduce how to install and configure the TCP/IP correctly in **Windows 10**. And the procedures in other operating systems are similar. First, make sure your Ethernet Adapter is working, and refer to the Ethernet adapter manual if needed.

#### Configuring the IP Address Manually

Summary:

- Set up the TCP/IP Protocol for your PC.
  - Configure the network parameters. The IP address is 192.168.1.xxx (If the default IP address of the WBS-202N/WBS-502N is 192.168.1.253, and the DSL router is 192.168.1.254, the "xxx" can be configured to any number from 1 to 252.) and subnet mask is 255.255.255.0.
- 1 Select **Use the following IP address**, and then configure the IP address of the PC.
  - 2 For example, as the default IP address of the WBS-202N/WBS-502N is 192.168.1.253 and the DSL router is 192.168.1.254, you may choose from 192.168.1.1 to 192.168.1.252.

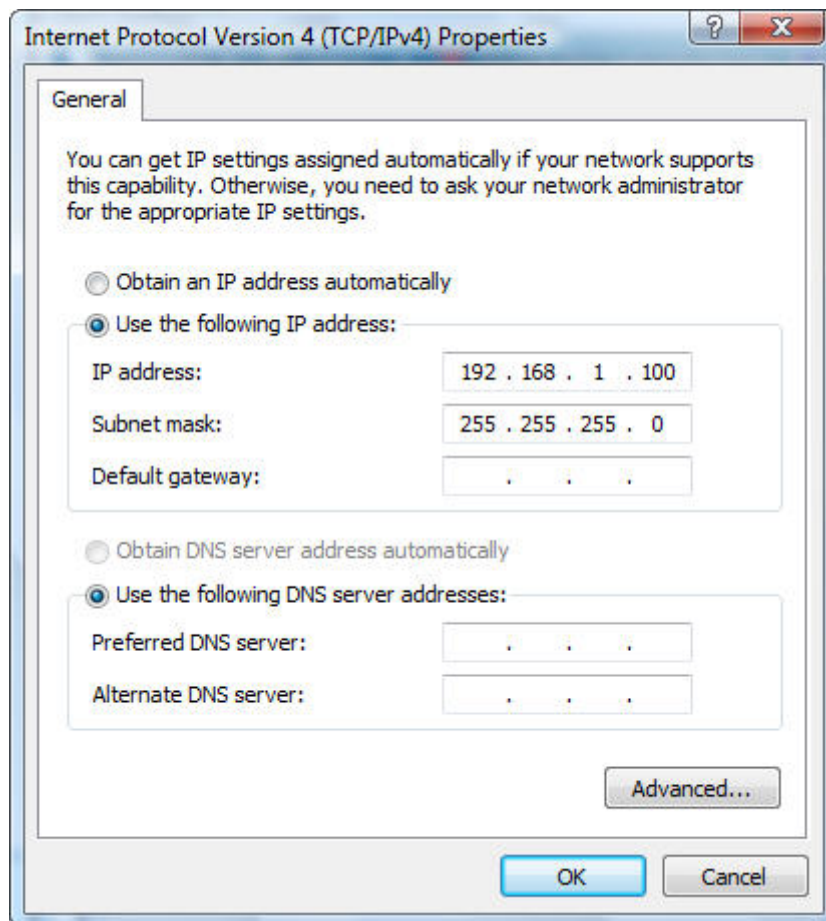

**Figure 4-1** TCP/IP Setting

Now click **OK** to save your settings.

Now, you can run the ping command in the **command prompt** to verify the network connection between your PC and the AP. The following example is in **Windows 10** OS. Please follow the steps below:

1. Click on **Start > Run**.
2. Type "**cmd**" in the Search box.

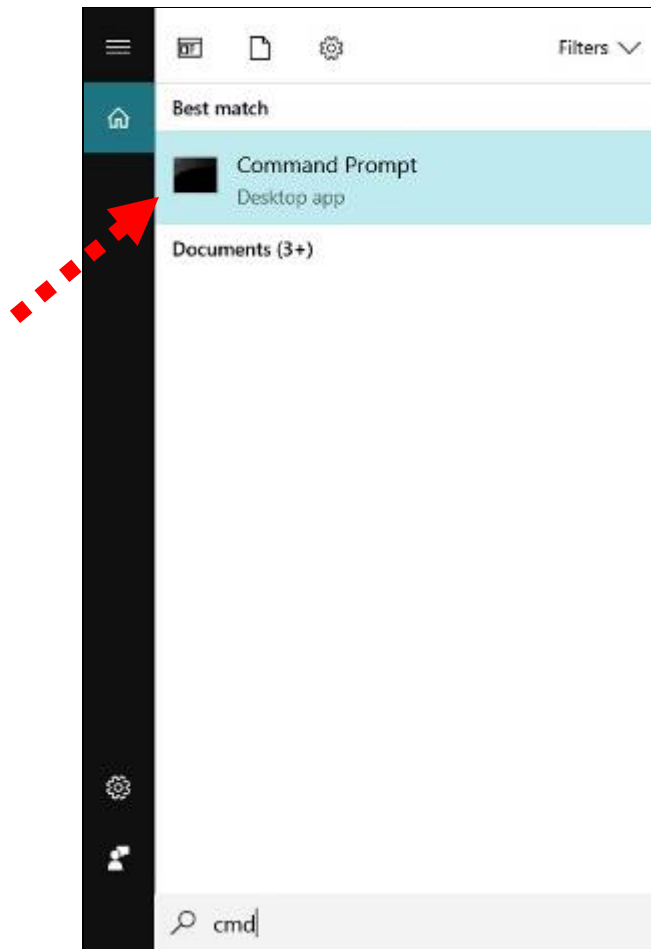
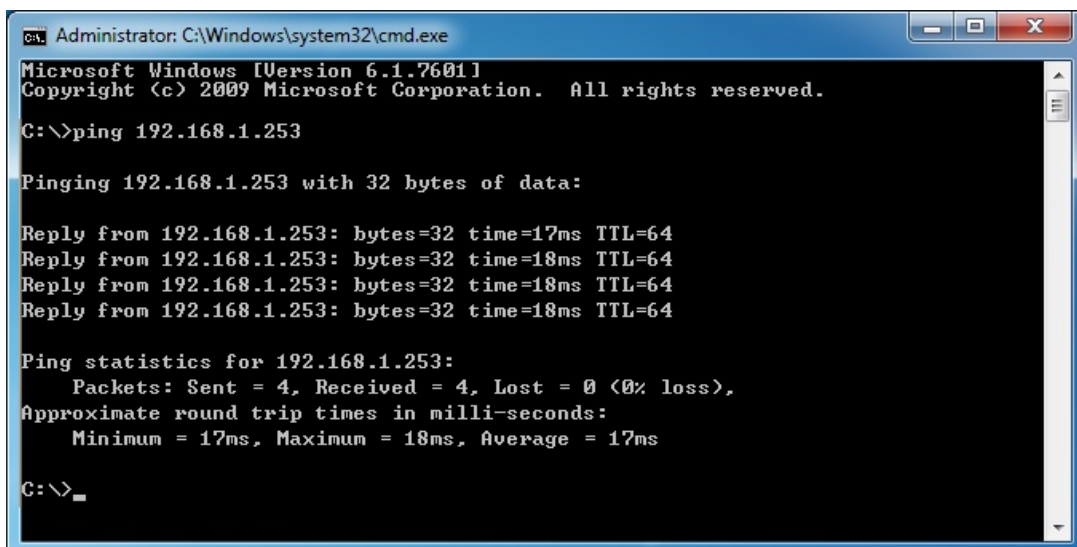


Figure 4-2 Windows Start Menu

3. Open a command prompt, type ping **192.168.1.253** and then press **Enter**.
  - ◆ If the result displayed is similar to **Figure 4-3**, it means the connection between your PC and the AP has been established well.

The image is a screenshot of a Windows Command Prompt window titled 'Administrator: C:\Windows\system32\cmd.exe'. It shows the output of the command 'ping 192.168.1.253'. The output indicates that four packets were sent and all were received, with a 0% loss. The round trip times are listed as Minimum = 17ms, Maximum = 18ms, and Average = 17ms.

```
C:\>ping 192.168.1.253

Pinging 192.168.1.253 with 32 bytes of data:

Reply from 192.168.1.253: bytes=32 time=17ms TTL=64
Reply from 192.168.1.253: bytes=32 time=18ms TTL=64
Reply from 192.168.1.253: bytes=32 time=18ms TTL=64
Reply from 192.168.1.253: bytes=32 time=18ms TTL=64


Ping statistics for 192.168.1.253:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 17ms, Maximum = 18ms, Average = 17ms

C:\>
```

Figure 4-3 Successful Result of Ping Command



- ◆ If the result displayed is similar to **Figure 4-4**, it means the connection between your PC and the AP has failed.

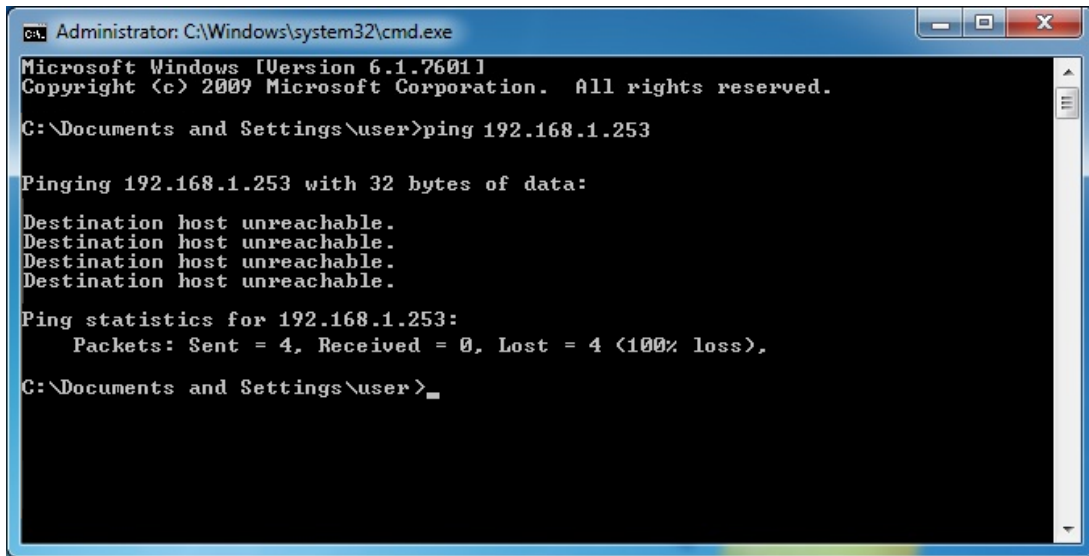

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Documents and Settings\user>ping 192.168.1.253

Pinging 192.168.1.253 with 32 bytes of data:

Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.1.253:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),

C:\Documents and Settings\user>
```


**Figure 4-4** Failed Result of Ping Command

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your AP. Some firewall software programs may block a DHCP request on newly installed adapters.

## 4.2 Starting Setup in the Web UI


It is easy to configure and manage the CPE with the web browser.

**Step 1.** To access the configuration utility, open a web-browser and enter the default IP address <http://192.168.1.253> in the web address field of the browser.

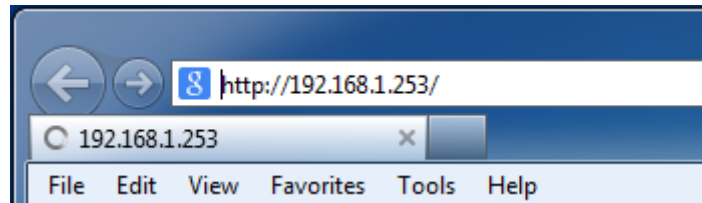

**Figure 4-5** Login by Default IP Address

After a moment, a login window will appear. Enter **admin** for the password in lower case letters. Then click **LOGIN** or press the **Enter** key.

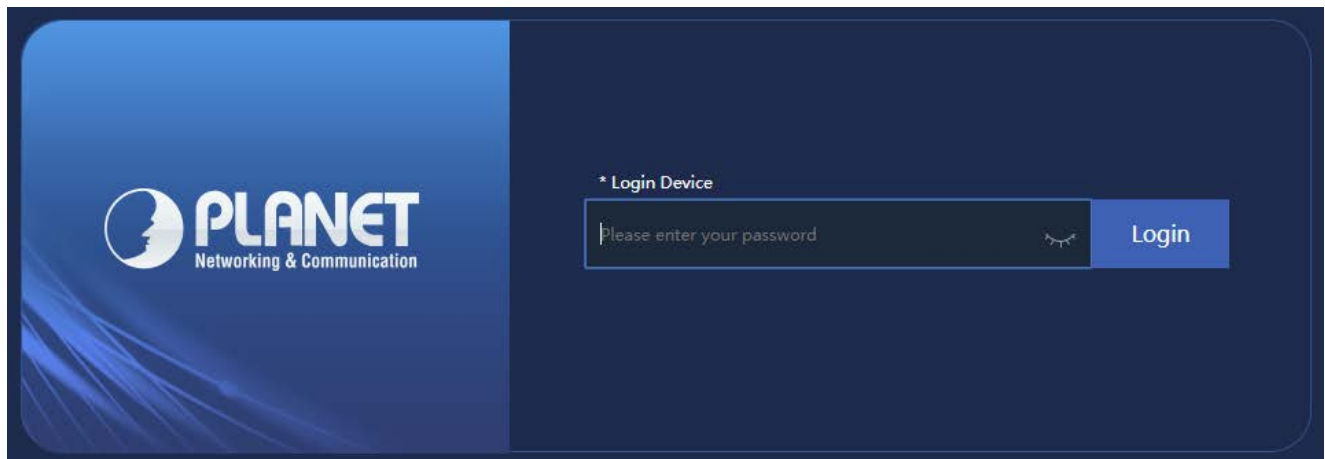

**Figure 4-6** Login Window

Default IP Address: **192.168.1.253**

Default Password: **admin**



Note

If the above screen does not pop up, it may mean that your web-browser has been set to a proxy. Go to Tools menu> Internet Options> Connections> LAN Settings on the screen that appears, uncheck **Using Proxy** and click **OK** to finish it.

## Chapter 5. Configuring the CPE

This chapter delivers a detailed presentation of CPE's functionalities and features 3 main items below, allowing you to manage the CPE with ease. The screen shots use the WBS-202N as an example.



Figure 5-1 Main Menu

The page includes the following fields:

Object	Description
Operation Mode	It shows the current mode status.
Device Information	It shows the CPU/memory usage.
Device Description	You can enter the device description.
Flow (2.4G/5G Wi-Fi) bps	It shows the Upstream/Downstream graph.
LAN Information	It shows the device IP mode, LAN IP, subnet, gateway and MAC address.
Wi-Fi Information	It shows the Wi-Fi status, SSID, channel, Encryption, MAC address and client list.
Version	It shows the firmware version (Double-click to show more detailed info.).

## 5.1 Wizard

The Wizard guides you to configuring the WBS-202N/WBS-502N in a different mode, including Gateway, Super WDS, WISP, and AP (repeater) mode.

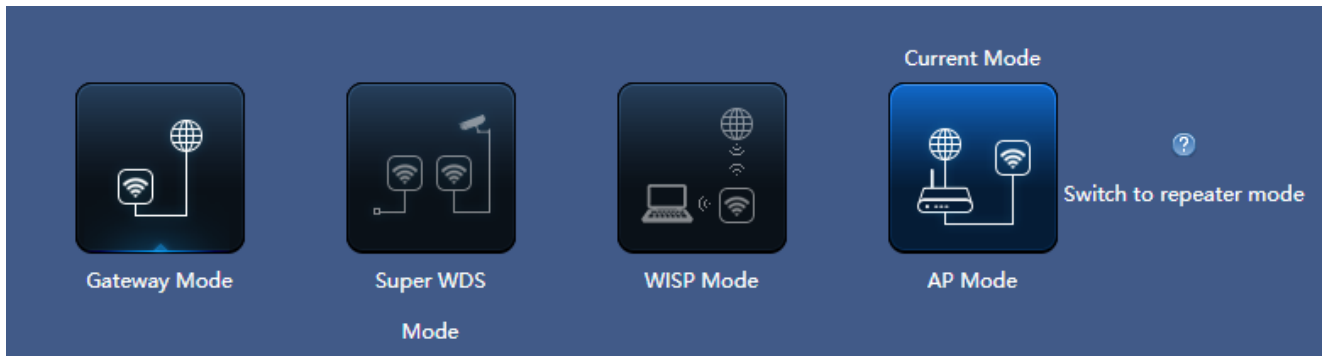


Figure 5-2 Operation Mode



The default operation mode is AP mode.

Change the PtP switch to optional AP/repeater mode.

## 5.2 Gateway Mode

Click “Wizard” → “Gateway Mode” and the following page will be displayed. This section allows you to configure the Gateway mode.

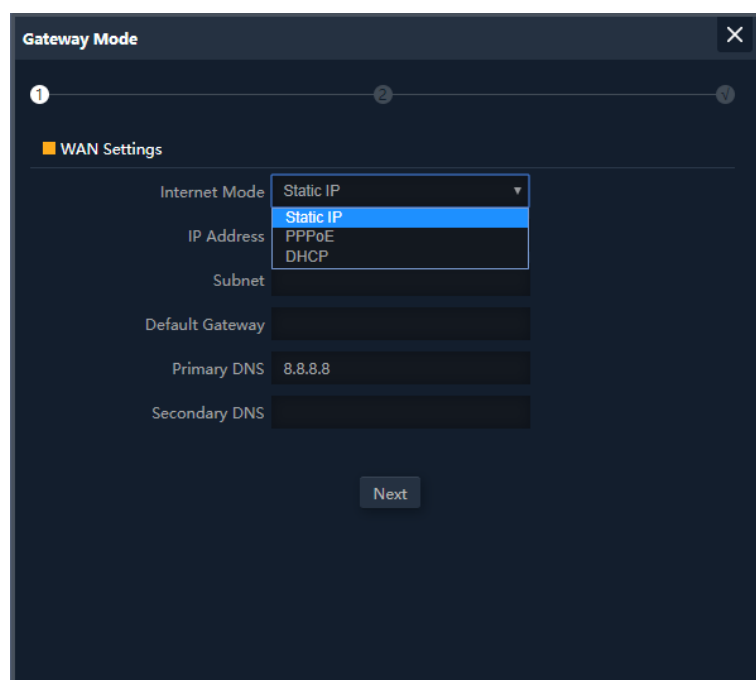


Figure 5-3 Gateway Mode

## WAN Settings

### Static IP

If your ISP offers you static IP Internet connection type, select “**Static IP**” and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.



The screenshot shows the 'WAN Settings' window with the following fields:

- Internet Mode:** A dropdown menu set to 'Static IP'.
- IP Address:** An empty text input field.
- Subnet:** An empty text input field.
- Default Gateway:** An empty text input field.
- Primary DNS:** A text input field containing '8.8.8.8'.
- Secondary DNS:** An empty text input field.
- Next:** A button at the bottom right of the form.


**Figure 5-4** Gateway- Static IP

The page includes the following fields:

Object	Description
IP Address	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
Subnet Mask	Enter WAN Subnet Mask provided by your ISP
Default Gateway	Enter the WAN Gateway address provided by your ISP
Primary DNS	Enter the necessary DNS address provided by your ISP
Second DNS	Enter the second DNS address provided by your ISP

### PPPoE (ADSL)

Select **PPPOE** if your ISP is using a PPPoE connection and provide you with PPPoE user name and password info.

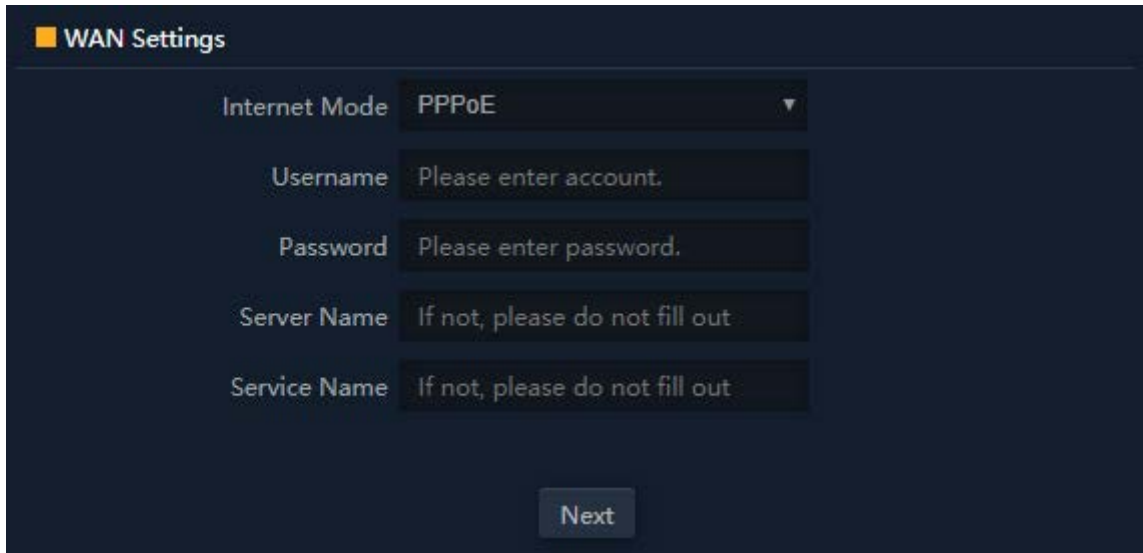

**Figure 5-5** Gateway – PPPoE (ADSL)

The page includes the following fields:

Object	Description
<b>Username</b>	Enter the PPPoE User Name provided by your ISP
<b>Password</b>	Enter the PPPoE password provided by your ISP
<b>Server Name</b>	Enter the server name by your ISP, or not
<b>Service Name</b>	Enter the service name by your ISP, or not

## DHCP

Choose “**DHCP**” and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

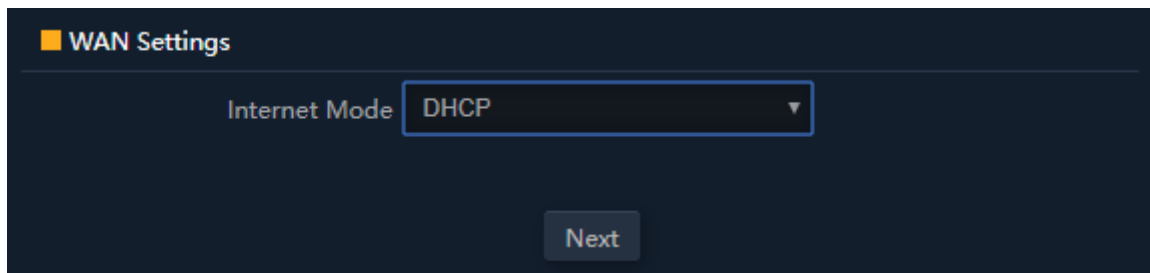


Figure 5-6 Gateway – DHCP

## Wireless

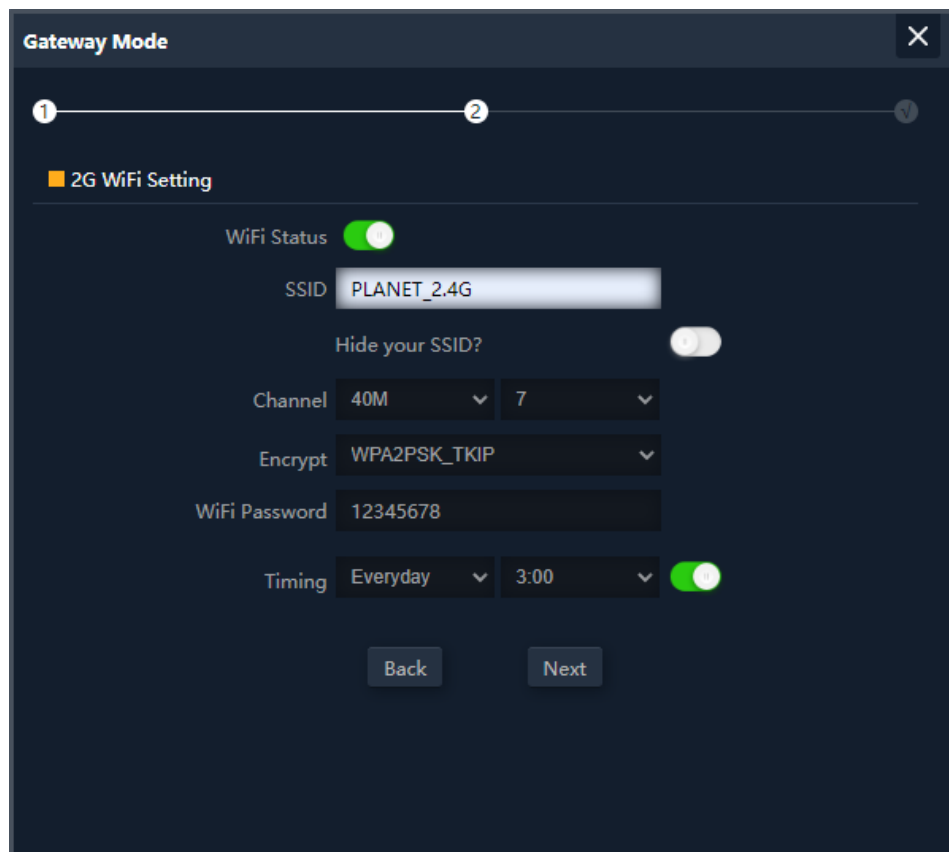



Figure 5-7 Gateway – Wireless

The page includes the following fields:

Object	Description
Wi-Fi Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable wireless LAN
SSID	It is the wireless network name. The default SSID is <b>PLANET_2.4G</b> or <b>PLANET_5G</b>
Hide your SSID ?	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to hide wireless LAN or not
Channel	Select the operating channel you would like to use. The channel

	range will be changed by selecting a different domain.
Encryption	Select the wireless encryption. The default is <b>None</b>
Timing	Set time to restart for clock

### 5.3 Super WDS Mode

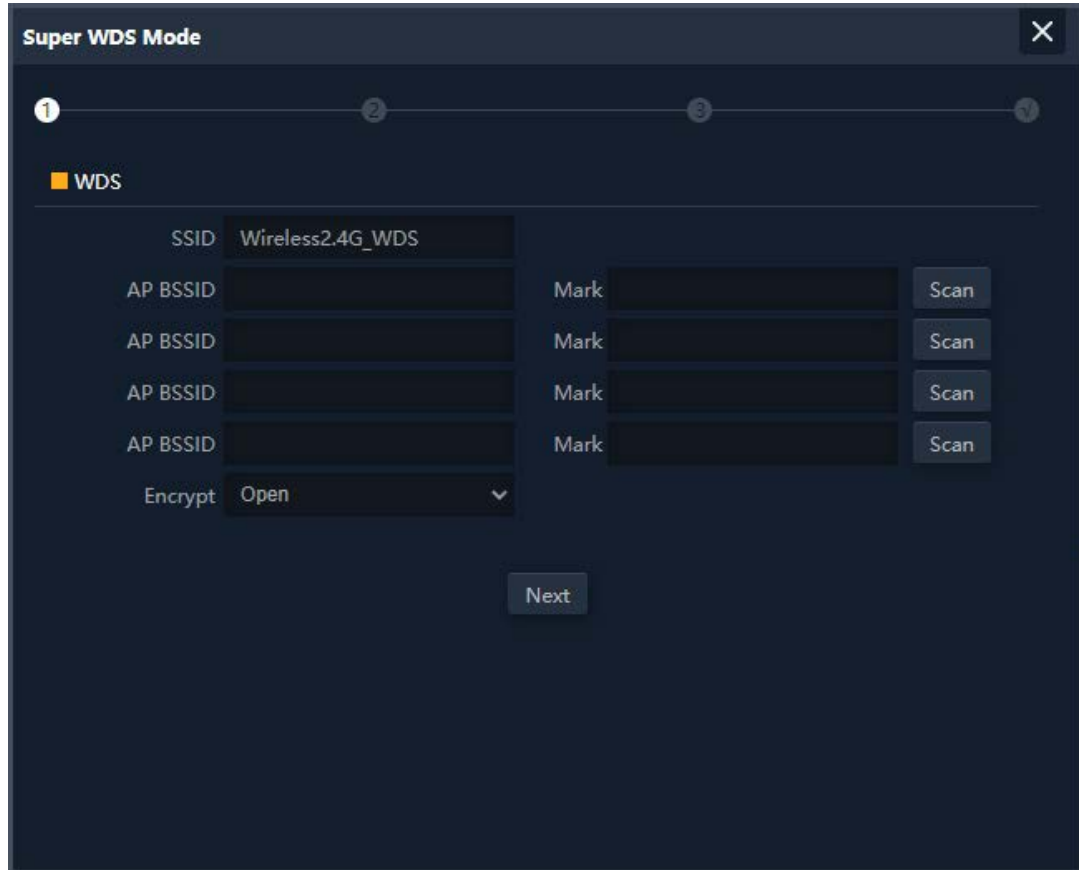


**Figure 5-8** Super WDS Mode

The page includes the following fields:

Object	Description
SSID	It is the wireless network name. The default SSID is "PLANET_2.4G_WDS" or "Wireless5G_WDS"
AP BSSID/Mark	Press the "Scan" button to find the WDS BSSID to connect
Encryption	Select open or WEP for the wireless encryption. The default is <b>None</b> Key in the correct password for BSSID of WEP




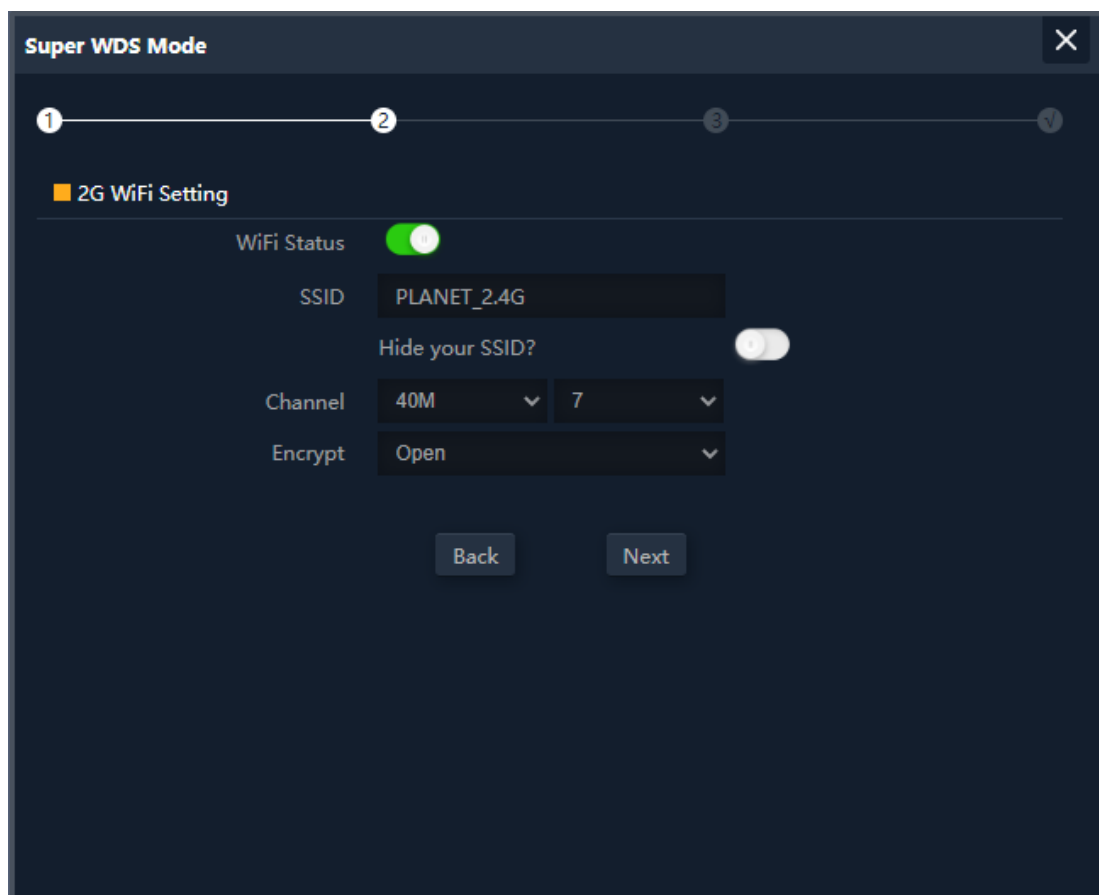

**Figure 5-9** Super WDS Mode

The page includes the following fields:

Object	Description
<b>Wi-Fi Status</b>	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable wireless LAN
<b>SSID</b>	It is the wireless network name. The default SSID is "PLANET_2.4G_WDS" or "Wireless5G_WDS"
<b>Hide your SSID ?</b>	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to hide wireless LAN or not
<b>Bandwidth</b>	Select the operating channel width, "20MHz" or "40MHz" or "80MHz"
<b>Channel</b>	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
<b>Encryption</b>	Select the wireless encryption. The default is "None"

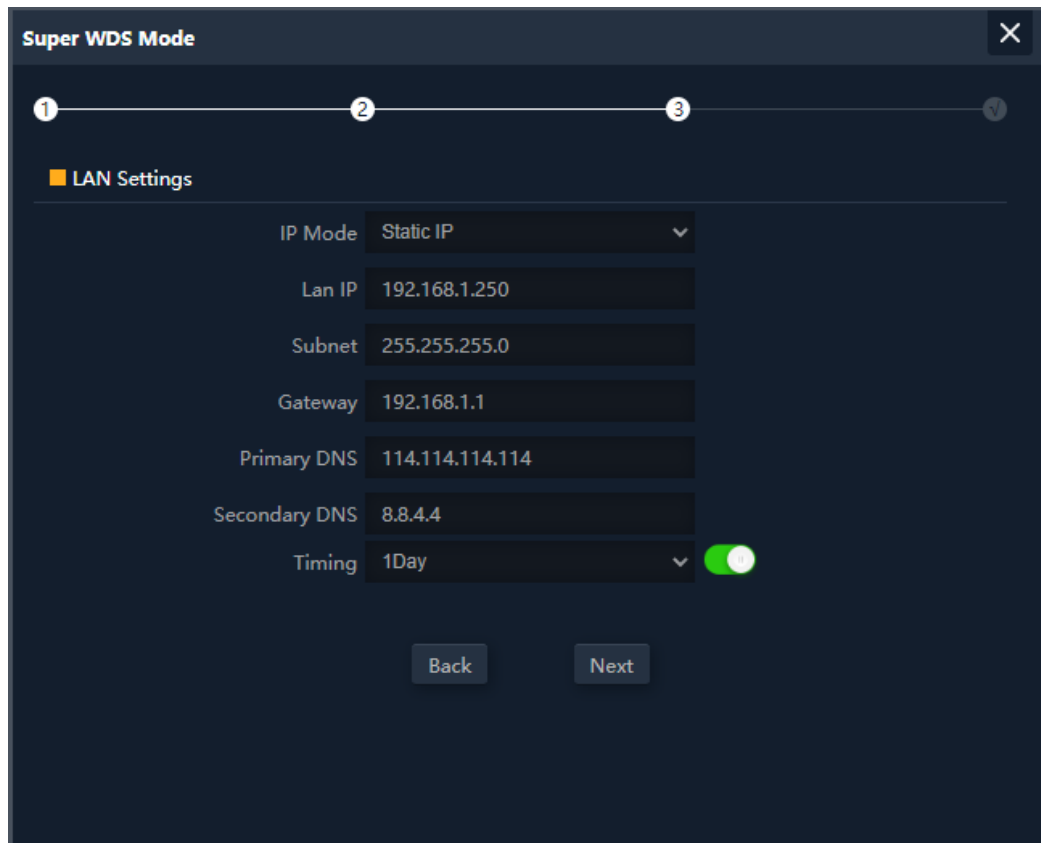

**Figure 5-10** Super WDS Mode

The page includes the following fields:


Object	Description
IP Mode	Select “ <b>Static IP</b> ” or “ <b>DHCP Client</b> ” for setting up device IP
Timing	Set time to restart

AP1 – Enter the WDS SSID and encrypt password.



**Figure 5-11** Super WDS Mode – AP1

AP2 -- Press the “**Scan**” button to find AP1 BSSID and choose it to connect. Enter the encrypt password.

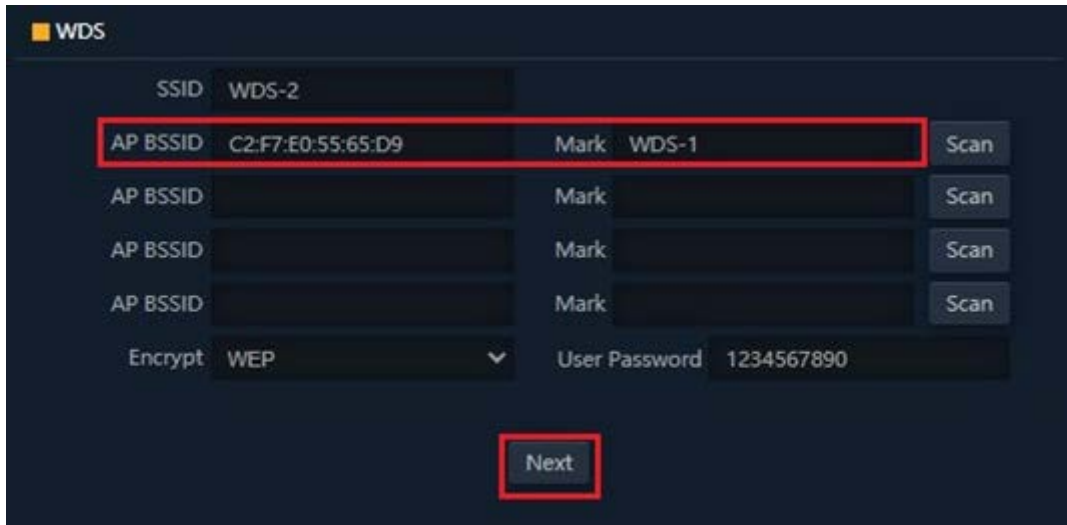

WDS			
SSID	WDS-2		
AP BSSID	C2:F7:E0:55:65:D9	Mark	WDS-1
AP BSSID		Mark	
AP BSSID		Mark	
AP BSSID		Mark	
Encrypt	WEP	User Password	1234567890
Next			

**Figure 5-12** Super WDS Mode – AP2

## 5.4 WISP Mode

Click “Wizard” → “WISP Mode” and the following page will be displayed. This section allows you to configure the WISP mode.

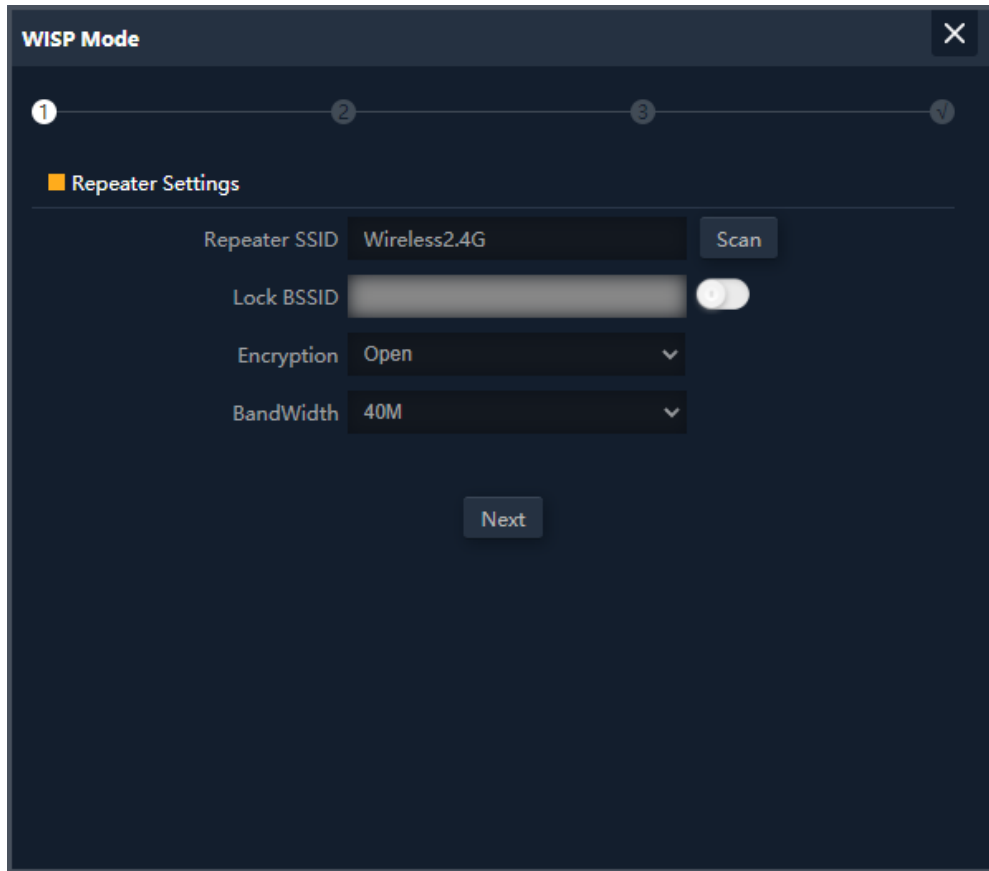


Figure 5-8 WISP Mode

The page includes the following fields:

Object	Description
Repeater SSID	Enter the root AP's SSID or press “Scan” to select
Lock BSSID	Check to lock the root AP' MAC address
Encryption	Select the wireless encryption of root AP. The default is “WPA/WPA2PSK_TKIPAES”
Password	Enter the password of root AP
Bandwidth	Select the operating channel width, “20MHz” or “40MHz” or “80MHz”

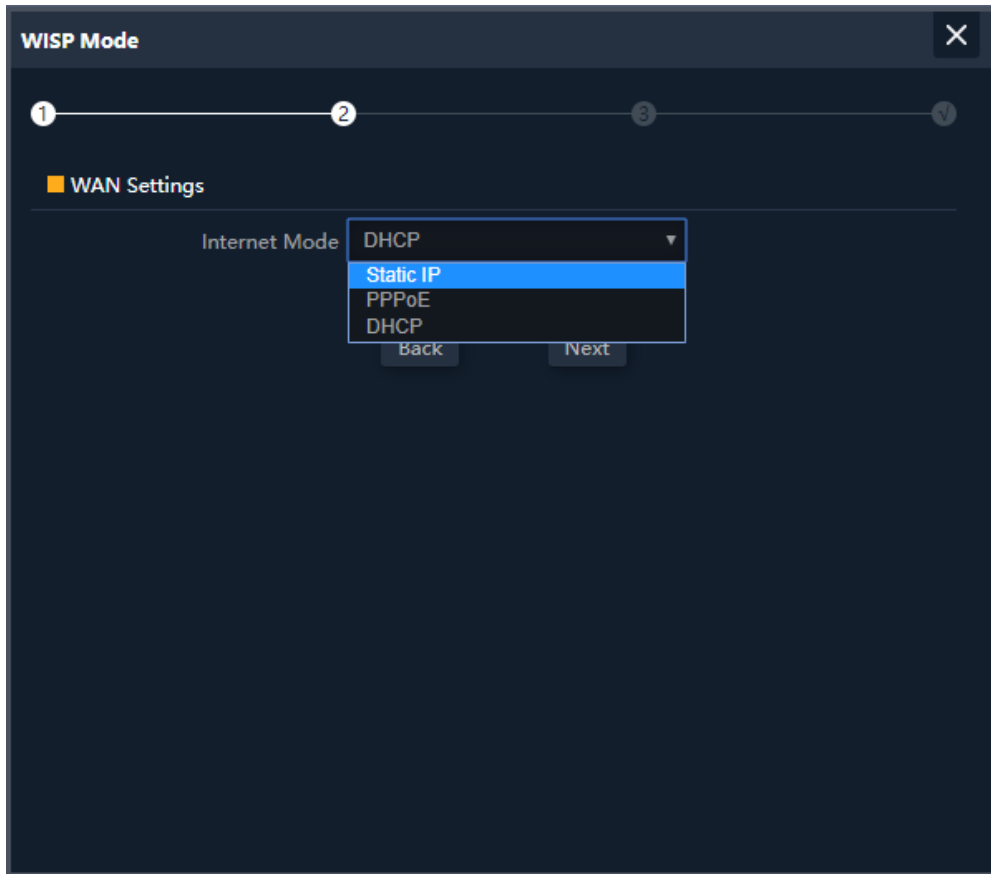


Figure 5-14 WISP Mode – Select Internet Mode (Set up WAN type)


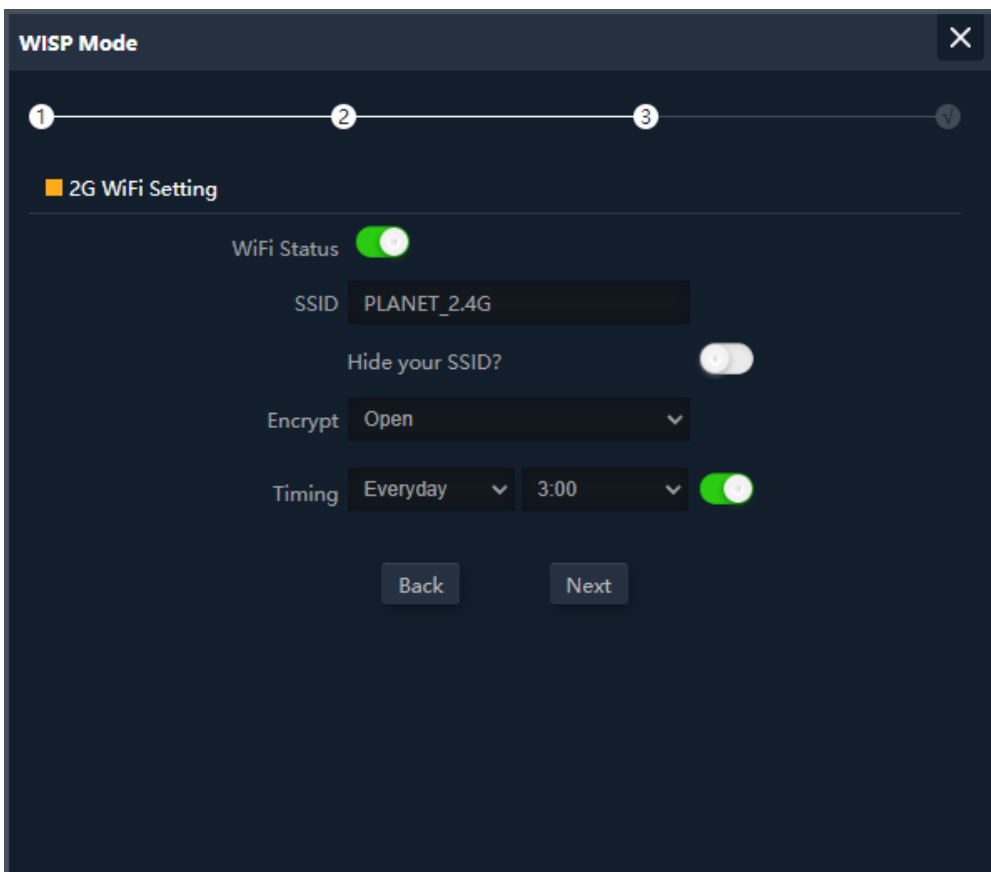


Figure 5-15 WISP Mode – Setting up Wi-Fi

## 5.5 AP Mode

Click “**Wizard**” → “**AP Mode**” and the following page will be displayed. This section allows you to configure the AP mode.

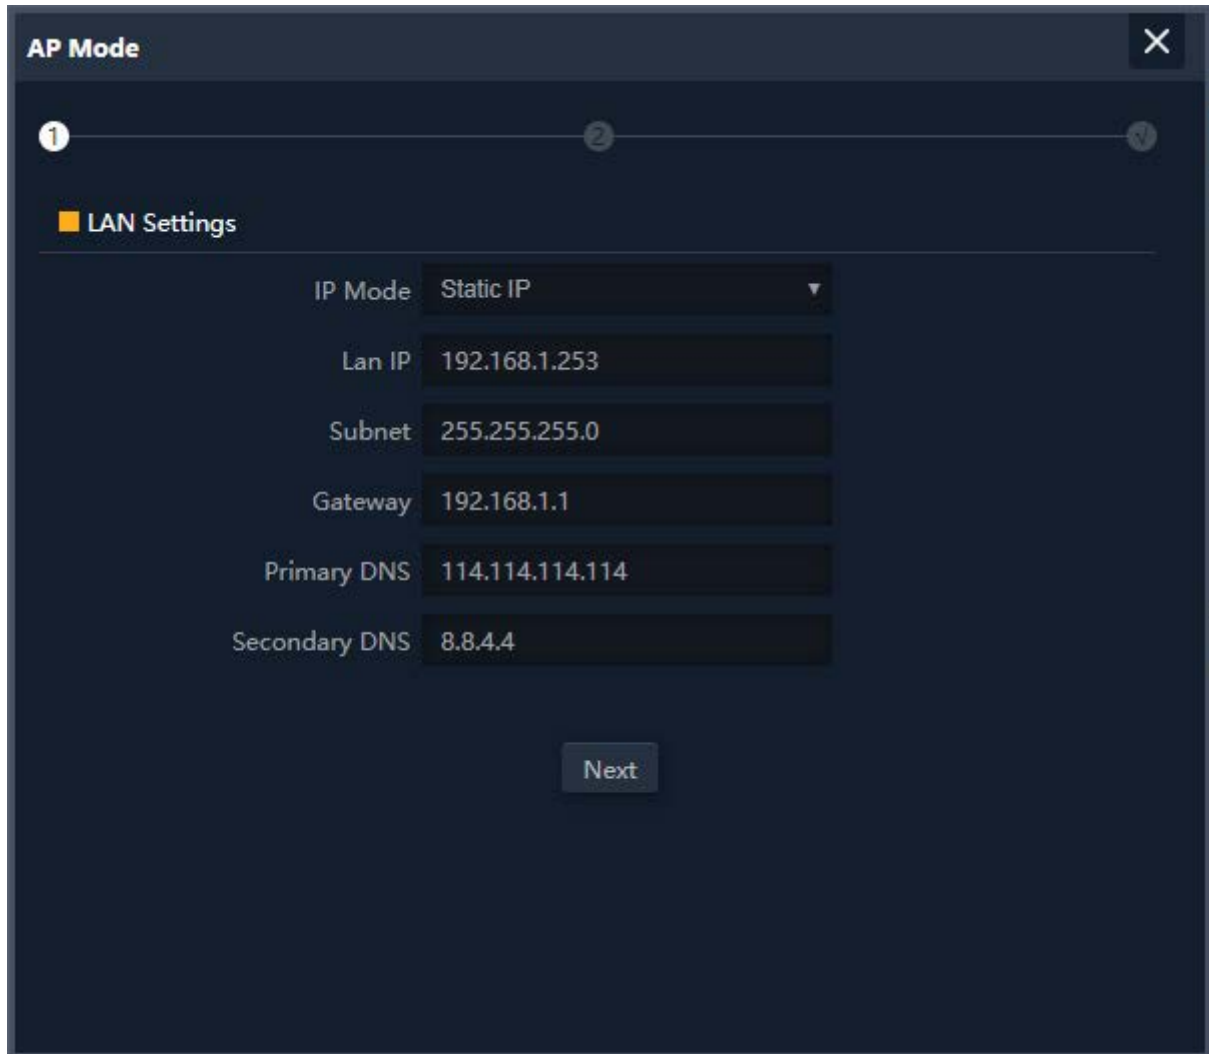


**Figure 5-9** AP Mode

The page includes the following fields:

Object	Description
IP Mode	Select “ <b>Static IP</b> ” or “ <b>DHCP Client</b> ” for setting up device IP
LAN IP	Enter the AP static IP address
Subnet	Enter the network mask
Gateway	Enter the default gateway IP address
Primary DNS	Enter the primary DNS IP address, or not
Secondary DNS	Enter the secondary DNS IP address, or not

Enter the LAN IP address.

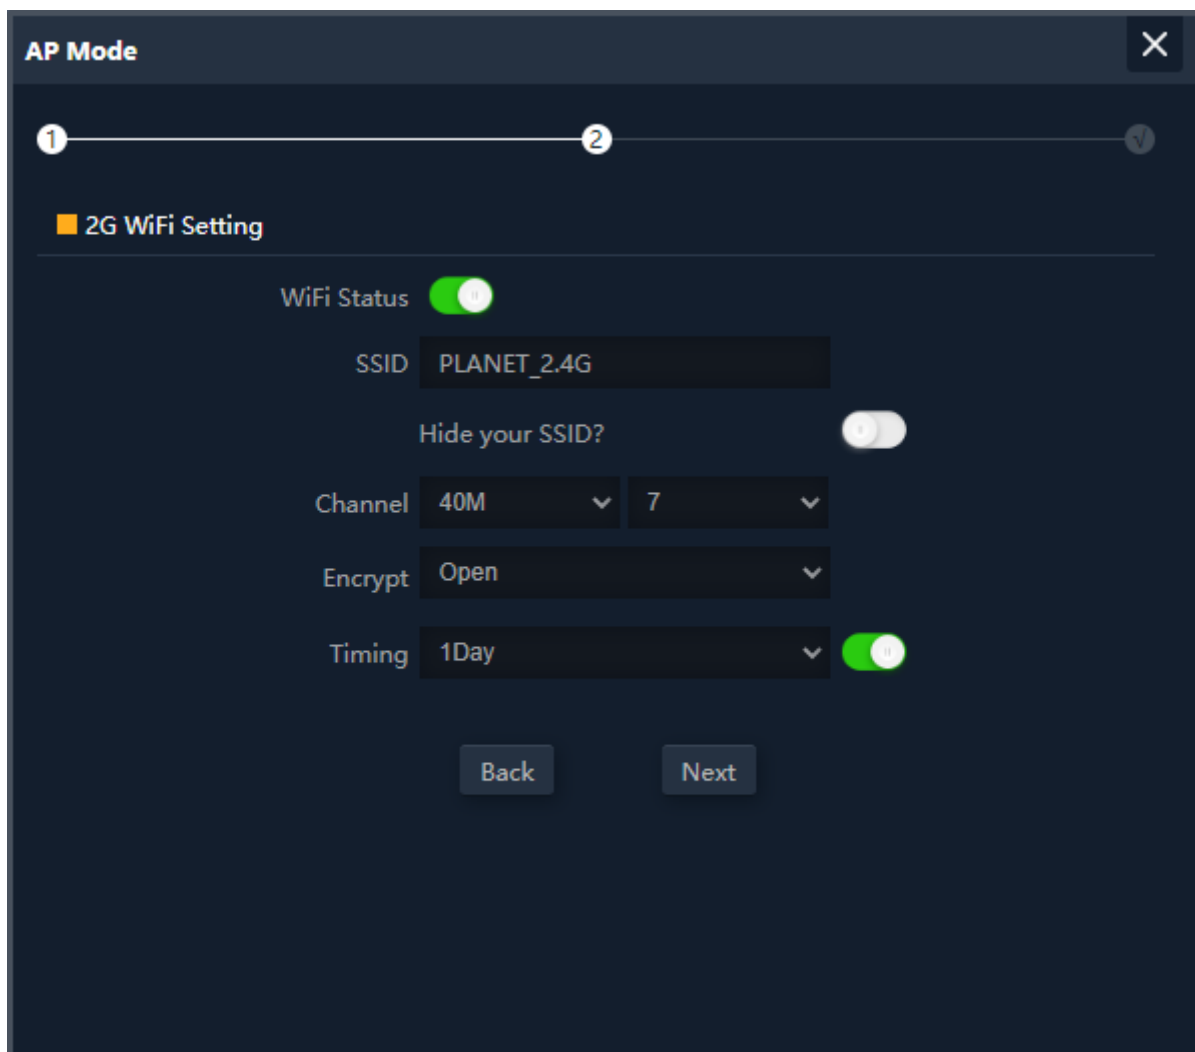

**Figure 5-17** AP Mode – Set up Wi-Fi

The page includes the following fields:

Object	Description
Wi-Fi Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable wireless LAN
SSID	It is the wireless network name. The default SSID is “ <b>PLANET_2.4G</b> ” or “ <b>PLANET_5G</b> ”
Hide your SSID ?	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to hide wireless LAN or not
Bandwidth	Select the operating channel width, “ <b>20MHz</b> ” or “ <b>40MHz</b> ” or “ <b>80MHz</b> ”
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
Encryption	Select the wireless encryption. The default is “ <b>None</b> ”
Timing	Set time to restart

## 5.6 Repeater Mode

Click “Wizard” → “Repeater Mode” and the following page will be displayed. This section allows you to configure the Repeater mode.

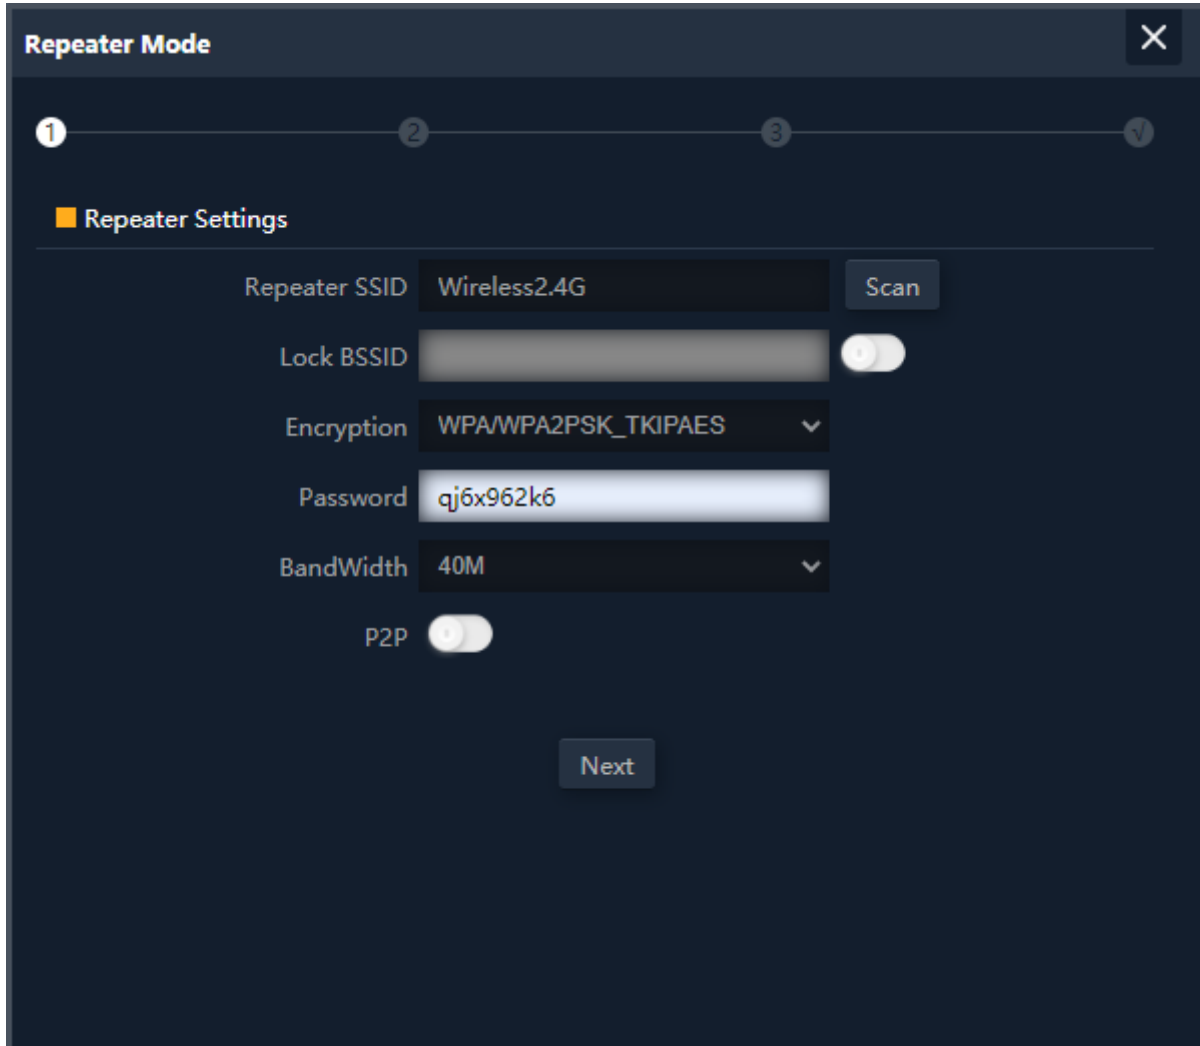


Figure 5-18 Repeater Mode

The page includes the following fields:

Object	Description
Repeater SSID	Enter the root AP's SSID or press “Scan” to select
Lock BSSID	Check to lock the root AP' MAC address
Encryption	Select the wireless encryption of root AP. The default is “WPA/WPA2PSK_TKIPAES”
Password	Enter the password of root AP
Bandwidth	Select the operating channel width, “20MHz” or “40MHz” or “80MHz”
P2P	Enable switch for Point to Point function



Press the **“Scan”** button to find the root AP that you need to repeat and press **Choice** to select the AP.

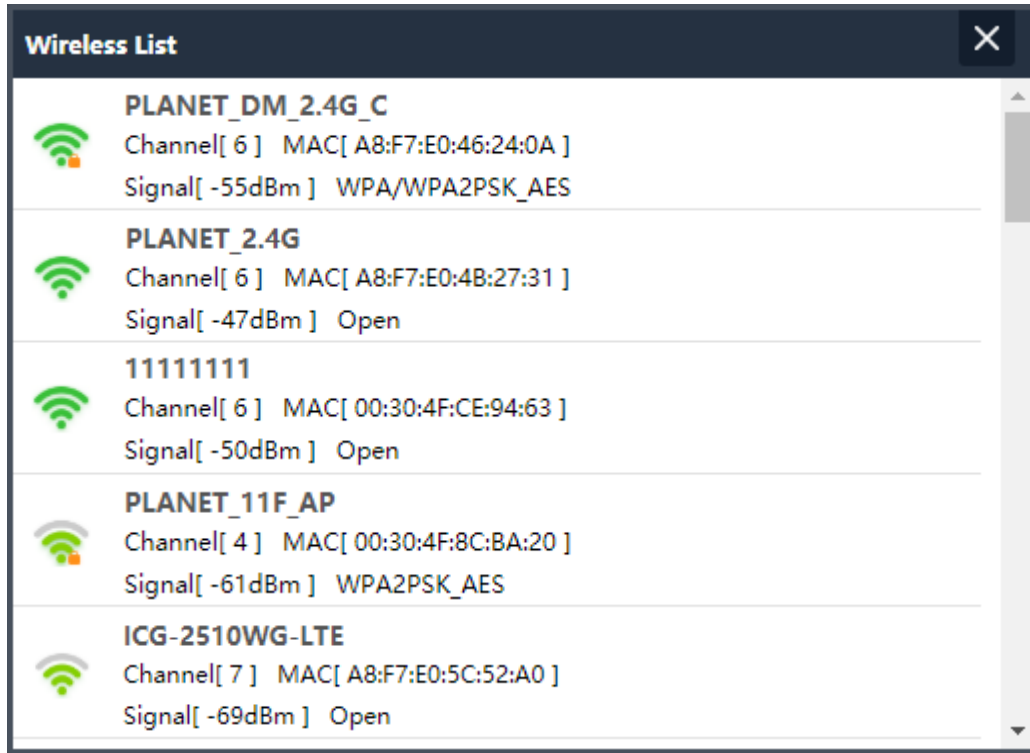


Figure 5-19 Repeater Mode -- Scan AP

Set up the repeater wireless network


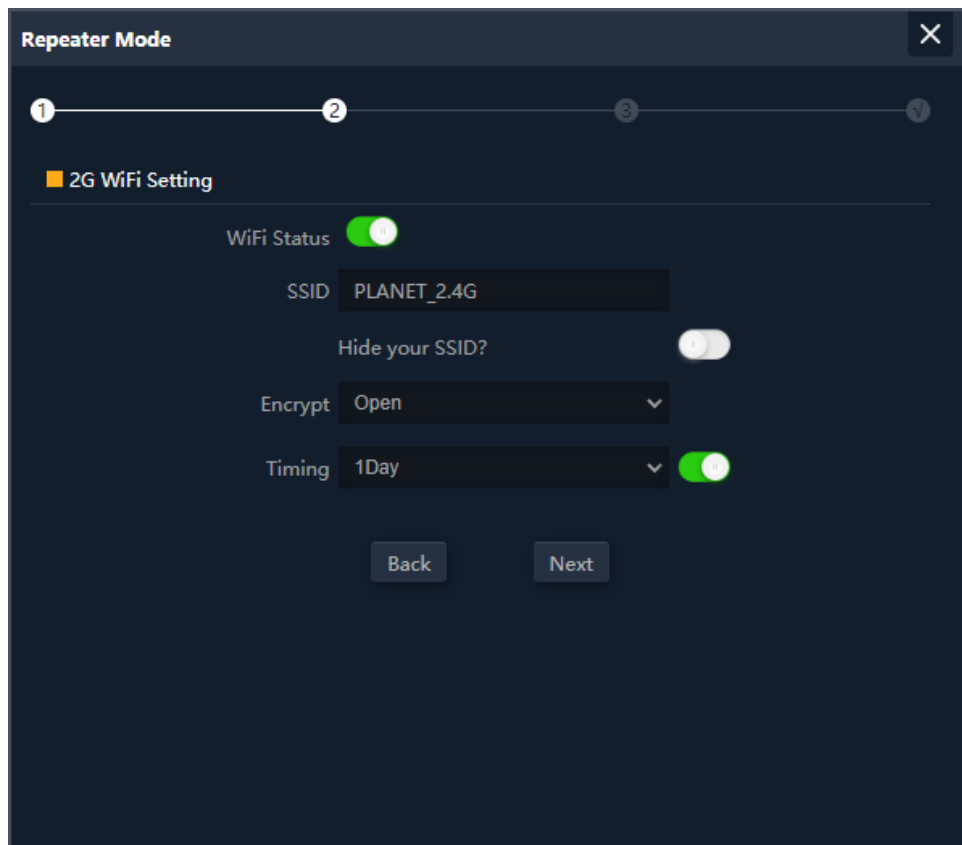


Figure 5-20 Repeater Mode – Setting up Wi-Fi

The page includes the following fields:

Object	Description
Wi-Fi Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable wireless LAN
SSID	It is the wireless network name. The default SSID is “ <b>PLANET_2.4G</b> ” or “ <b>PLANET_5G</b> ”
Hide your SSID ?	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to hide wireless LAN or not
Encryption	Select the wireless encryption. The default is “ <b>None</b> ”
Timing	Set time to restart

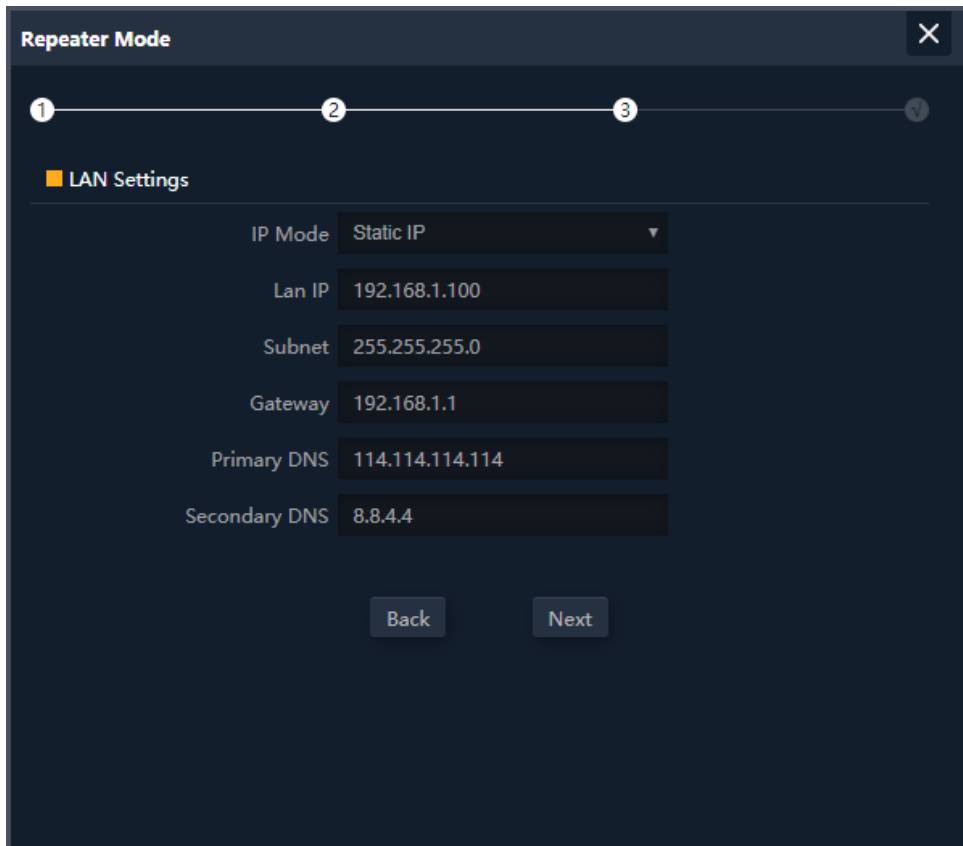

**Repeater Mode**

1 — 2 — 3

LAN Settings

IP Mode: Static IP

Lan IP: 192.168.1.100

Subnet: 255.255.255.0

Gateway: 192.168.1.1

Primary DNS: 114.114.114.114

Secondary DNS: 8.8.4.4

Back Next

**Figure 5-21** Repeater Mode – Setting up Wi-Fi

The page includes the following fields:

Object	Description
IP Mode	Select “ <b>Static IP</b> ” or “ <b>DHCP Client</b> ” for setting up device IP
LAN IP	Enter the AP static IP address
Subnet	Enter the network mask
Gateway	Enter the default gateway IP address
Primary DNS	Enter the primary DNS IP address, or not
Secondary DNS	Enter the secondary DNS IP address, or not

Enter the LAN IP address.

## 5.7 Wi-Fi

### 2.4G/5G Wi-Fi

#### 5.7.1.1. Basic

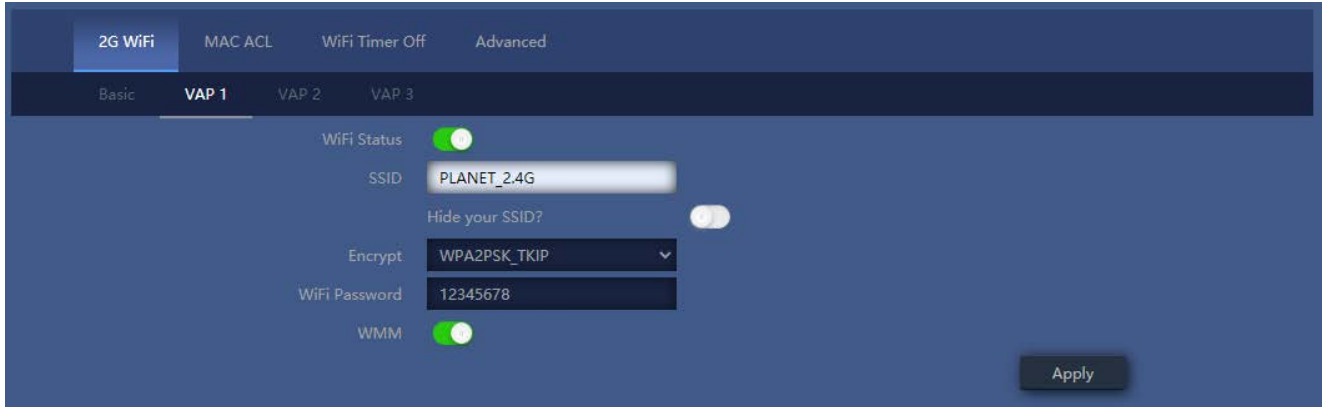


Figure 5-22 Basic

The page includes the following fields:

Object	Description
Wi-Fi Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable wireless LAN
SSID	It is the wireless network name. The default SSID is "PLANET_2.4G" or "PLANET_5G"
Hide your SSID ?	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to hide wireless LAN or not
Channel	It shows the channel of the CPE. Default 2.4G channel is 6, and 5GHz is channel 36.
Encryption	Select the wireless encryption. The default is "None"
WMM	Enable/Disable WMM ( Wi-Fi Multimedia ) function
Wi-Fi Analyzer	Press this button to analyze local area wireless signal

### 5.7.1.2. VAP



**Figure 5-23 VAP**

Select VAP1~VAP3 to enable virtual AP

The page includes the following fields:

Object	Description
Wi-Fi Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable virtual wireless LAN
SSID	It is the wireless network name. The default SSID is “ <b>PLANET_2.4G_1</b> ” to “ <b>PLANET_2.4G_3</b> ” or “ <b>PLANET_5G_1</b> ” to “ <b>PLANET_5G_3</b> ”
Hide your SSID ?	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to hide wireless LAN or not
Channel	It shows the channel of the CPE. Default 2.4GHz is channel 6, and 5GHz is channel 36.
Encryption	Select the wireless encryption. The default is “ <b>None</b> ”
WMM	Enable/Disable WMM (Wi-Fi Multimedia ) function

## MAC ACL

### 5.7.1.3. MAC ACL

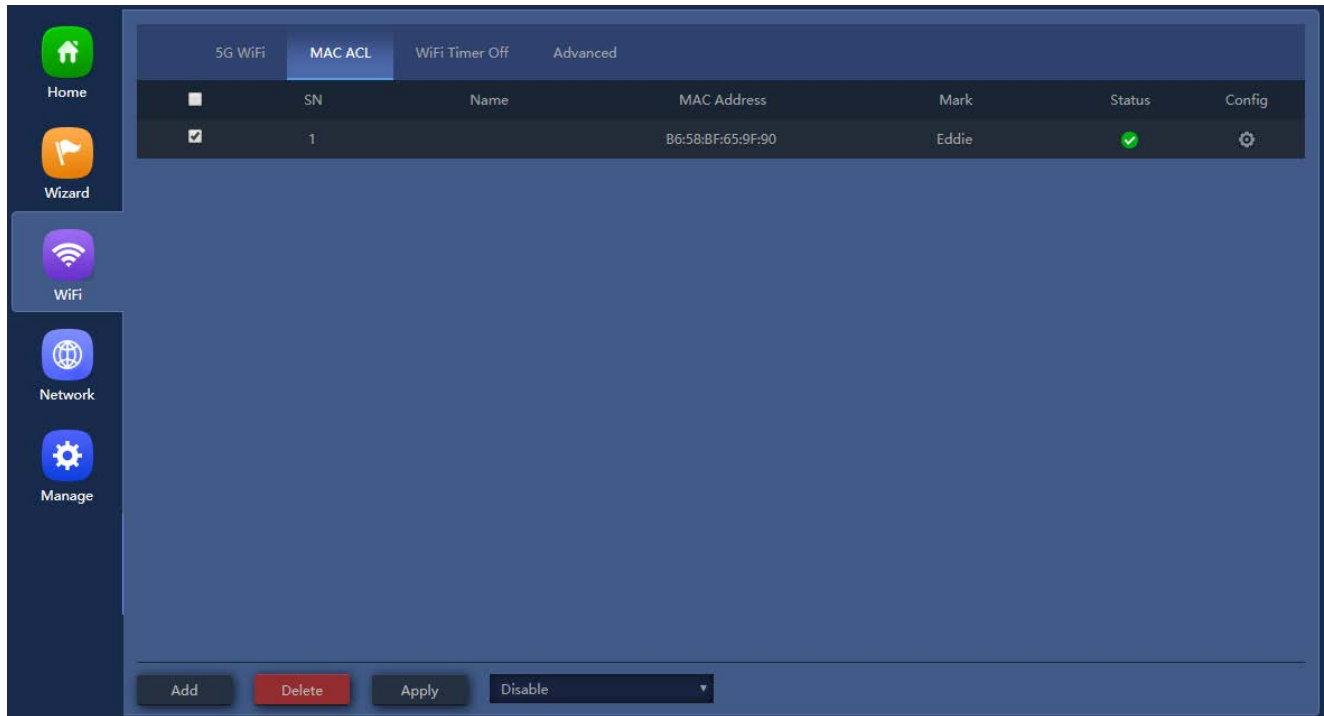


Figure 5-104 MAC ACL

The page includes the following fields:

Object	Description
<b>Add</b>	Press the “ <b>Add</b> ” button to add end-device that is scanned from wireless network and mark them
<b>Delete</b>	Press the “ <b>Delete</b> ” button to delete device from list
<b>Apply</b>	Press the “ <b>Apply</b> ” button to enable/disable the rule
<b>ACL Status</b>	<p>Select the rule of ACL, default is <b>Disable</b>.</p> <p>Whitelist: <b>Allows the devices to pass in the rule</b></p> <p>Blacklist: <b>Prohibited rules within the device through</b></p>


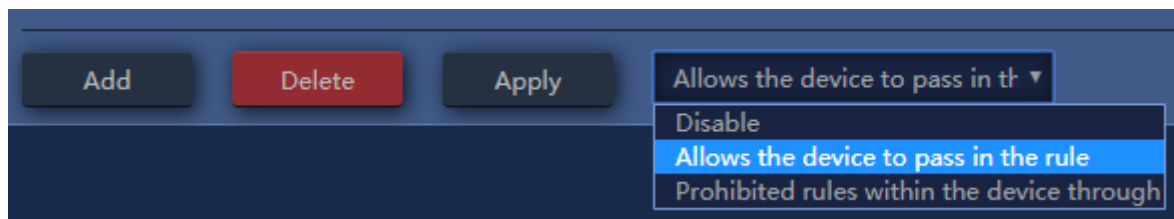


Figure 5-25 ACL status

## Wi-Fi Timer Off

### 5.7.1.4. Wi-Fi Timer Off

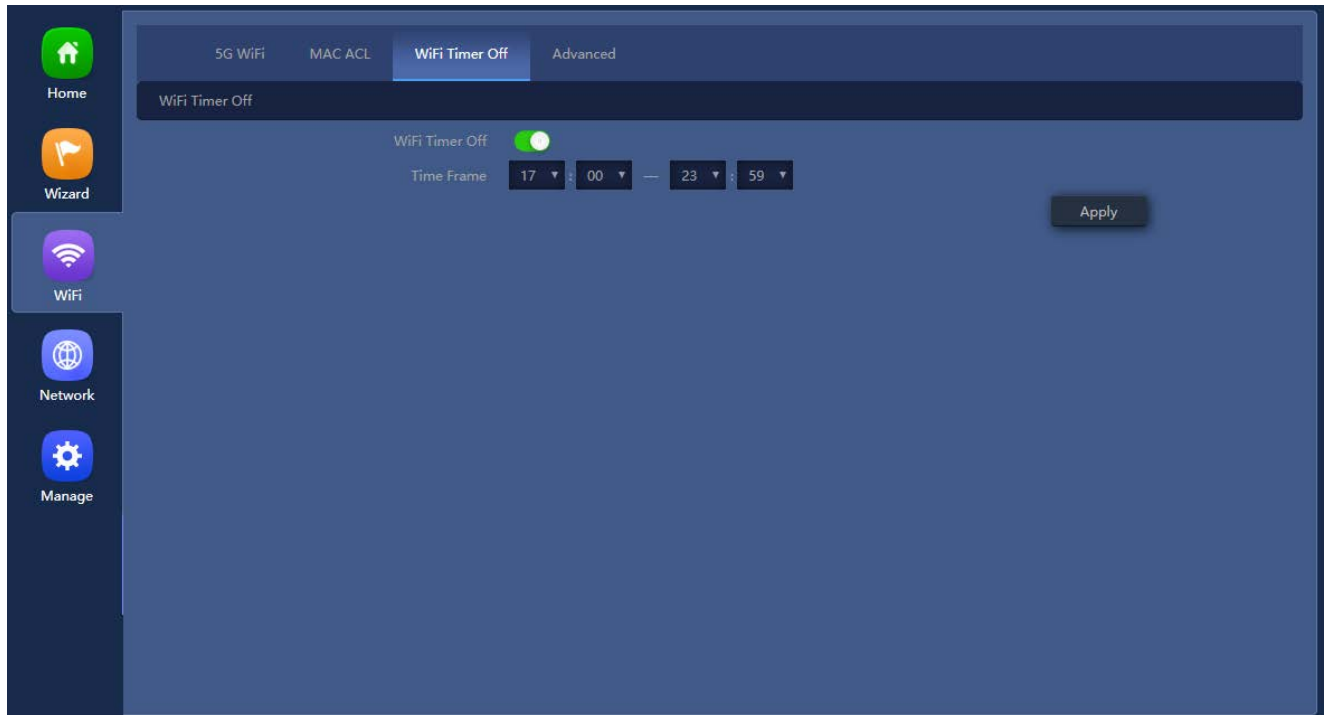

**Figure 5-26** Wi-Fi Timer Off

The page includes the following fields:

Object	Description
<b>Wi-Fi Timer Off</b>	Select ON ( <b>Green</b> ) or OFF ( <b>Gray</b> ) to enable or disable timer
<b>Time Frame</b>	Choose the time frame of Wi-Fi

## Advanced

### 5.7.1.5. Advanced

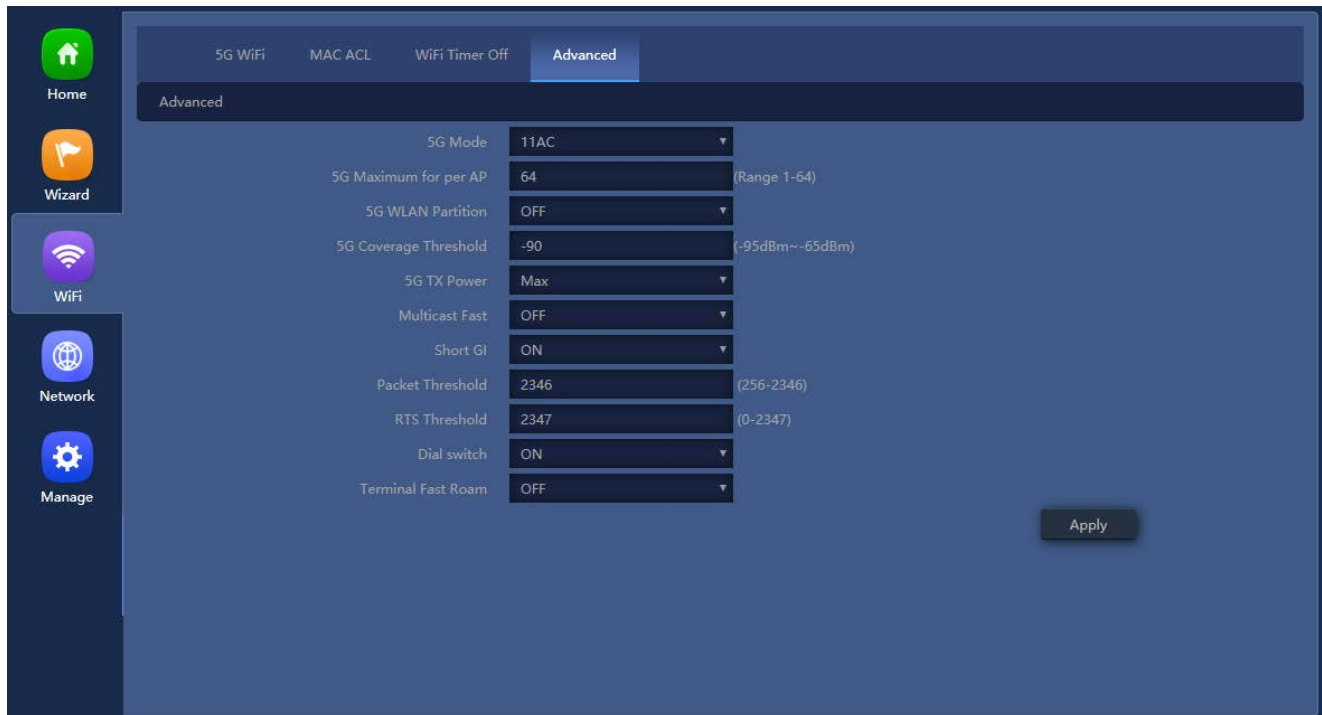


Figure 5-27 Advanced

The page includes the following fields:

Object	Description
<b>2.4G/5G Mode</b>	Select <b>802.11A</b> or <b>802.11AN</b> or <b>802.11AC</b> in CPE
<b>Maximum 2.4G/5G per AP</b>	The maximum users are <b>64</b> per radio
<b>2.4G/5G WLAN Partition</b>	Enable it to isolate each connected wireless client so that they cannot access mutually.
<b>2.4G/5G Coverage Threshold</b>	The coverage threshold is to limit the weak signal of clients occupying session. The default is -90dBm
<b>2.4G/5G TX Power</b>	The range of transmit power is <b>Max (100%)</b> , <b>Efficient (75%)</b> , <b>Enhanced (50%)</b> , <b>Standard (25%)</b> or <b>Min (12.5%)</b> . In case of shortening the distance and the coverage of the wireless network, input a smaller value to reduce the radio transmission power
<b>Multicast Fast</b>	A part of the 802.11n standard that allows sending multiple frames per single access to the medium by combining frames together into one larger frame. It creates the larger frame by combining smaller frames with the same physical source, destination end points, and traffic class (QoS) into one large frame with a common MAC header
<b>Short GI</b>	Guard intervals are used to ensure that distinct transmissions do not interfere with one another.
<b>Packet Threshold</b>	When the length of a data packet exceeds this value, the router will

	send an RTS frame to the destination wireless node, and the latter will reply with a CTS frame, and thus they are ready to communicate. The default value is <b>2346</b>
<b>RTS Threshold</b>	<p>Enable or Disable RTS/CTS protocol. It can be used in the following scenarios and used by Stations or Wireless AP.</p> <p>1) When medium is too noisy or lots of interferences are present. If the AP/Station cannot get a chance to send a packet, the RTS/CTS mechanism can be initiated to get the packet sent.</p> <p>2) In mixed mode, the hidden node problem can be avoided.</p> <p>The default value is <b>2347</b></p>
<b>Dial Switch</b>	Enable or Disable physical PtP switch
<b>Terminal Fast Roam</b>	Enable or Disable 802.11k, 802.11v and 802.11r



## 5.8 Network

### 5.8.1.1. LAN Settings

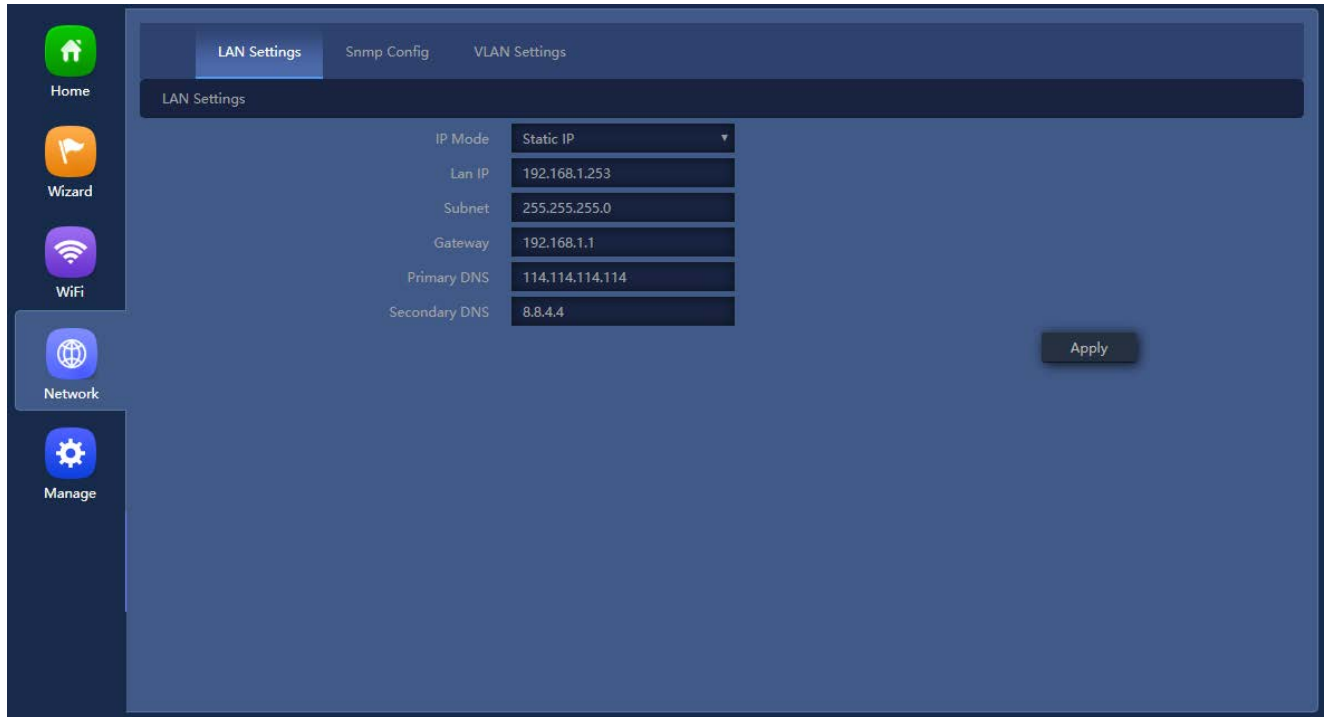


Figure 5-28 LAN Settings

The page includes the following fields:

Object	Description
IP Mode	Select “ <b>Static IP</b> ” or “ <b>DHCP Client</b> ” for setting up device IP
LAN IP	Enter the AP static IP address
Subnet	Enter the network mask
Gateway	Enter the default gateway IP address
Primary DNS	Enter the primary DNS IP address, or not
Secondary DNS	Enter the secondary DNS IP address, or not

### 5.8.1.2. SNMP Config



Figure 5-29 SNMP Config

The page includes the following fields:

Object	Description
Read Community	Enter the read community, default is <b>public</b>
Write Community	Enter the write community, default is <b>private</b>
Trap Destination Address	Enter the SNMP trap IP address, default is <b>192.168.1.100</b>

### 5.8.1.3. VLAN Settings

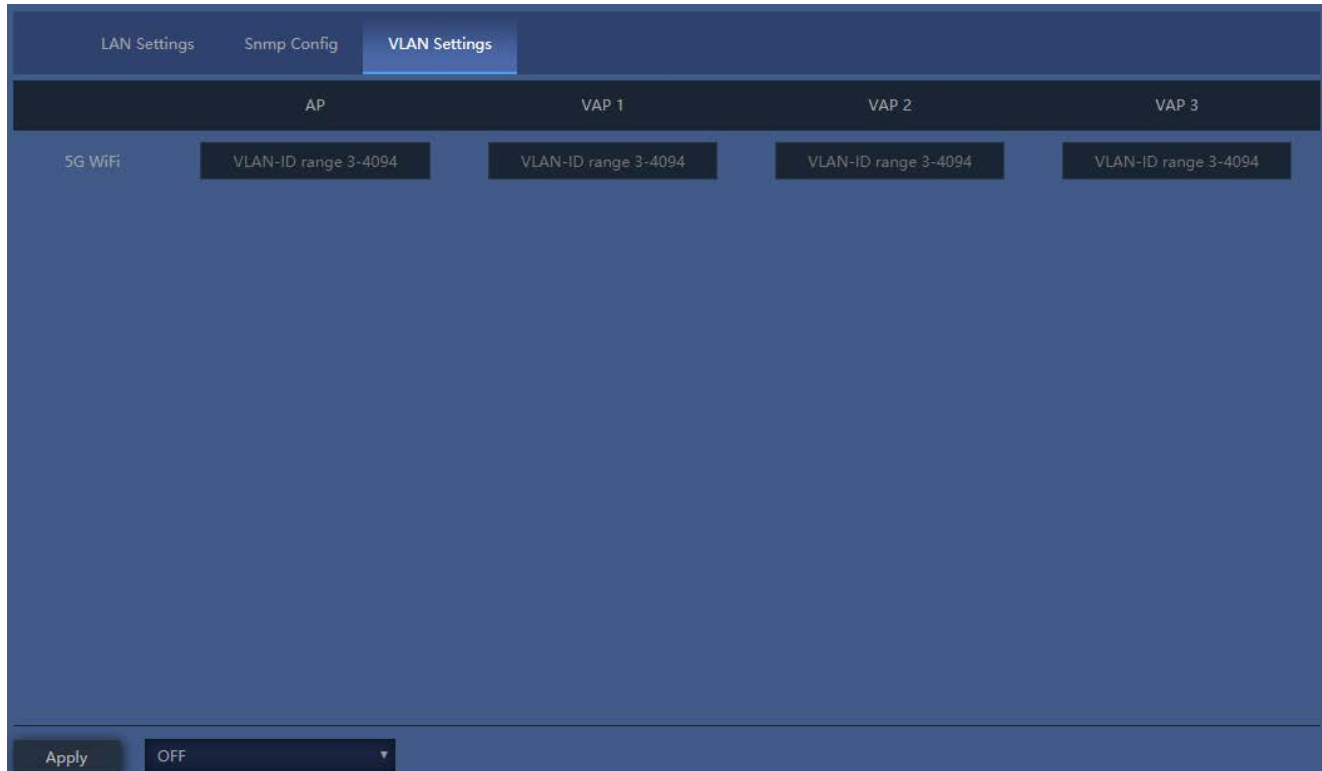


Figure 5-11 VLAN Settings


The page includes the following fields:

Object	Description
AP	Select AP or VAP included in the VLAN
VLAN ID	Enter the VLAN ID from 3 to 4094

### 5.8.1.4. WAN Settings

#### Static IP

If your ISP offers you static IP Internet connection type, select "**Static IP**" and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.

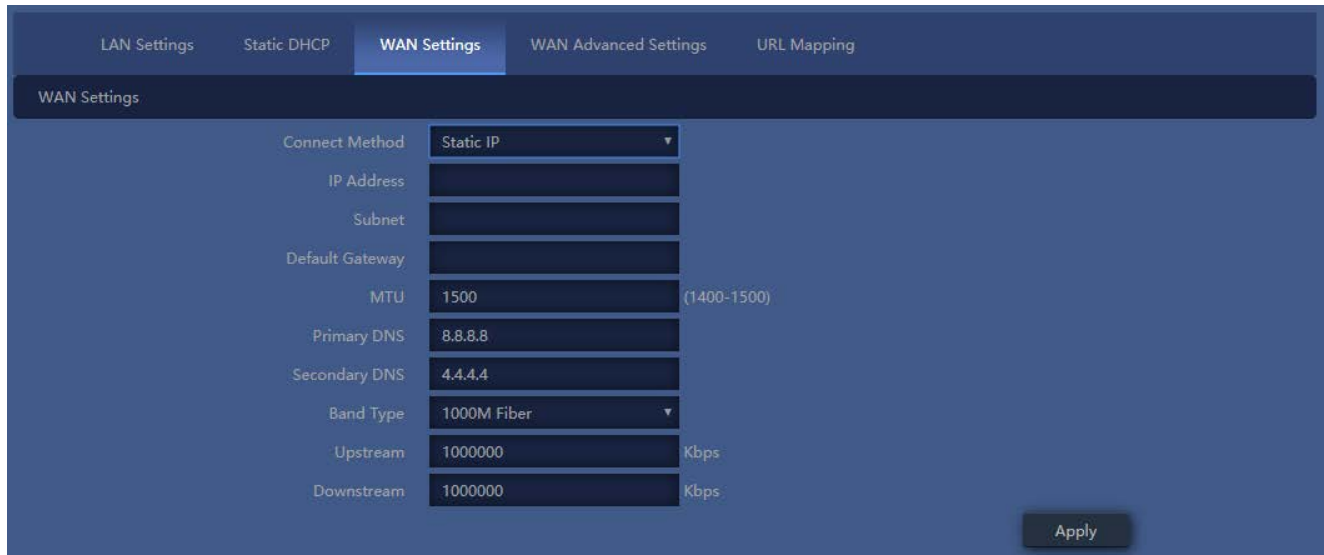


**Figure 5-31** Static IP

The page includes the following fields:

Object	Description
<b>IP Address</b>	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
<b>Subnet</b>	Enter WAN Subnet Mask provided by your ISP
<b>Default Gateway</b>	Enter the WAN Gateway address provided by your ISP
<b>MTU</b>	Maximum Transmission Unit. Default is 1500
<b>Primary DNS</b>	Enter the necessary DNS address provided by your ISP
<b>Secondary DNS</b>	Enter the secondary DNS address provided by your ISP
<b>Upstream</b>	Enter limited upstream throughput, default is <b>1000000</b> Kbps
<b>Downstream</b>	Enter limited downstream throughput, default is <b>1000000</b> Kbps

#### PPPoE (ADSL)

Select **PPPOE** if your ISP is using a PPPoE connection and provide you with PPPoE user name and password info.

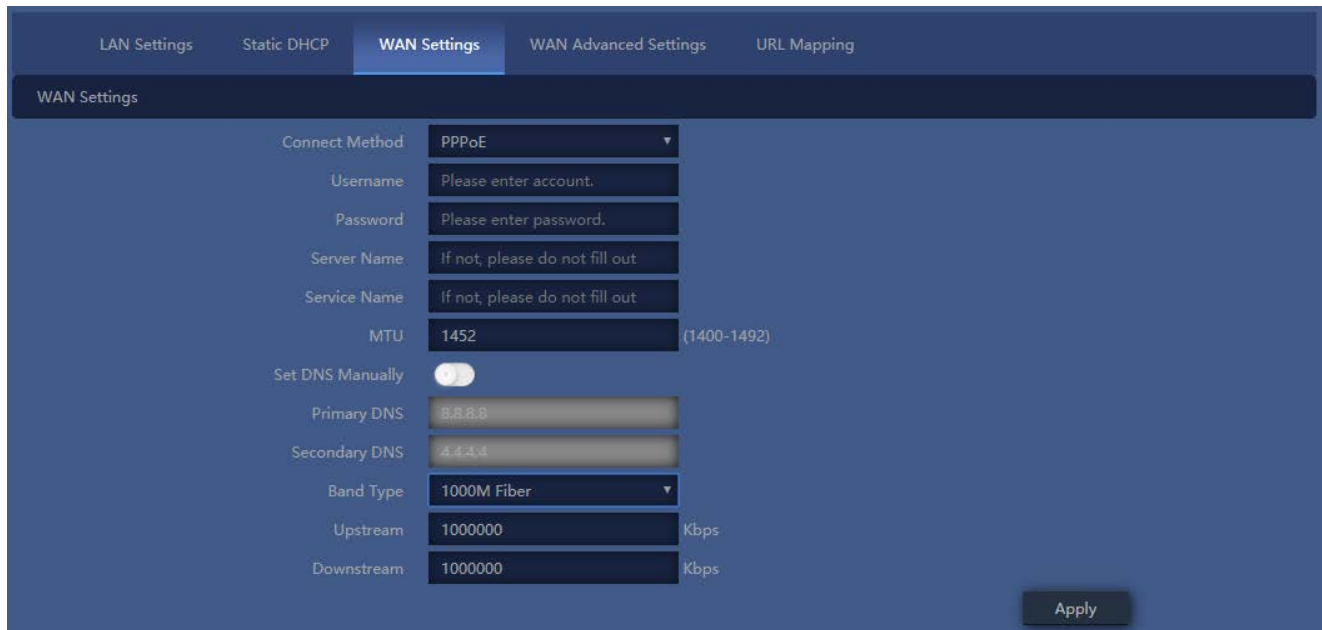

LAN Settings Static DHCP **WAN Settings** WAN Advanced Settings URL Mapping

WAN Settings

Connect Method: PPPoE

Username: Please enter account.

Password: Please enter password.

Server Name: If not, please do not fill out

Service Name: If not, please do not fill out

MTU: 1452 (1400-1492)

Set DNS Manually: ☐

Primary DNS: 8.8.8.8

Secondary DNS: 4.4.4.4

Band Type: 1000M Fiber

Upstream: 1000000 Kbps

Downstream: 1000000 Kbps

Apply

**Figure 5-32 PPPoE (ADSL)**

The page includes the following fields:

Object	Description
<b>Username</b>	Enter the PPPoE User Name provided by your ISP
<b>Password</b>	Enter the PPPoE password provided by your ISP
<b>Set DNS Manually</b>	Enable/Disable DNS Manually
<b>Primary DNS</b>	Enter the necessary DNS address provided by your ISP
<b>Secondary DNS</b>	Enter the secondary DNS address provided by your ISP
<b>MTU</b>	Maximum Transmission Unit. Default is 1452
<b>Band Type</b>	Select the band type provided by your ISP
<b>Upstream</b>	Enter limited upstream throughput, default is <b>1000000</b> Kbps
<b>Downstream</b>	Enter limited downstream throughput, default is <b>1000000</b> Kbps

## DHCP

Choose **"DHCP"** and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

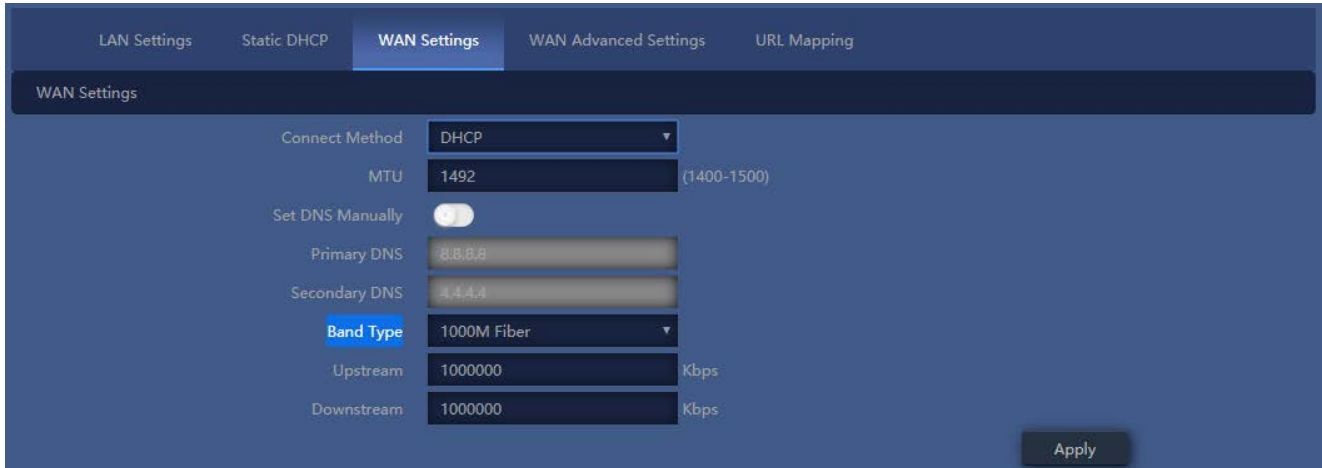


Figure 5-12 DHCP

The page includes the following fields:

Object	Description
MTU	Maximum Transmission Unit. Default is 1452
Set DNS Manually	Enable/Disable DNS Manually
Primary DNS	Enter the necessary DNS address provided by your ISP
Secondary DNS	Enter the secondary DNS address provided by your ISP
Band Type	Select the band type provided by your ISP
Upstream	Enter limited upstream throughput, default is <b>1000000</b> Kbps
Downstream	Enter limited downstream throughput, default is <b>1000000</b> Kbps

#### 5.8.1.5. WAN advanced settings




Figure 5-13 WAN advanced settings

The page includes the following fields:

Object	Description
Enable web server access on WAN port	Enable to access from WAN, default port is 8080
MAC clone	Enable and scan to clone the MAC address
Enable Ping Access on WAN	Enable or Disable this function
Enable IPsec passthrough on VPN connection	Enable or disable IPsec to pass through IPsec communication data.
Enable PPTP passthrough on VPN connection	Enable or disable PPTP to pass through PPTP communication data.
Enable L2TP passthrough on VPN connection	Enable or disable L2TP to pass through L2TP communication data.
Line Detection	Enable to ping Host 1 and Host 2 IP. If ping fails, the WAN will be disconnected.

## 5.9 Security

### 5.9.1.1. URL Filtering

The figure displays two screenshots of the 'Url Filter' configuration window. Both windows have a title bar with a close button (X) and a sub-header 'Url Filter' with a toggle switch. The 'Status' toggle is turned on (green) in both.

**Top Screenshot:**

- Rule Name:** Black list
- Time Group:** Any (dropdown menu)
- URL:** www.faceback.com
- Mark:** (empty text field)
- Buttons:** Add, Save

**Bottom Screenshot:**

- Rule Name:** Black list
- Time Group:** Custom (dropdown menu)
- Time Range:** 00 : 00 - 00 : 00 (dropdown menus)
- Work Date:** Everyday (dropdown menu)
- URL:** www.faceback.com
- Mark:** (empty text field)
- Buttons:** Add, Save

Figure 5-35 URL Filtering

The page includes the following fields:

Object	Description
Add	Press the <b>"Add"</b> button to add the rule
Delete	Press the <b>"Delete"</b> button to delete the rule

Apply	Press the “ <b>Apply</b> ” button to enable/disable the rule
Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Time Group	Select <b>Any</b> or <b>Customer</b> to set up time range and work data.
URL	Enter the URL that you need to put in black list
Mark	Enter the mark string, or not

Enable/disable URL filter function

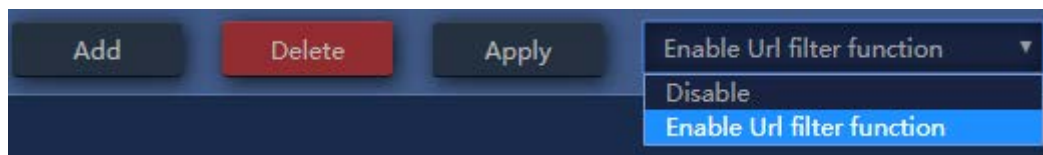


Figure 5-36 URL Filtering

### 5.9.1.2. IP/Port Filtering

IP Filter

IP Filter

Status ☒

Rule Name

Time Group Any

IP Group Custom

IP Address  -

Port Range  -  No empty,range:1-65535

Protocol TCP+UDP

Mark

Figure 5-37 IP/Port Filtering



The page includes the following fields:

Object	Description
Add	Press the “ <b>Add</b> ” button to add the rule in the black or white list
Delete	Press the “ <b>Delete</b> ” button to delete the rule
Apply	Press the “ <b>Apply</b> ” button to enable/disable the rule
Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Time Group	Select <b>Any</b> or <b>Customer</b> to set up time range and work data.
IP Group	Select IP Group for adding IP by entering IP range or by scanning devices
IP Address	Enter the IP that you need to put in black or white list
Port Range	Enter the web port to access
Protocol	Select <b>TCP</b> , <b>UDP</b> or <b>TCP+UDP</b>
Mark	Enter the mark string, or not
IP/Port Filtering Status	<p>Select the rule of IP/Port Filtering, default is <b>Disable</b>.</p> <p>Whitelist: <b>Allow the devices to pass in the rule</b></p> <p>Blacklist: <b>Prohibited rules within the device through</b></p>


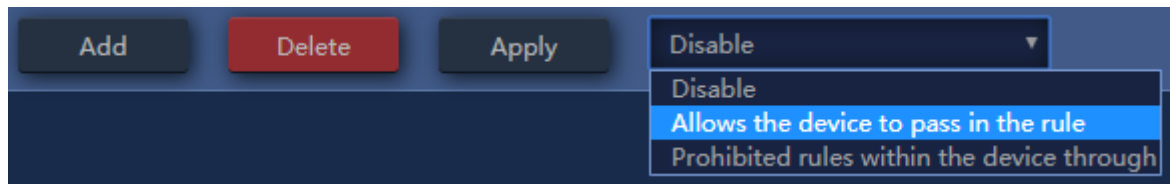


Figure 5-38 IP/Port Filtering

### 5.9.1.3. MAC Filtering

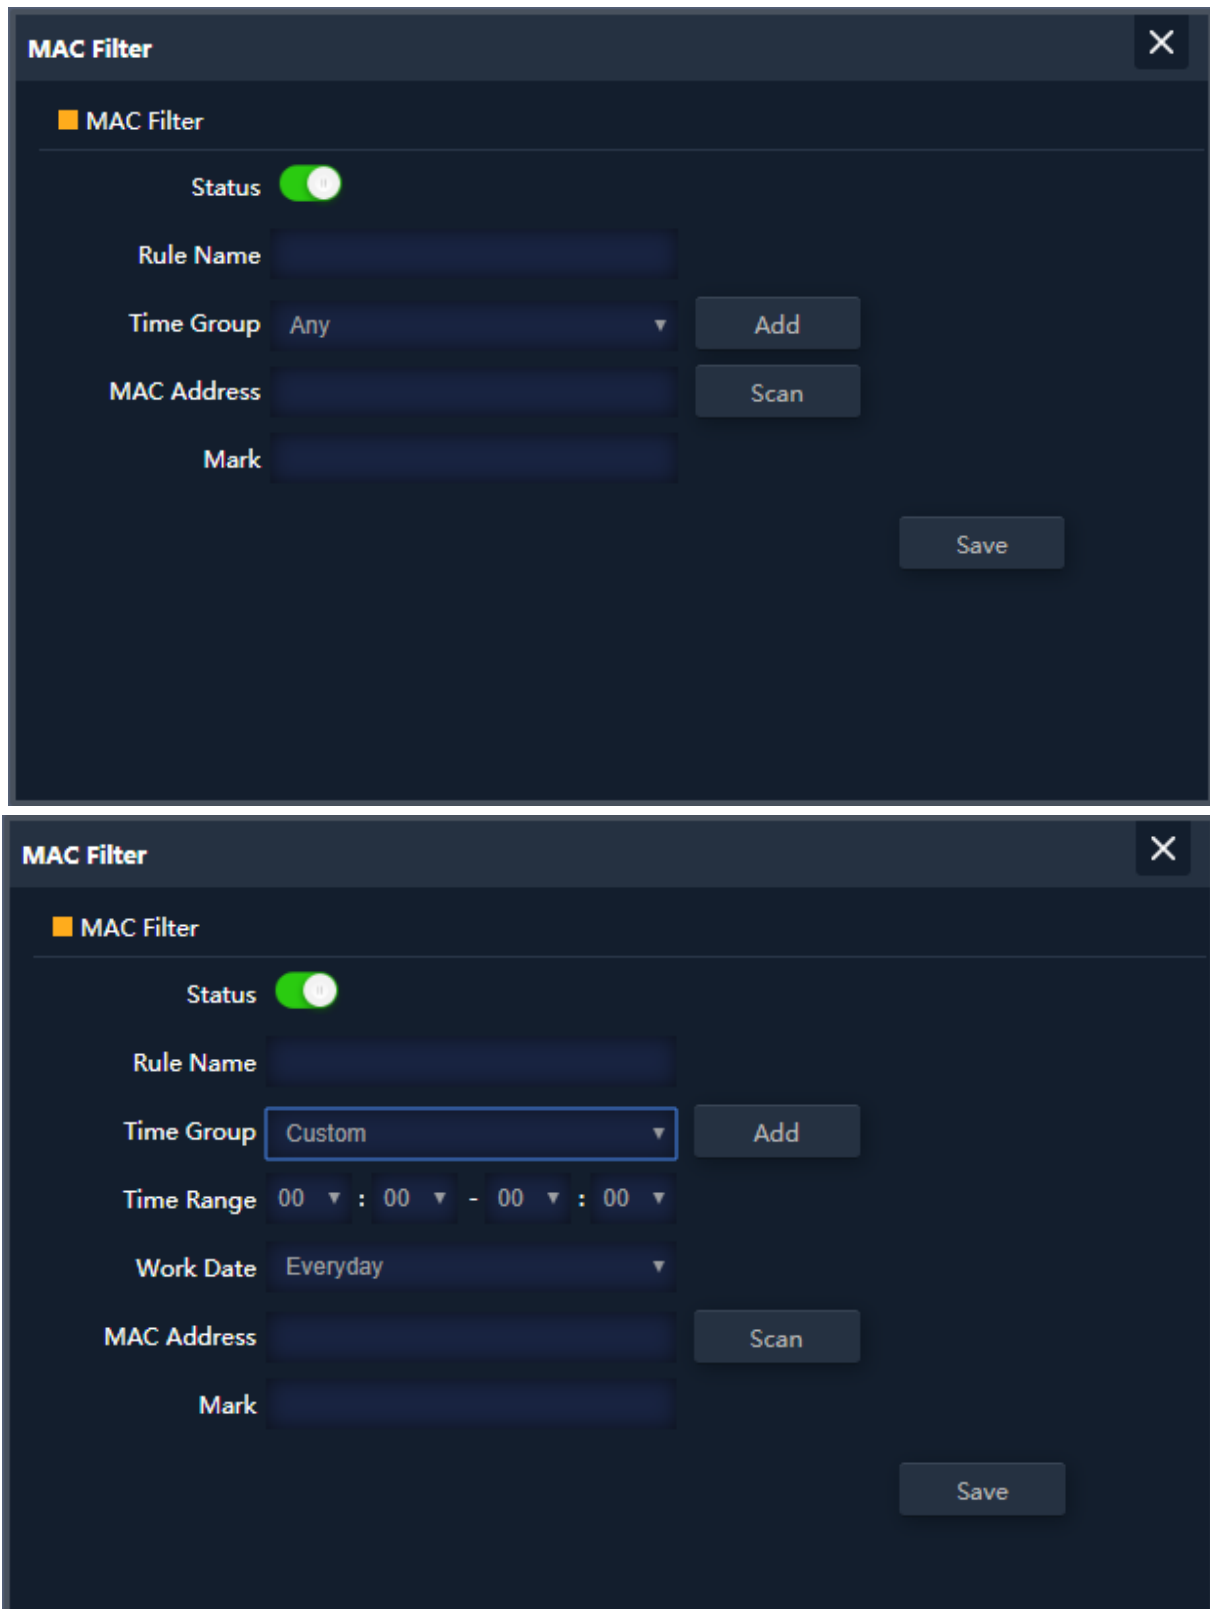

**MAC Filter** [X]

■ MAC Filter

Status ☒

Rule Name

Time Group Any ▼ Add

MAC Address  Scan

Mark

Save

---

**MAC Filter** [X]

■ MAC Filter

Status ☒

Rule Name

Time Group Custom ▼ Add

Time Range 00 ▼ : 00 ▼ - 00 ▼ : 00 ▼

Work Date Everyday ▼

MAC Address  Scan


Mark

Save

**Figure 5-39** MAC Filtering

The page includes the following fields:

Object	Description
Add	Press the “ <b>Add</b> ” button to add the rule in the black or white list
Delete	Press the “ <b>Delete</b> ” button to delete the rule
Apply	Press the “ <b>Apply</b> ” button to enable/disable the rule
Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Time Group	Select <b>Any</b> or <b>Customer</b> to set up time range and work data.
MAC Address	Enter the MAC address that you need to put in black or white list
Mark	Enter the mark string, or not
MAC Filtering Status	<p>Select the rule of MAC Filtering, default is <b>Disable</b>.</p> <p>Whitelist: <b>Allow the devices to pass in the rule</b></p> <p>Blacklist: <b>Prohibited rules within the device through</b></p>

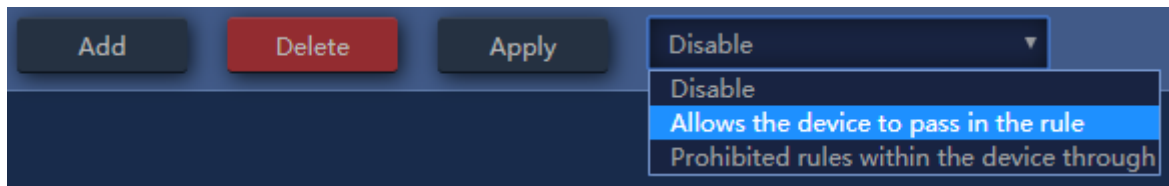

**Figure 5-40** IP/Port Filtering

#### 5.9.1.4. Security (Port Mapping/Port Forwarding)

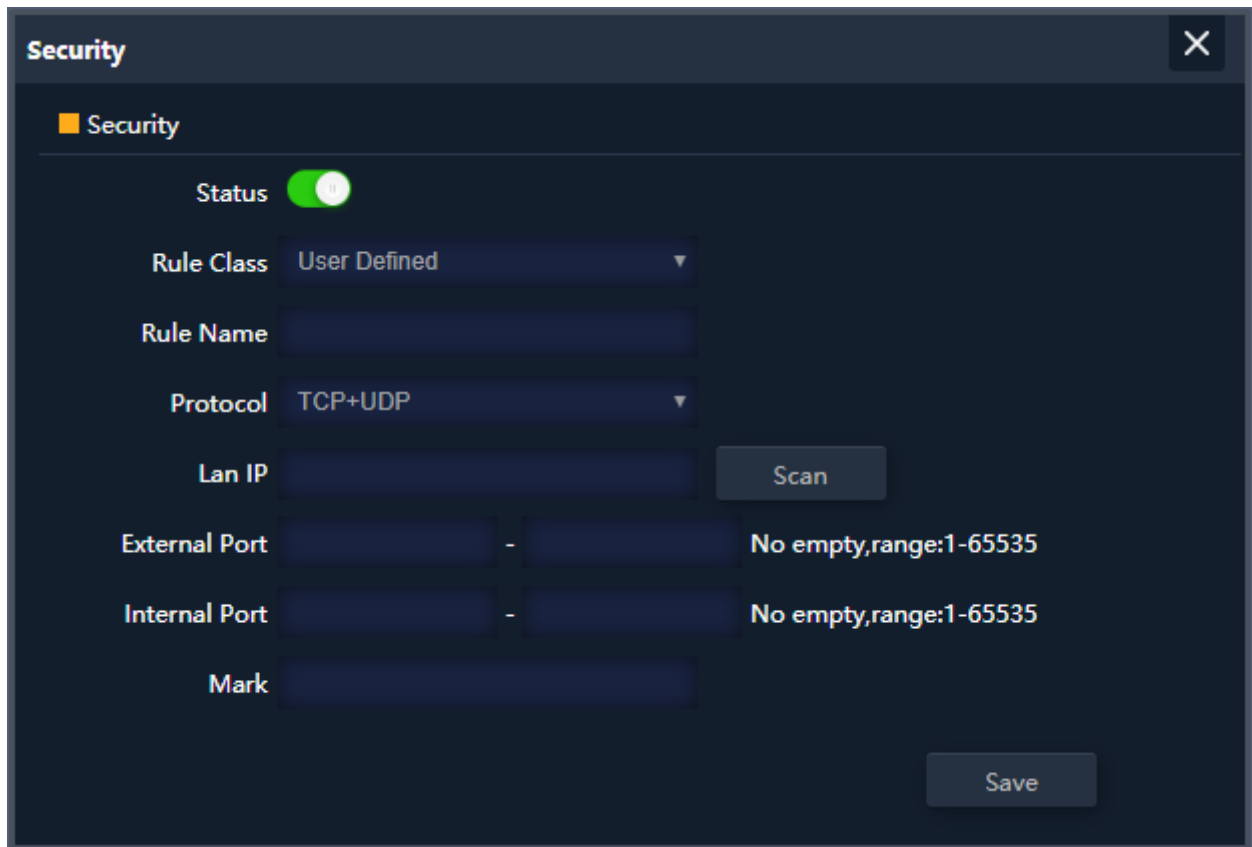


Figure 5-41 Port Mapping

The page includes the following fields:

Object	Description
Add	Press the “ <b>Add</b> ” button to add the rule in the black or white list
Delete	Press the “ <b>Delete</b> ” button to delete the rule
Apply	Press the “ <b>Apply</b> ” button to enable/disable the rule
Status	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Protocol	Select <b>TCP</b> , <b>UDP</b> or <b>TCP+UDP</b>
LAN IP	Enter the IP address that you need for port forwarding
External Port	Enter the external port range
Internal Port	Enter the internal port range
Mark	Enter the mark string, or not

Enable/disable Port Mapping function

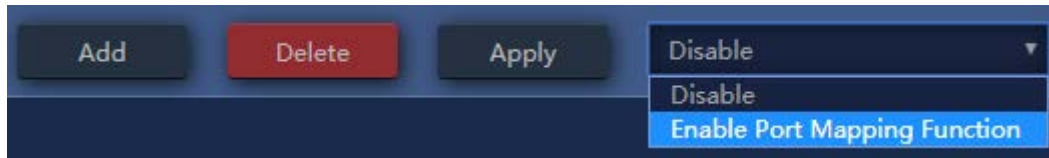


Figure 5-42 Port Mapping

#### 5.9.1.5. DMZ

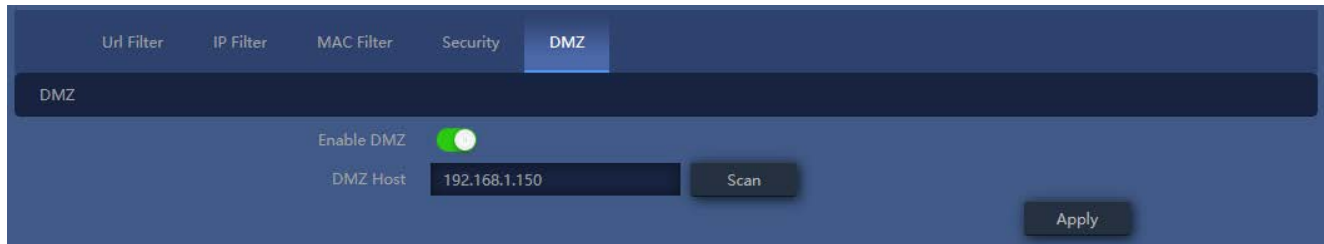


Figure 5-43 DMZ

The page includes the following fields:

Object	Description
Enable DMZ	Select <b>Enable DMZ Host</b> or <b>Disable</b>
DMZ Host IP	Enter the DMZ LAN IP

## 5.10 Manage

### 5.10.1.1. Configure

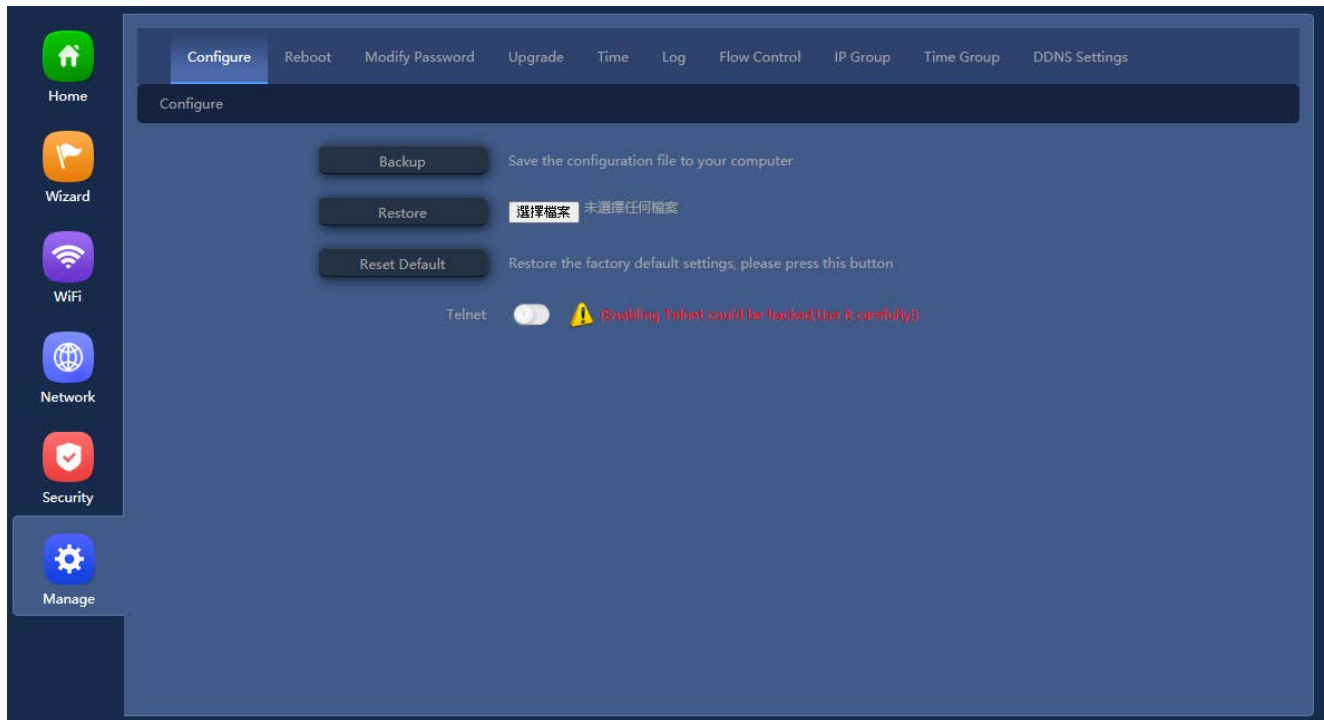


Figure 5-44 Configure

The page includes the following fields:

Object	Description
<b>Backup</b>	Press the <b>"Backup"</b> button to save the configuration file to your computer
<b>Restore</b>	Press the <b>"Restore"</b> button to reload the configuration file from your computer
<b>Reset Default</b>	Press the <b>"Reset Default"</b> button to do factory default, be careful.
<b>Telnet</b>	(Enabling Telnet could be hacked, Use it carefully!) Only for PLANET support team using.

### 5.10.1.2. Reboot

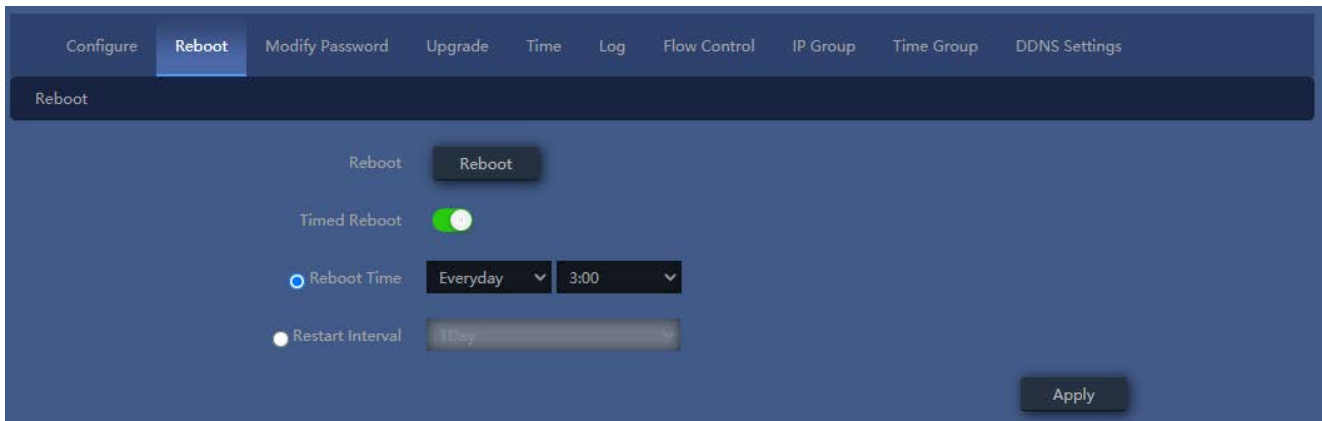


Figure 5-45 Reboot

The page includes the following fields:

Object	Description
Reboot	Press the <b>“Reboot”</b> button to restart system
Timed Reboot	Select ON ( <b>Green</b> ) or OFF ( <b>Gray</b> ) to enable or disable schedule reboot
Reboot Time	Option <b>“Reboot Time”</b> to set the date and time of the rule
Restart Interval	Option <b>“Restart Interval”</b> to select duty day of the rule

### 5.10.1.3. Modify Password

The page you can change the password.



Figure 5-46 Modify Password

#### 5.10.1.4. Upgrade



Figure 5-47 Upgrade

The page includes the following fields:

Object	Description
Select file	Press the “ <b>Select file</b> ” button to reload the firmware file from your computer <b>Be careful, choose the wrong file will crash the database</b>
Whether to resume the factory configuration	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable factory default after upgrade firmware
Upgrade	Press the “ <b>Upgrade</b> ” button to start the process

#### 5.10.1.5. Time

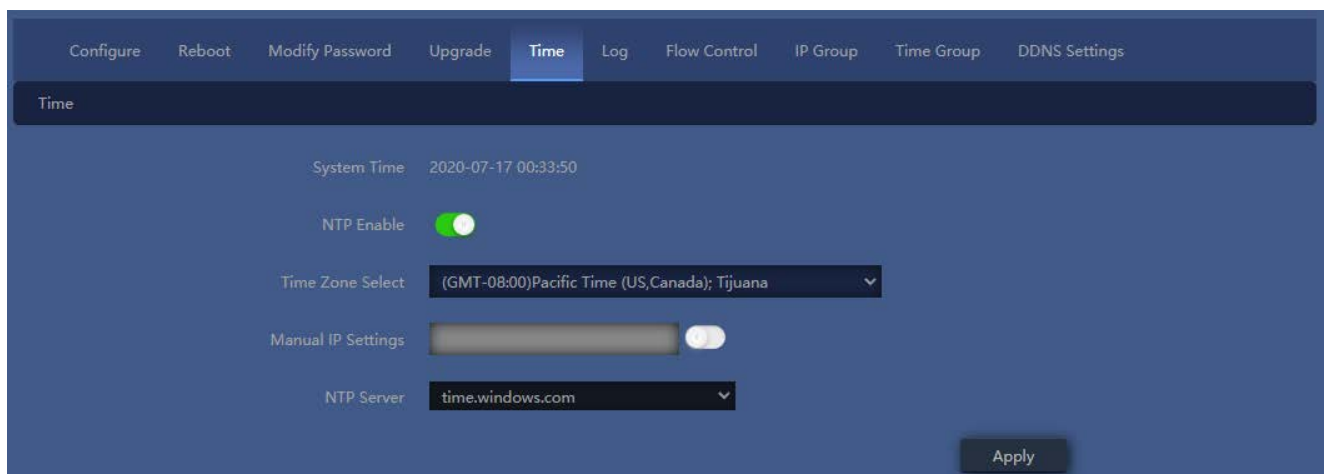


Figure 5-48 Time


The page includes the following fields:

Object	Description
System Time	Show the system time status



NTP Enable	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable NTP
Time Zone Select	Select the time zone for GMT
Manual IP settings	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable manual IP function
NTP Server	Select the NTP server

### 5.10.1.6. Log

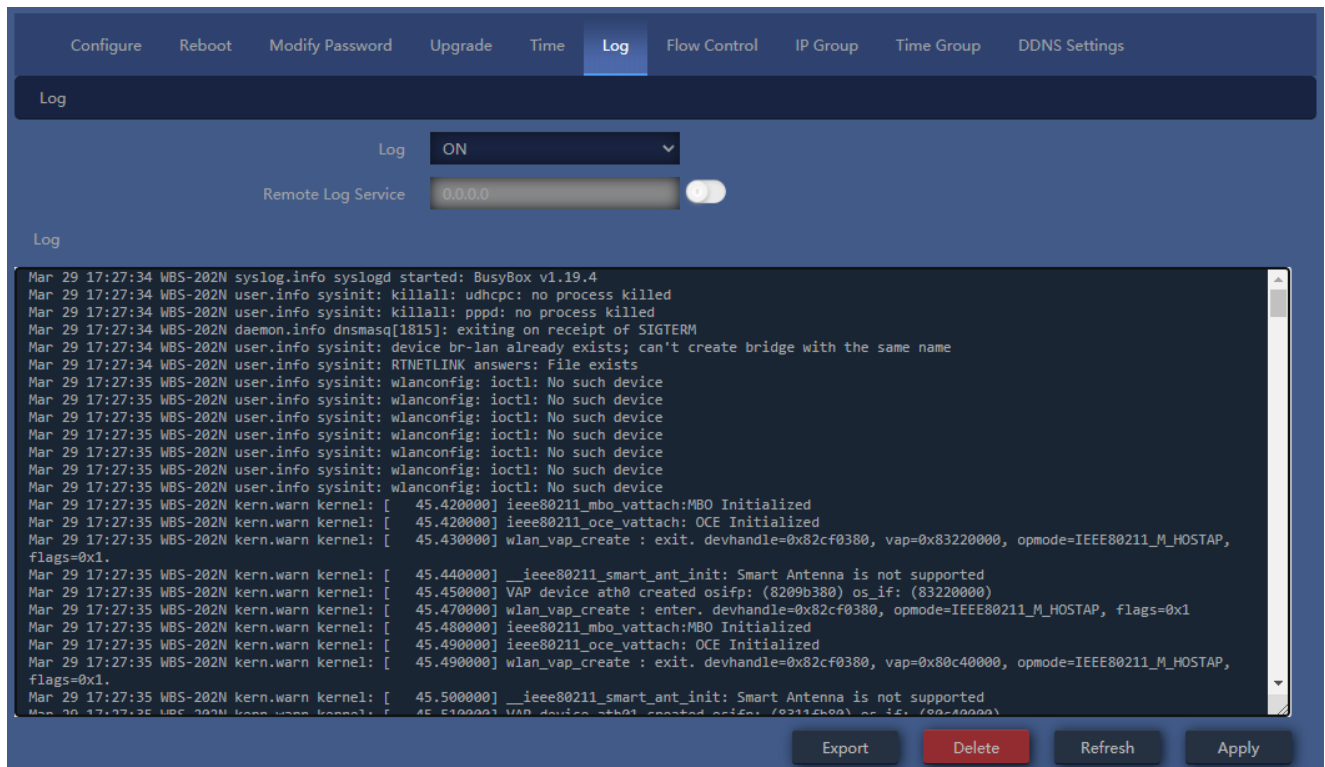

Configure Reboot Modify Password Upgrade Time **Log** Flow Control IP Group Time Group DDNS Settings

Log

Log **ON**

Remote Log Service 0.0.0.0

Log

```

Mar 29 17:27:34 WBS-202N syslog.info syslogd started: BusyBox v1.19.4
Mar 29 17:27:34 WBS-202N user.info sysinit: killall: udhcpd: no process killed
Mar 29 17:27:34 WBS-202N user.info sysinit: killall: pppd: no process killed
Mar 29 17:27:34 WBS-202N daemon.info dnsmasq[1815]: exiting on receipt of SIGTERM
Mar 29 17:27:34 WBS-202N user.info sysinit: device br-lan already exists; can't create bridge with the same name
Mar 29 17:27:34 WBS-202N user.info sysinit: RTNETLINK answers: File exists
Mar 29 17:27:35 WBS-202N user.info sysinit: wlanconfig: ioctl: No such device
Mar 29 17:27:35 WBS-202N user.info sysinit: wlanconfig: ioctl: No such device
Mar 29 17:27:35 WBS-202N user.info sysinit: wlanconfig: ioctl: No such device
Mar 29 17:27:35 WBS-202N user.info sysinit: wlanconfig: ioctl: No such device
Mar 29 17:27:35 WBS-202N user.info sysinit: wlanconfig: ioctl: No such device
Mar 29 17:27:35 WBS-202N user.info sysinit: wlanconfig: ioctl: No such device
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.420000] ieee80211_mbo_vattach:MBO Initialized
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.420000] ieee80211_oce_vattach: OCE Initialized
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.430000] wlan_vap_create : exit. devhandle=0x82cf0380, vap=0x83220000, opmode=IEEE80211_M_HOSTAP, flags=0x1.
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.440000] __ieee80211_smart_ant_init: Smart Antenna is not supported
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.450000] VAP device ath0 created osifp: (8209b380) os_if: (83220000)
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.470000] wlan_vap_create : enter. devhandle=0x82cf0380, opmode=IEEE80211_M_HOSTAP, flags=0x1
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.480000] ieee80211_mbo_vattach:MBO Initialized
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.490000] ieee80211_oce_vattach: OCE Initialized
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.490000] wlan_vap_create : exit. devhandle=0x82cf0380, vap=0x80c40000, opmode=IEEE80211_M_HOSTAP, flags=0x1.
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.500000] __ieee80211_smart_ant_init: Smart Antenna is not supported
Mar 29 17:27:35 WBS-202N kern.warn kernel: [ 45.510000] VAP device ath0 created osifp: (8311b380) os_if: (80c40000)

```


Export Delete Refresh Apply

Figure 5-49 Log

The page includes the following fields:

Object	Description
Log	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable
Remote Log Service	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable remote log function and enter the log server IP address
Export	Press the “ <b>Export</b> ” button to export the log.bin file
Delete	Press the “ <b>Delete</b> ” button to clear the log
Refresh	Press the “ <b>Refresh</b> ” button to refresh the log
Apply	Press the “ <b>Apply</b> ” button to save the configuration

### 5.10.1.7. Flow Control

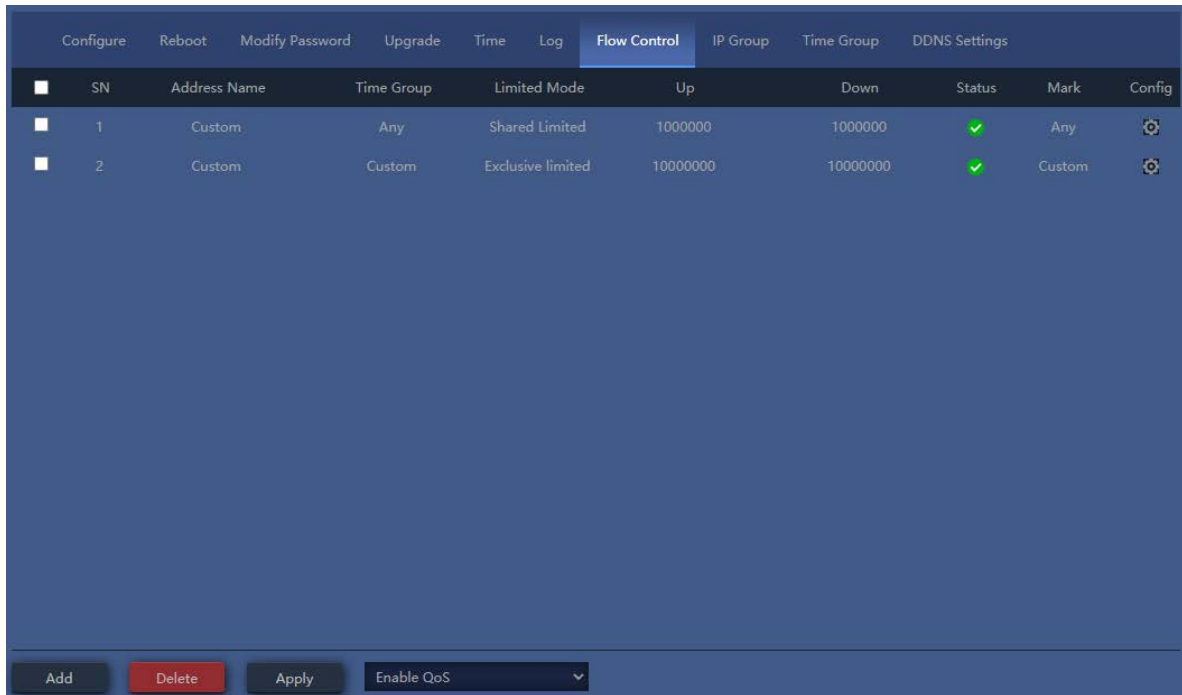


**Figure 5-50** Setup Flow Control


The page includes the following fields:

Object	Description
Add	Press the “Add” button to add the rule in the control list
Delete	Press the “Delete” button to delete the rule
Apply	Press the “Apply” button to enable/disable the rule
Status	Select enable or disable QoS rule

Enable/disable Port Mapping function

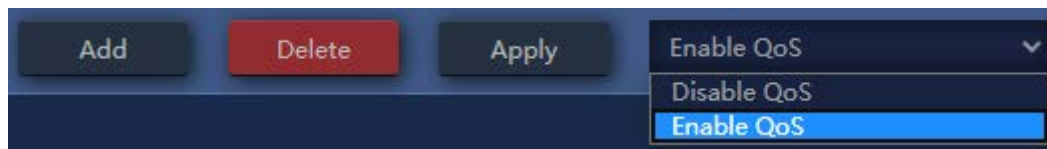

**Figure 5-51** Enable or Disable QoS Rule

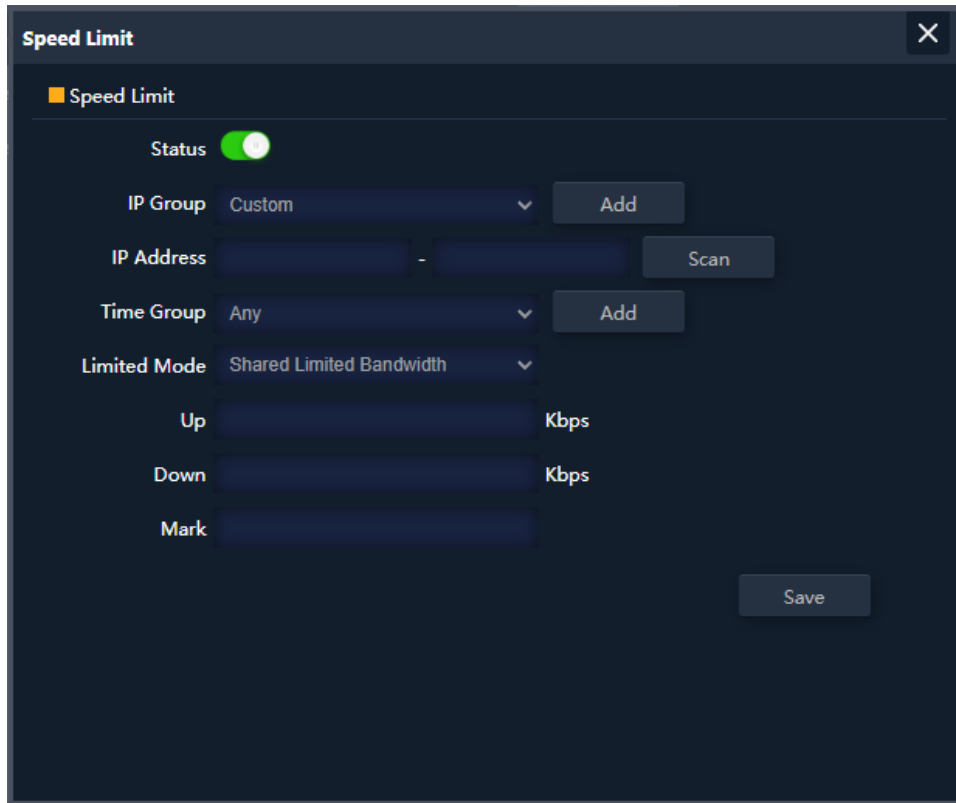

The image shows a 'Speed Limit' configuration window. It has a title bar with a close button. Below the title bar, there is a section header 'Speed Limit' with a yellow square icon. The main area contains several fields: 'Status' with a green toggle switch, 'IP Group' with a dropdown menu set to 'Custom' and an 'Add' button, 'IP Address' with a text input field and a 'Scan' button, 'Time Group' with a dropdown menu set to 'Any' and an 'Add' button, 'Limited Mode' with a dropdown menu set to 'Shared Limited Bandwidth', 'Up' with a text input field and a 'Kbps' label, 'Down' with a text input field and a 'Kbps' label, and 'Mark' with a text input field. A 'Save' button is located at the bottom right.

**Figure 5-52** Add rule of flow control(Speed Limit)

The page includes the following fields:

Object	Description
Status	Select enable or disable flow control rule
IP Group	Select custom or Add an IP group
IP Address	Enter an IP address range or use scan to select
Time Group	Select any or custom or Add a Time group
Limited Mode	Select limited mode for shared limited bandwidth or exclusive limited bandwidth
Up	Enter the upstream limited for kbps
Down	Enter the downstream limited for kbps
Mark	Enter the mark string, or not

### 5.10.1.8. IP Group

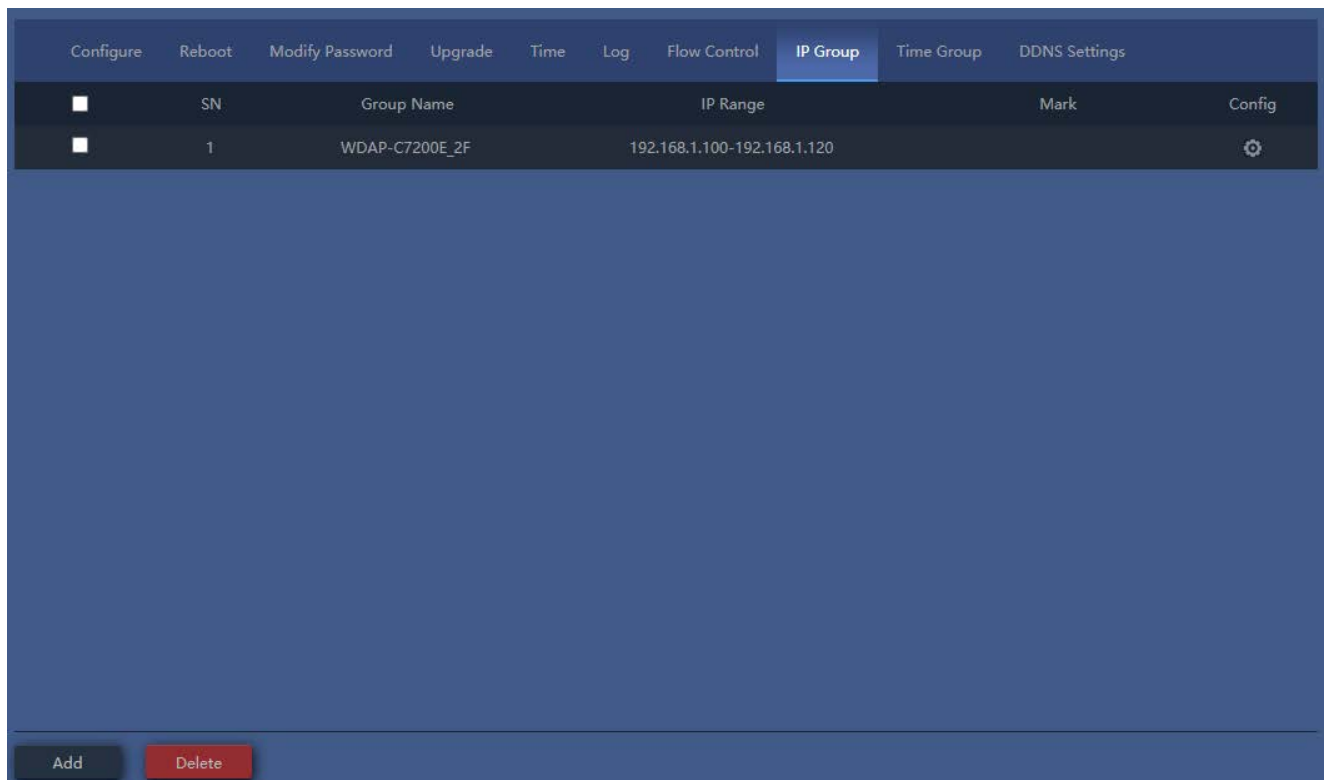


Figure 5-53 IP Group

The page includes the following fields:

Object	Description
Add	Press the “Add” button to add IP group in list
Delete	Press the “Delete” button to delete the group


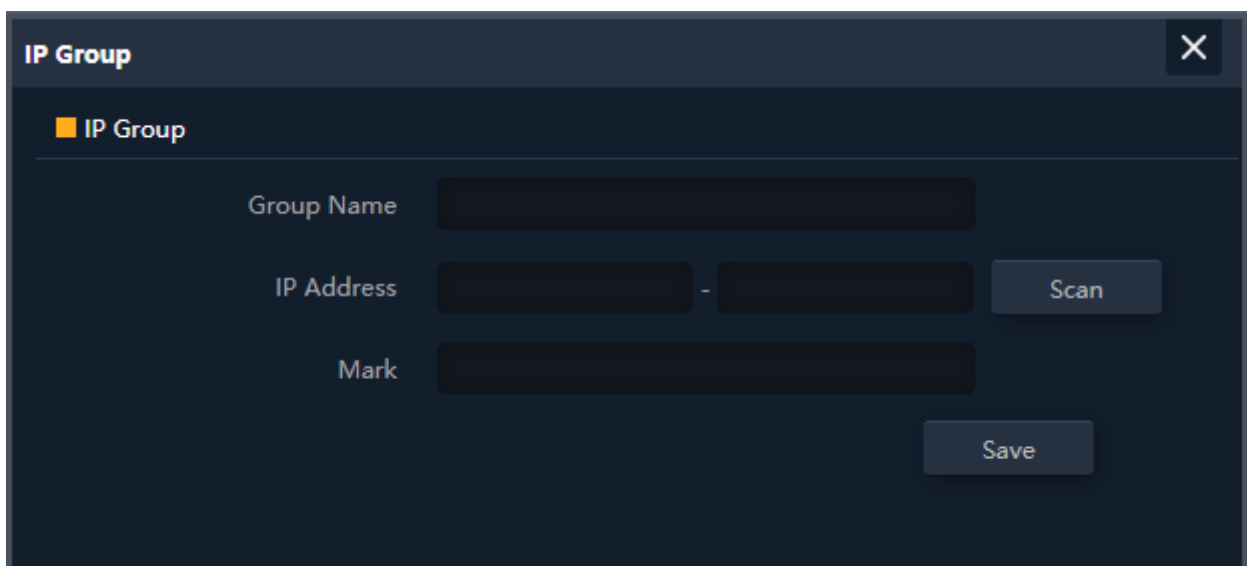


Figure 5-54 Add IP Group

The page includes the following fields:

Object	Description
Group Name	Enter an IP group description
IP Address	Enter an IP address range or use scan to select
Mark	Enter the mark string, or not


#### 5.10.1.9. Time Group

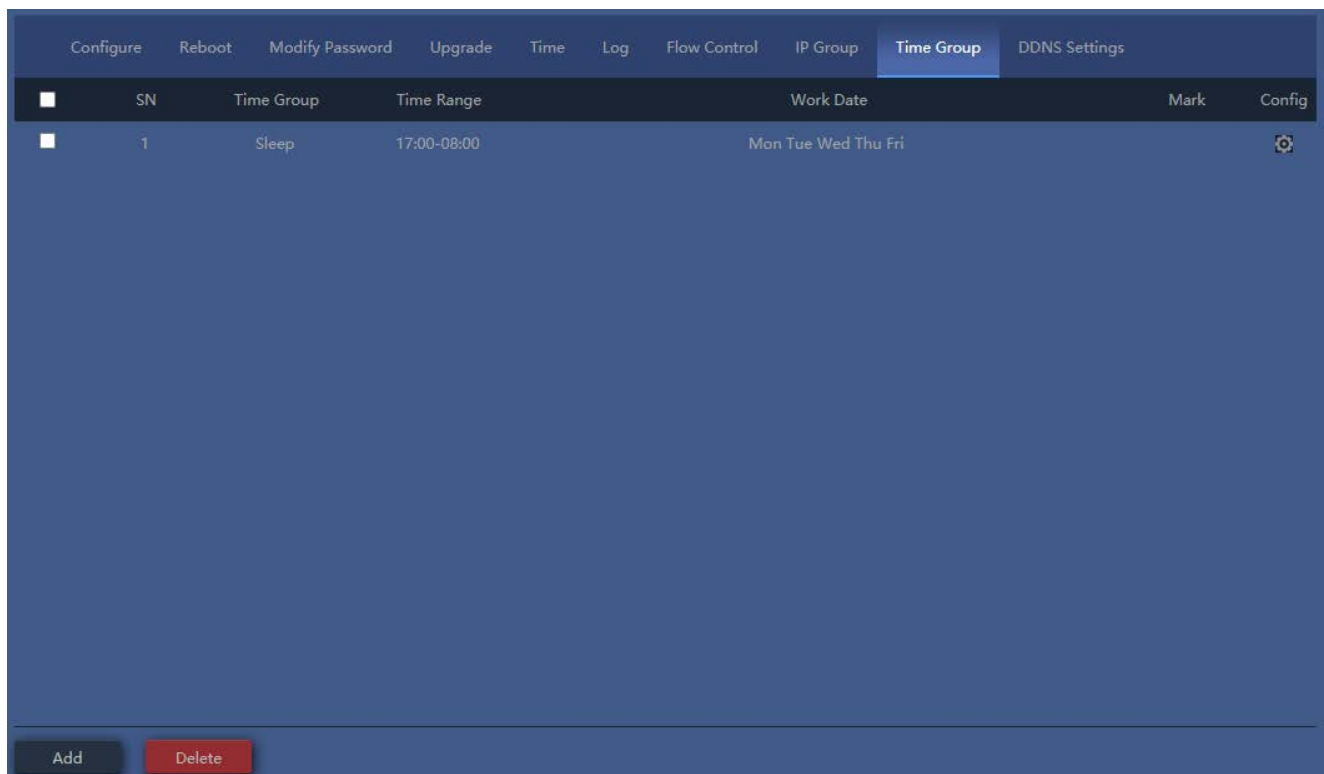

**Figure 5-55** Time Group

The page includes the following fields:

Object	Description
Add	Press the <b>"Add"</b> button to add time group in list
Delete	Press the <b>"Delete"</b> button to delete the group

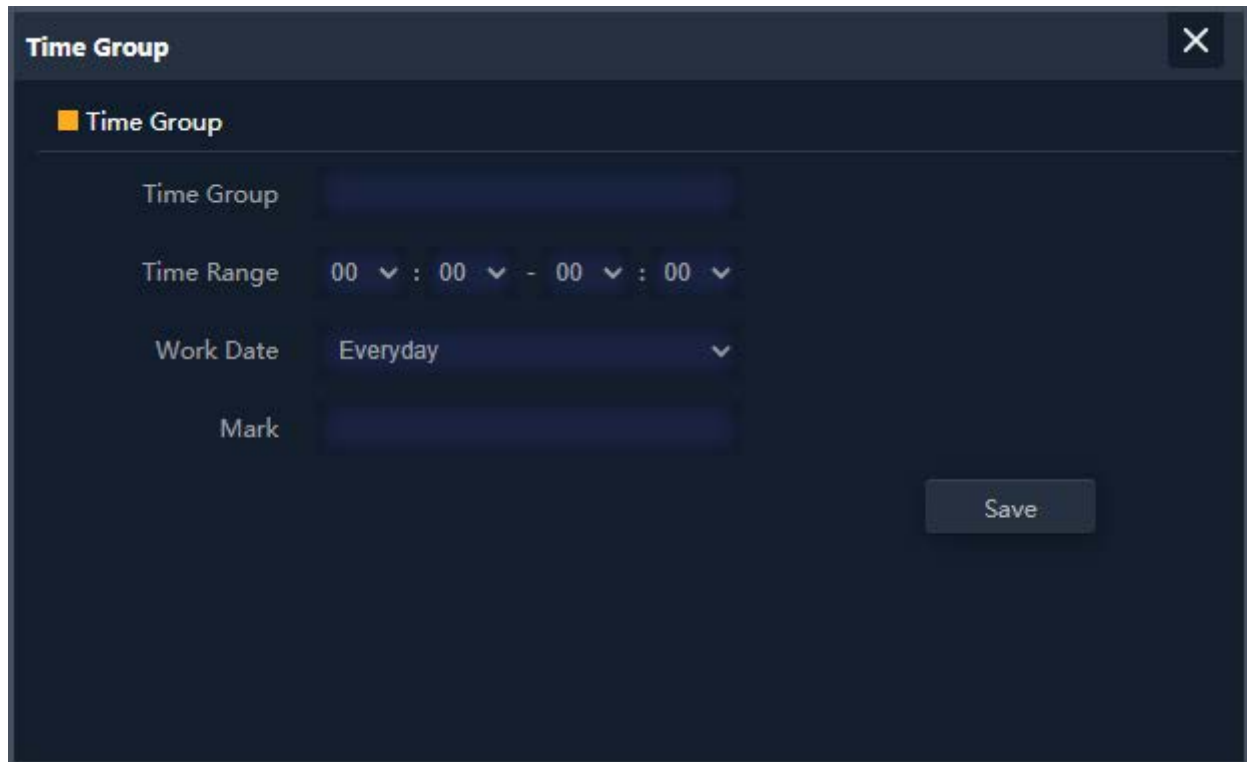


**Figure 5-56** Add Time Group

The page includes the following fields:

Object	Description
<b>Time Group</b>	Enter an time group description
<b>Time Range</b>	Select start time and end time for time range
<b>Work Date</b>	Select work day by option table
<b>Mark</b>	Enter the mark string, or not

### 5.10.1.10. DDNS Setting

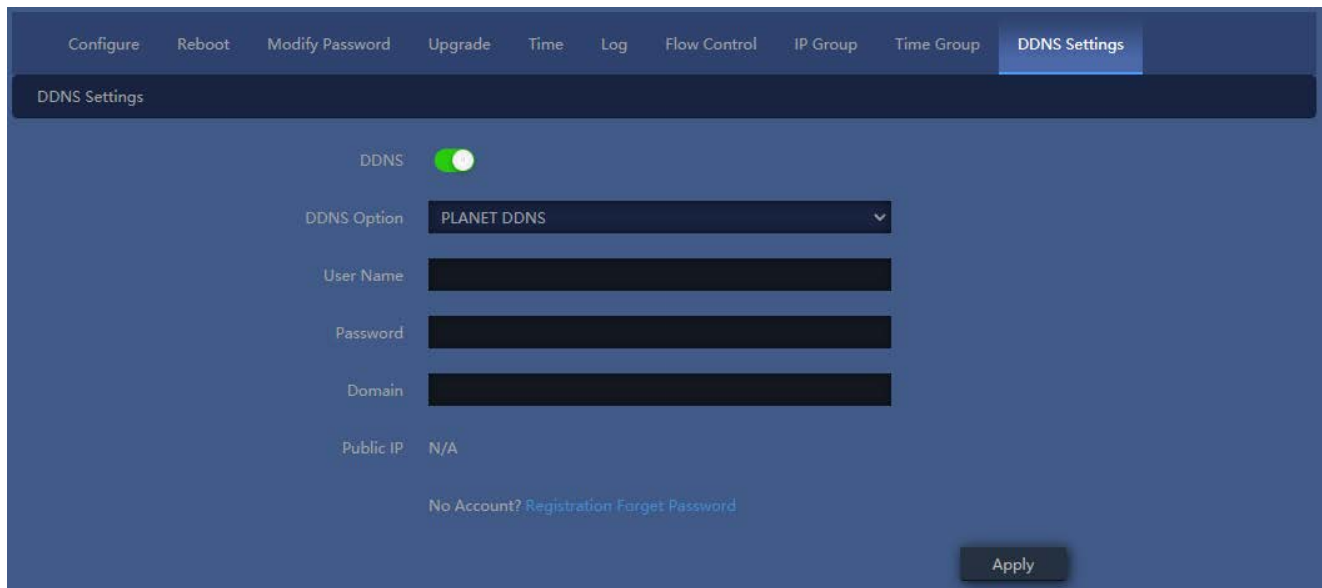

**Figure 5-57** DDNS Setting

The page includes the following fields:

Object	Description
<b>DDNS</b>	Select <b>ON (Green)</b> or <b>OFF (Gray)</b> to enable or disable PLANET DDNS
<b>DDNS Option</b>	Select PLANET DDNS or Easy DDNS function
<b>User Name</b>	Enter user account for PLANET DDNS. If you use Easy DDNS it was not necessary.
<b>Password</b>	Enter password for PLANET DDNS. If you use Easy DDNS it was not necessary.
<b>Domain</b>	Enter unique domain name for device. If you use Easy DDNS it will be automatically generated
<b>Public IP</b>	Public IP address is necessary for WAN IP
<b>No Account Registration Forget Password</b>	Hyperlink to <a href="http://www.planetddns.com/?view=registration">http://www.planetddns.com/?view=registration</a>

DDNS ☒

DDNS Option PLANET EasyDDNS

User Name pt55417a

Password \*\*\*\*\*

Domain pt55417a.planetddns.com

Public IP N/A

No Account? [Registration](#) [Forget Password](#)

Apply

Figure 5-58 PLANET EasyDDNS



## Chapter 6. Quick Connection to a Wireless Network

In the following sections, the **default SSID** of the WBS-202N/WBS-502N is configured to “**default**”.

### 6.1 Windows XP (Wireless Zero Configuration)

**Step 1:** Right-click on the **wireless network icon** displayed in the system tray



Figure 6-1 System Tray – Wireless Network Icon

**Step 2:** Select [View Available Wireless Networks]

**Step 3:** Highlight and select the wireless network (SSID) to connect

- (1) Select SSID [default]
- (2) Click the [Connect] button


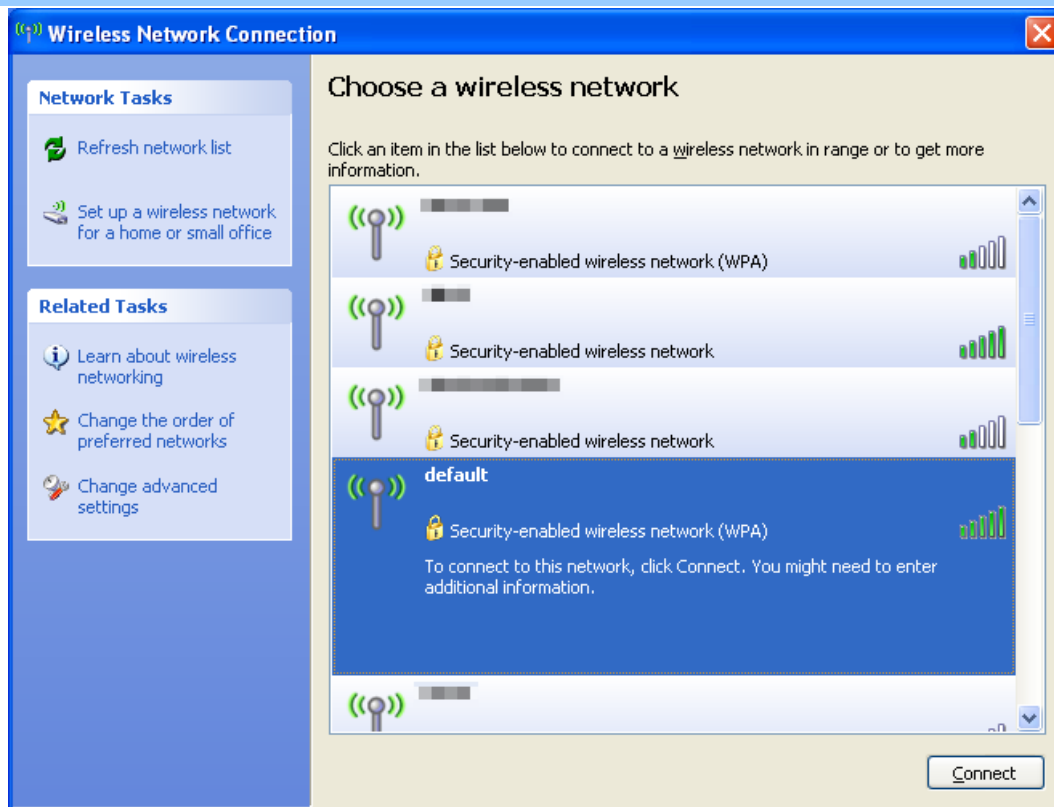


Figure 6-2 Choosing a Wireless Network


**Step 4:** Enter the **encryption key** of the wireless AP

- (1) The Wireless Network Connection box will appear
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Click the [Connect] button

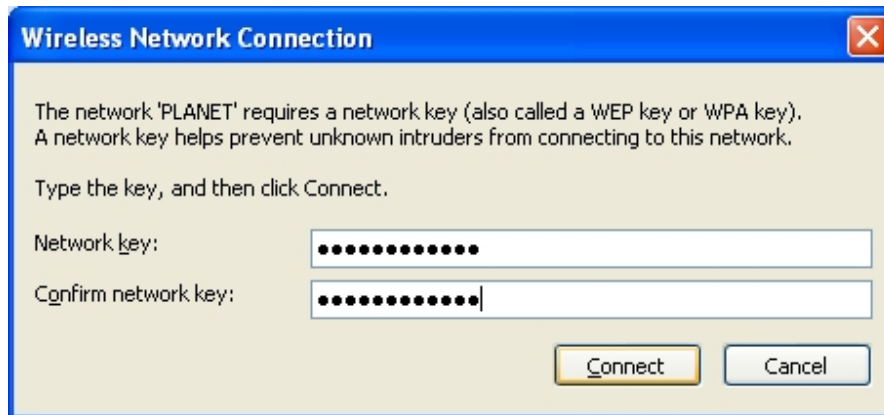

**Figure 6-3** Entering the Network Key

**Step 5:** Check if “Connected” is displayed

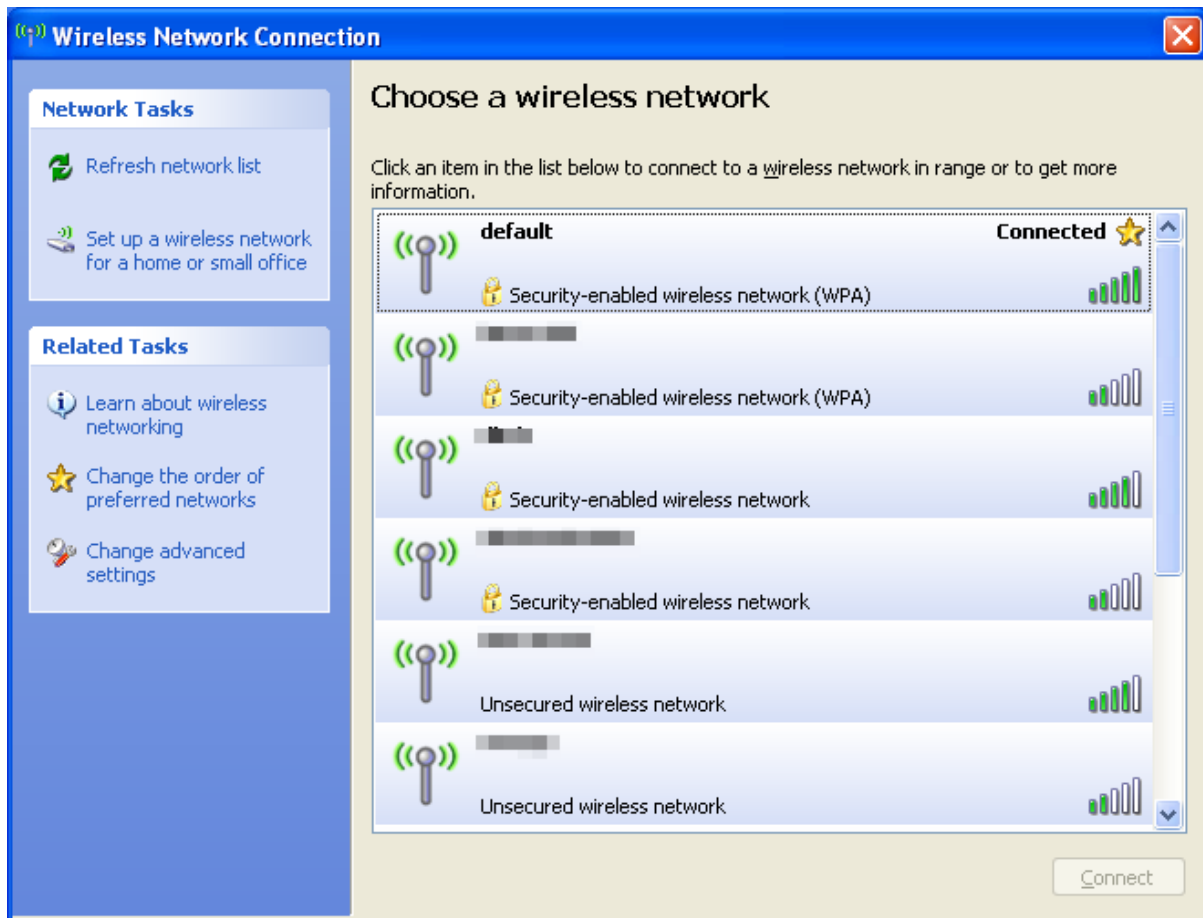

**Figure 6-4** Choosing a Wireless Network -- Connected



Some laptops are equipped with a “Wireless ON/OFF” switch for the internal wireless LAN. Make sure the hardware wireless switch is switched to “ON” position.

## 6.2 Windows 7 (WLAN AutoConfig)

WLAN AutoConfig service is built-in in Windows 7 that can be used to detect and connect to wireless network. This built-in wireless network connection tool is similar to wireless zero configuration tool in Windows XP.

**Step 1:** Right-click on the **network icon** displayed in the system tray



Figure 6-5 Network Icon

**Step 2:** Highlight and select the wireless network (SSID) to connect

- (1) Select SSID [**default**]
- (2) Click the [**Connect**] button

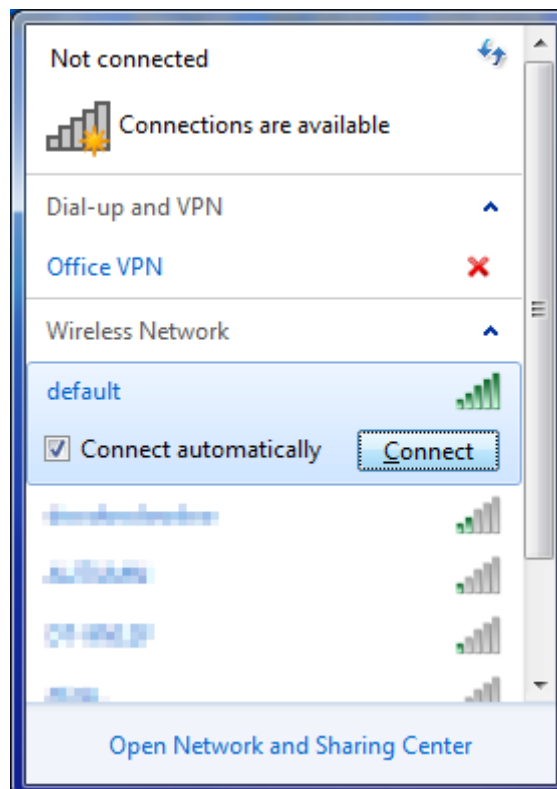


Figure 6-6 WLAN AutoConfig



Note


If you will be connecting to this Wireless AP in the future, check **[Connect automatically]**.

**Step 4:** Enter the **encryption key** of the wireless AP

- (1) The Connect to a Network box will appear
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Click the [OK] button




**Figure 6-7** Typing the Network Key

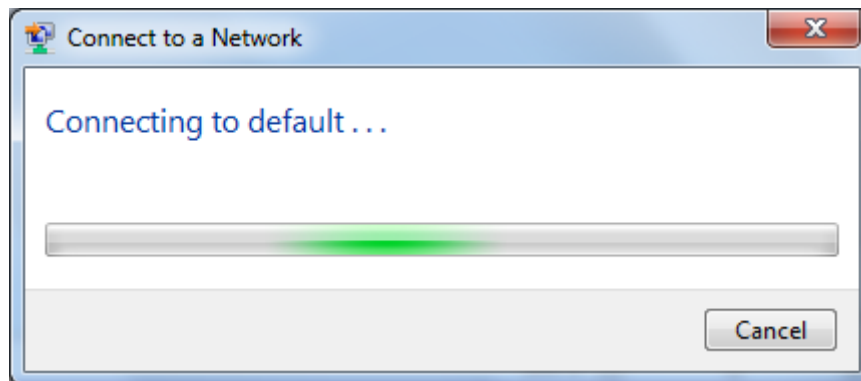

**Figure 6-8** Connecting to a Network

**Step 5:** Check if “**Connected**” is displayed

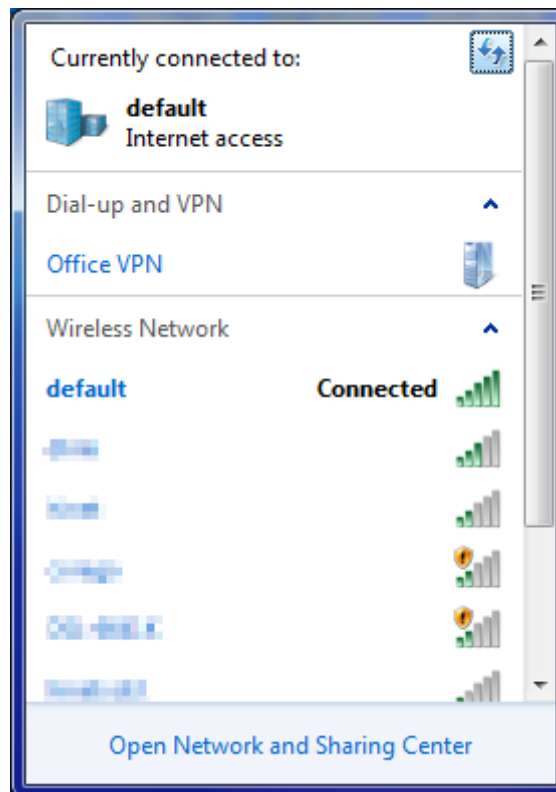

**Figure 6-9** Connected to a Network

## 6.3 Mac OS X 10.x

In the following sections, the default SSID of the WBS-202N/WBS-502N is configured to “default”.

**Step 1:** Right-click on the **network icon** displayed in the system tray


The AirPort Network Connection menu will appear



**Figure 6-10** Mac OS – Network Icon

**Step 2:** Highlight and select the wireless network (SSID) to connect


- (1) Select and SSID [**default**]
- (2) Double-click on the selected SSID

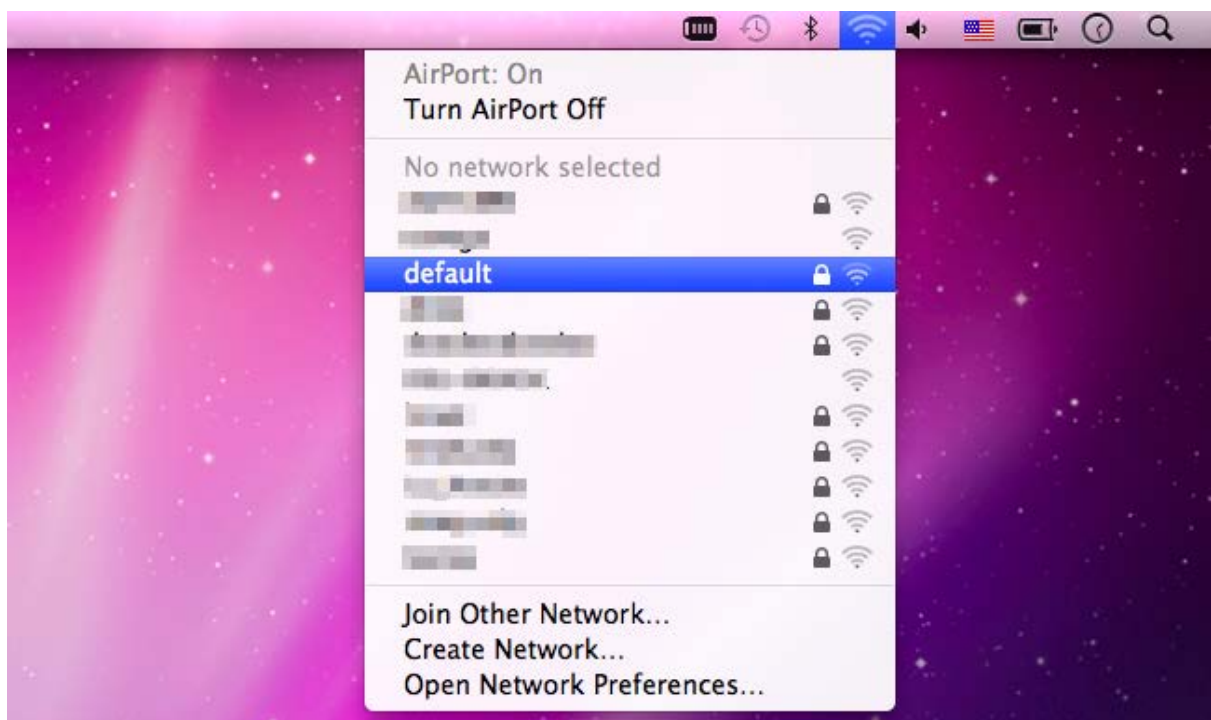

**Figure 6-11** Highlighting and Selecting the Wireless Network

**Step 4:** Enter the **encryption key** of the wireless AP

- (1) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (2) Click the [OK] button

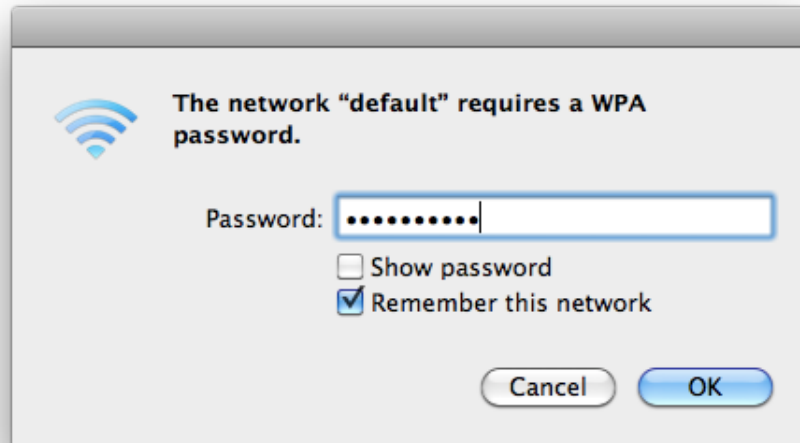


**Figure 6-12** Enter the Password



If you will be connecting to this Wireless AP in the future, check **[Remember this network]**.

**Step 5:** Check if the AirPort is connected to the selected wireless network.

If “Yes”, then there will be a “check” symbol in front of the SSID.

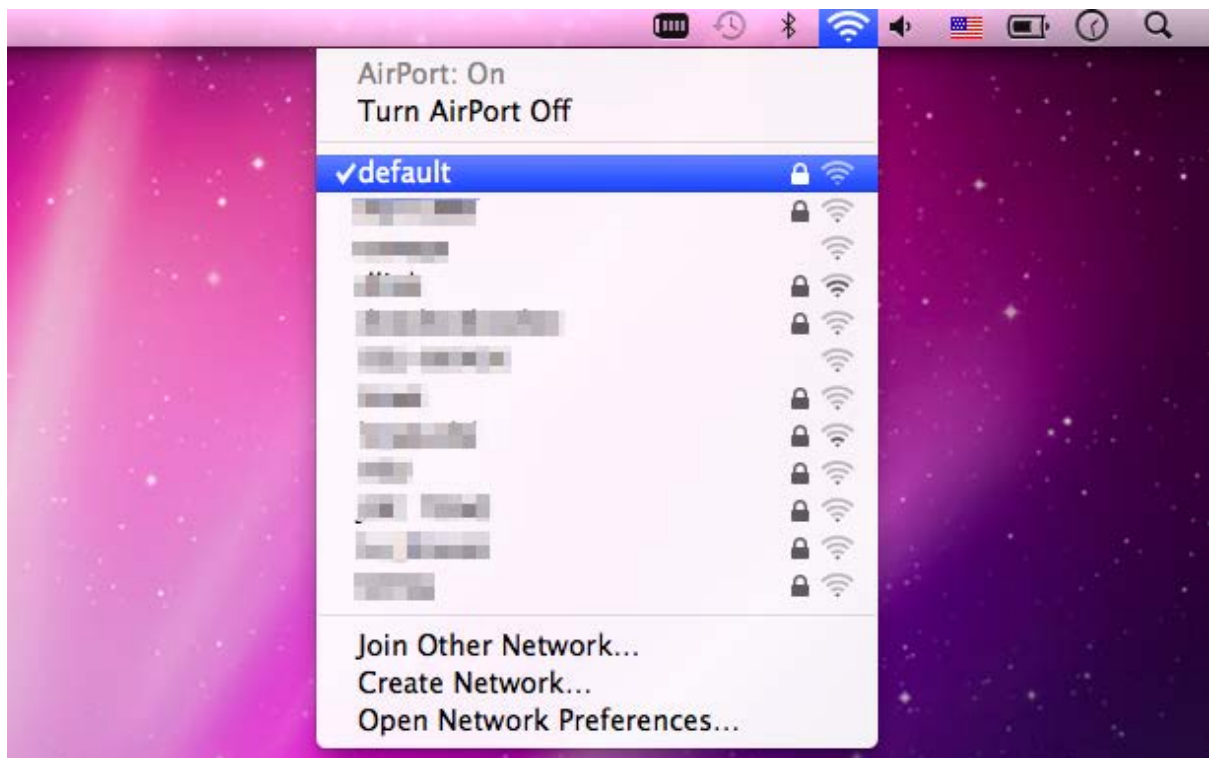


**Figure 6-13** Connected to the Network




There is another way to configure the MAC OS X wireless settings:

**Step 1:** Click and open the [System Preferences] by going to **Apple > System Preference** or **Applications**

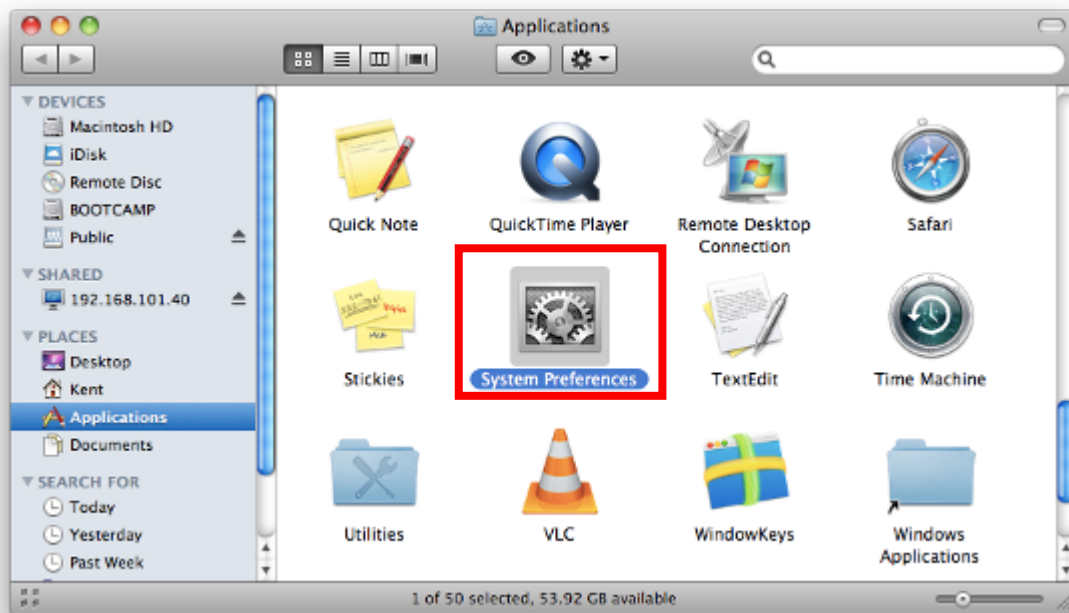

**Figure 6-14** System Preferences

**Step 2:** Open **Network Preference** by clicking on the [Network] icon

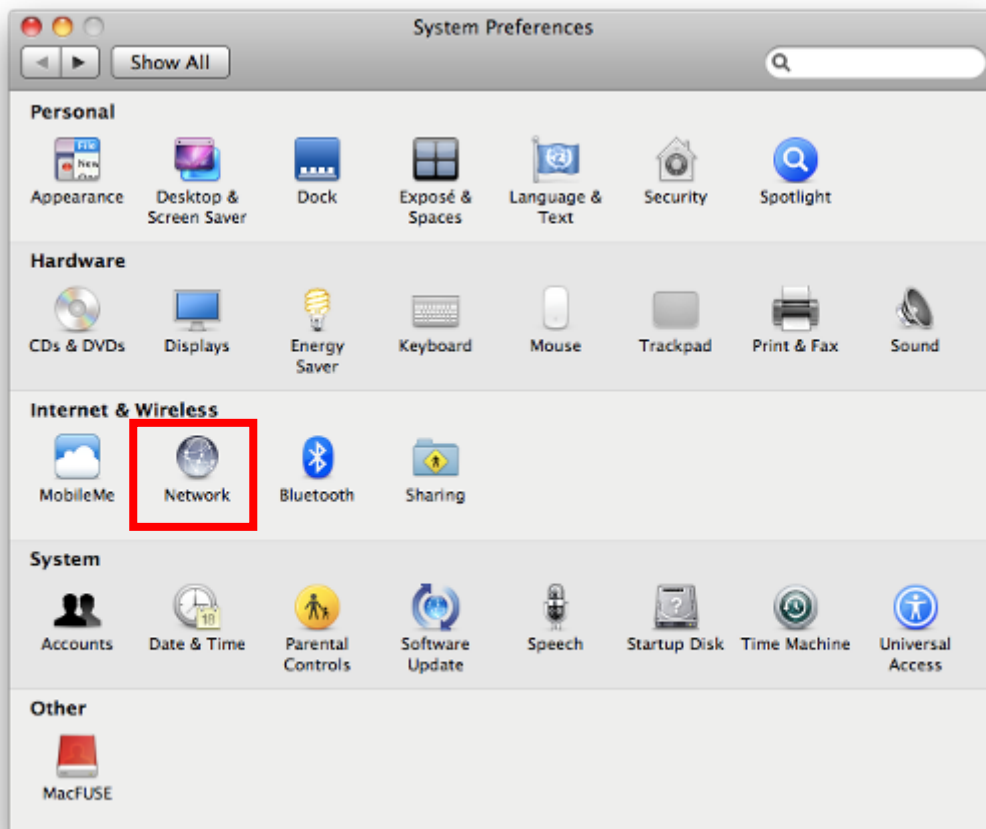


**Figure 6-15** System Preferences -- Network



**Step 3:** Check Wi-Fi setting and select the available wireless network

- (1) Choose the **AirPort** on the left-menu (make sure it is ON)
- (2) Select Network Name **[default]** here

If this is the first time to connect to the Wireless AP, it should show “Not network selected”.

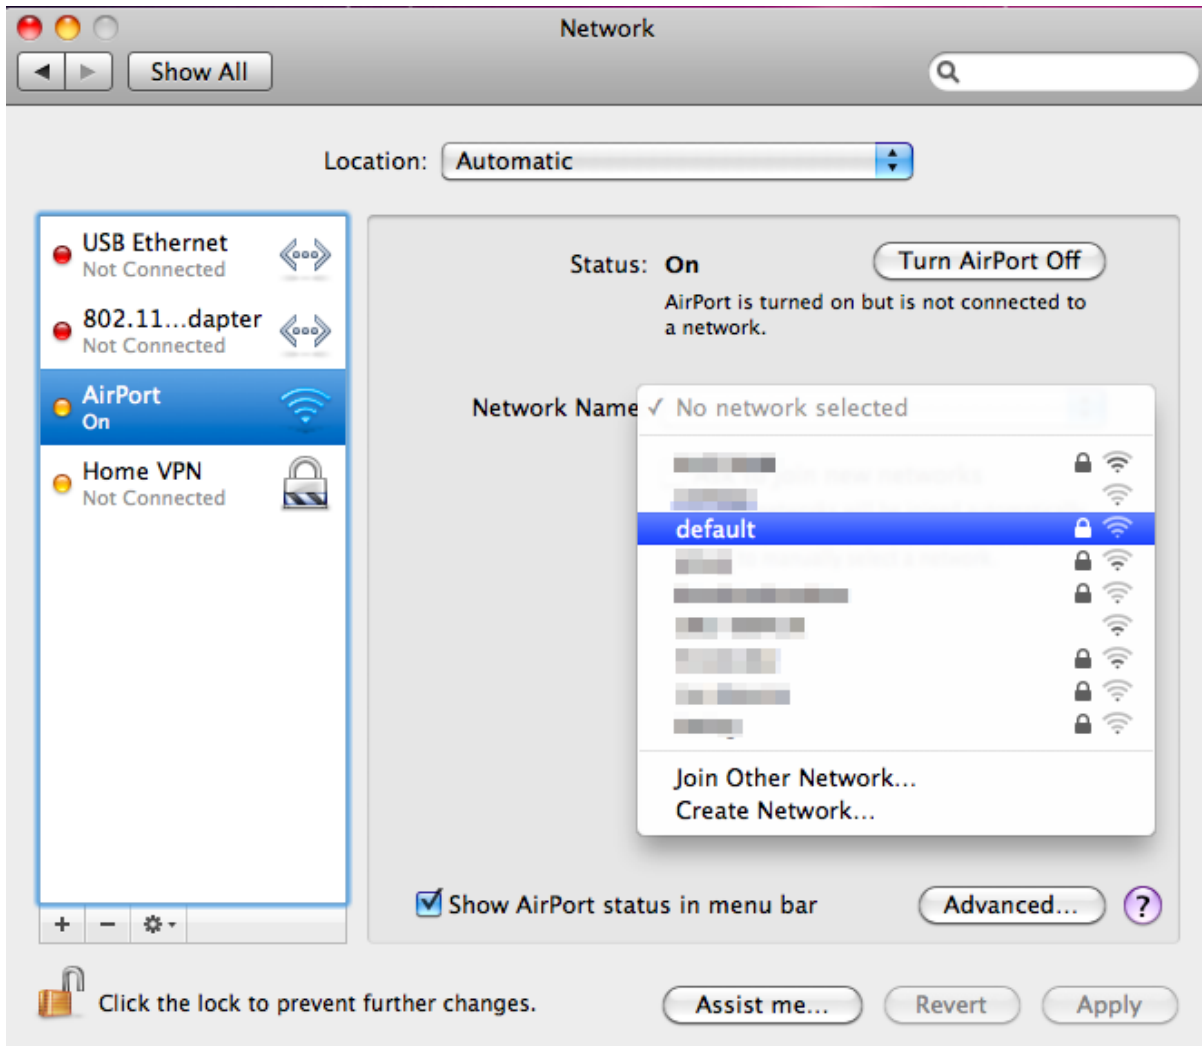

**Figure 6-16** Selecting the Wireless Network

## 6.4 iPhone/iPod Touch/iPad

In the following sections, the **default SSID** of the WBS-202N/WBS-502N is configured to “**default**”.

**Step 1:** Tap the [Settings] icon displayed in the home screen



Figure 6-17 iPhone – Settings icon

**Step 2:** Check Wi-Fi setting and select the available wireless network

(1) Tap [General] \ [Network]

(2) Tap [Wi-Fi]

If this is the first time to connect to the Wireless AP, it should show “Not Connected”.

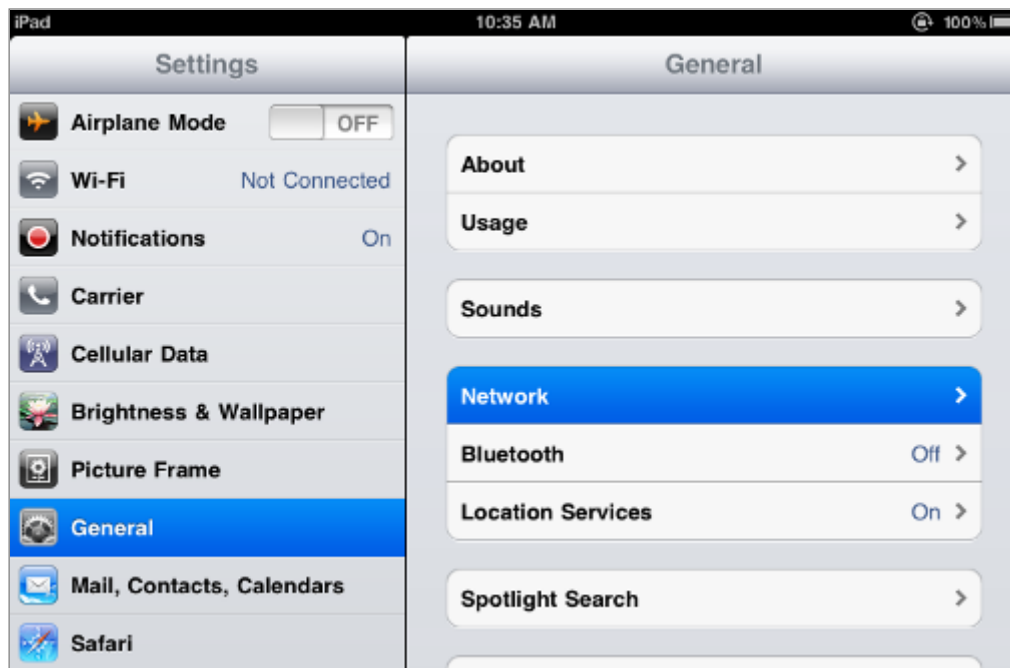


Figure 6-18 Wi-Fi Setting



Figure 6-19 Wi-Fi Setting – Not Connected

**Step 3:** Tap the target wireless network (SSID) in “Choose a Network...”


- (1) Turn on Wi-Fi by tapping “Wi-Fi”
- (2) Select SSID [default]



Figure 6-20 Turning on Wi-Fi

**Step 4:** Enter the **encryption key** of the Wireless AP

- (1) The password input screen will be displayed
- (2) Enter the encryption key that is configured in [section 5.7.2.1](#)
- (3) Tap the [Join] button

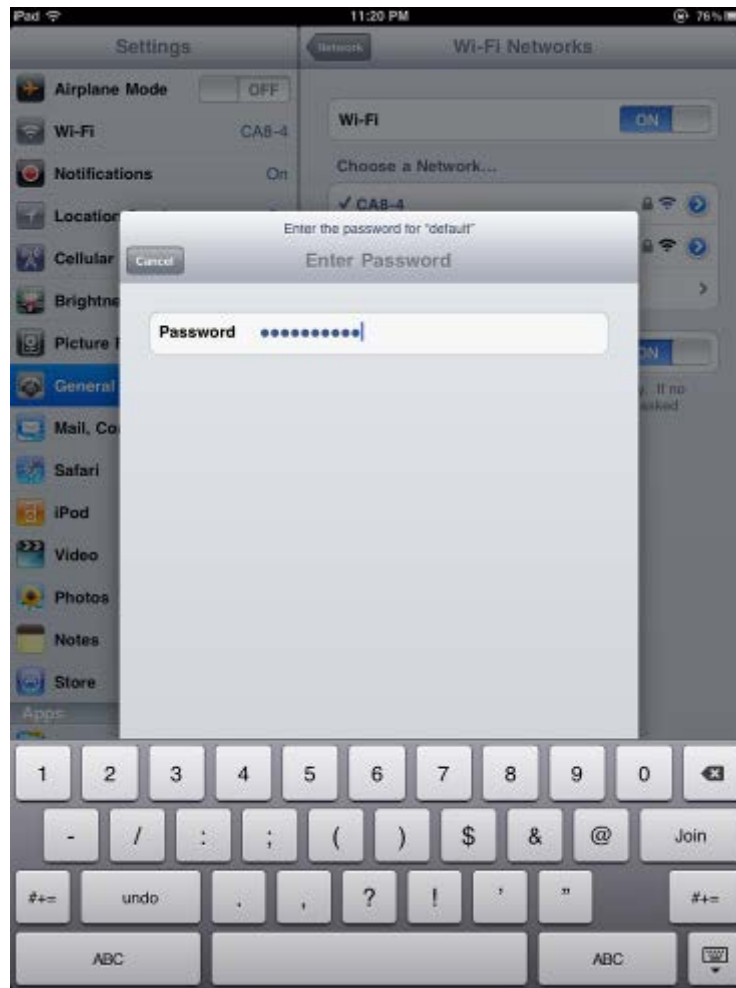

**Figure 6-21** iPhone -- Entering the Password

**Step 5:** Check if the device is connected to the selected wireless network.

If "Yes", then there will be a "check" symbol in front of the SSID.



**Figure 6-22** iPhone -- Connected to the Network

## Appendix A: Planet Smart Discovery Utility

To easily list the WBS-202N/WBS-502N in your Ethernet environment, the Planet Smart Discovery Utility is an ideal solution.


The following installation instructions guide you to running the Planet Smart Discovery Utility.

**Step 1:** Deposit the **Planet Smart Discovery Utility** in administrator PC.

**Step 2:** Run this utility and the following screen appears.



**Step 3:** Press **“Refresh”** for the current connected devices in the discovery list as shown in the following screen:

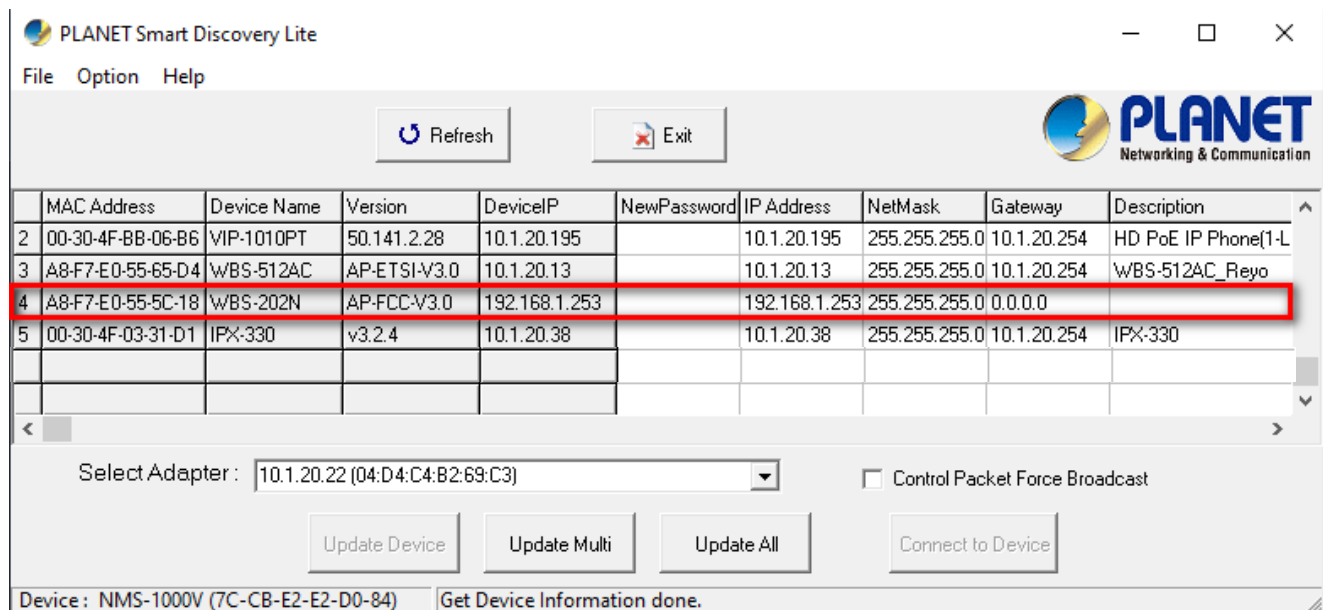

**Step 3:** Press **“Connect to Device”** and then the Web login screen appears.




The fields in white background can be modified directly and then you can apply the new setting by clicking **“Update Device”**.


## Appendix B: FAQs

### Q1: How to set up the AP Client Connection

#### Topology:

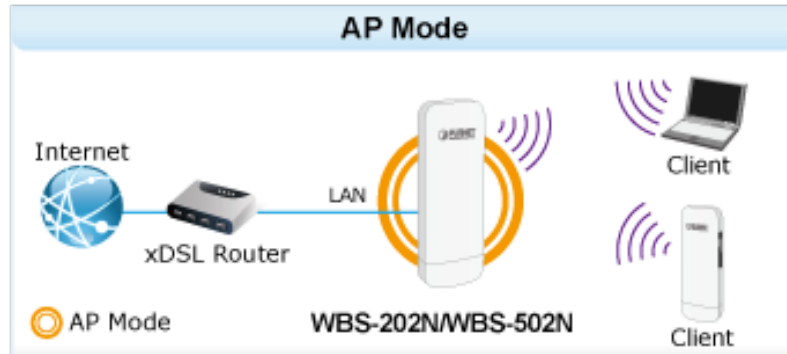

**Step1.** Use static IP in the PCs that are connected with AP-1(Site-1) and AP-2(Site-2). In this case, Site-1 is "192.168.1.101", and Site-2 is "192.168.1.200".

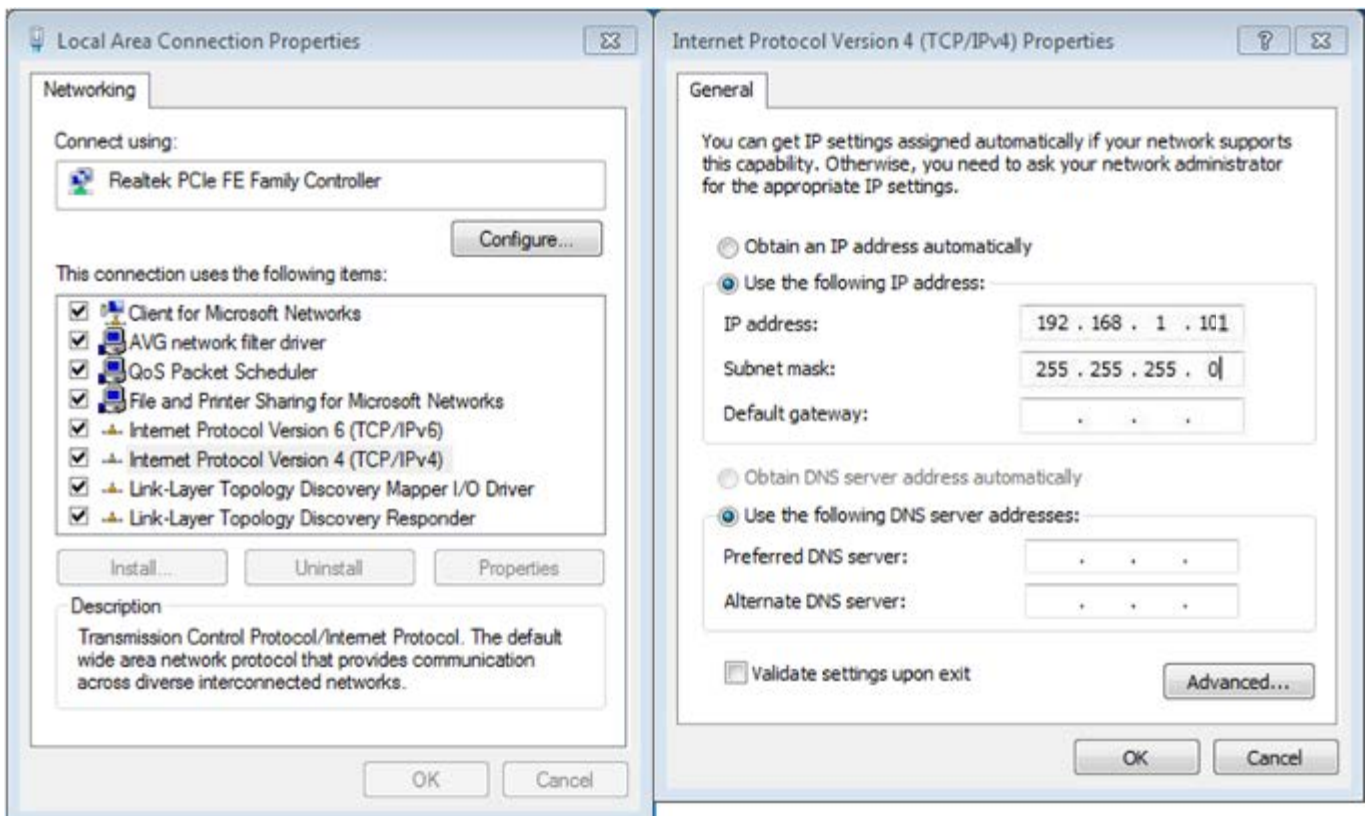


**Step2.** In AP-2, change the PtP switch to slave, the default IP is **192.168.1.100**.

**LAN Settings**


IP Mode	Static IP
Lan IP	192.168.1.100
Subnet	255.255.255.0

**Step 3.** In AP-1, go to “**Wizard**” to configure it to **AP Mode**. In AP-2, configure it to **Repeater Mode**.


AP-1

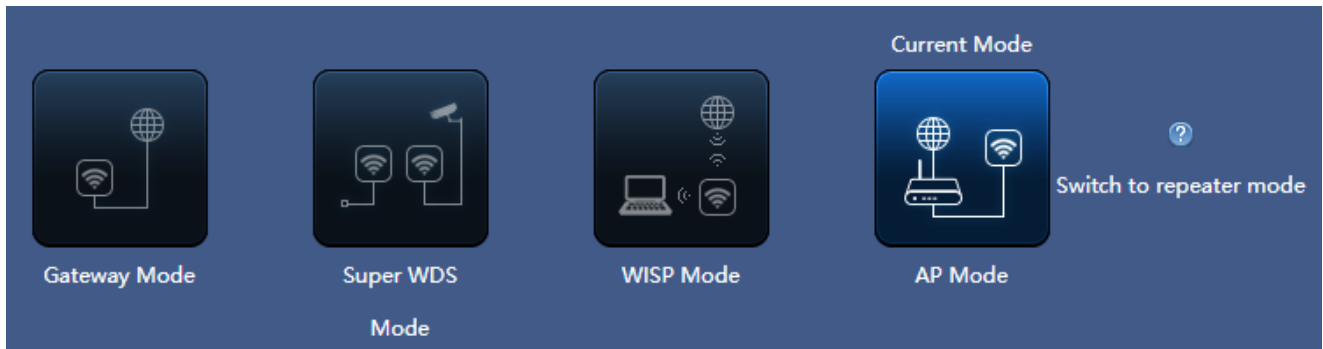

AP-2

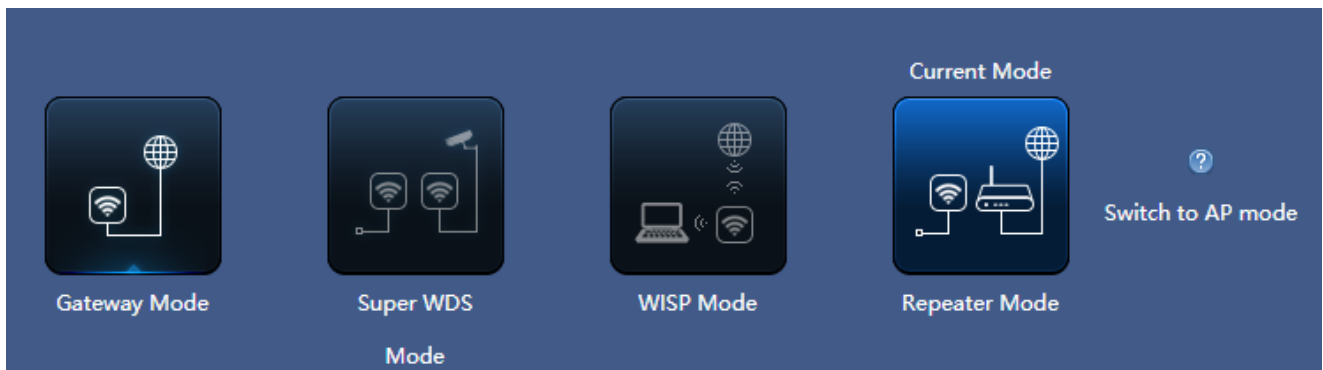

**Step 4.** In AP-2, press **Scan AP** to search the AP-1. You can also enter the MAC address, SSID, encryption and bandwidth if you know what they are.

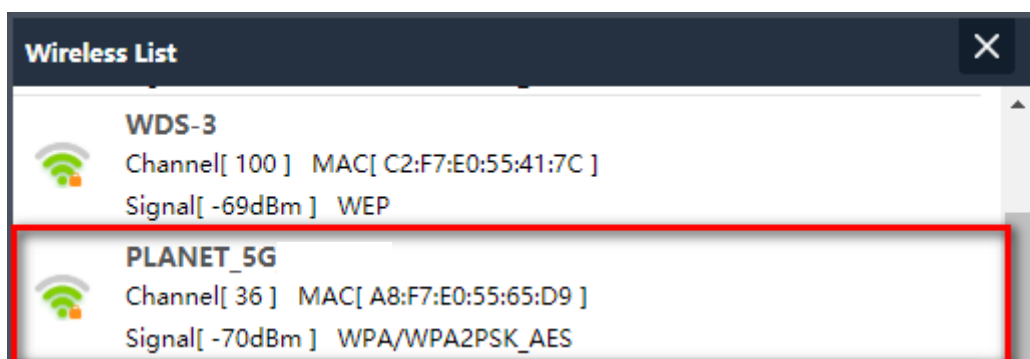



### Repeater Settings

Repeater SSID: PLANET\_5G Scan

Lock BSSID: A8:F7:E0:55:65:D9 0

Encryption: WPA/WPA2PSK\_AES ▼

Password: 77777777


BandWidth: 20M/40M/80M ▼

P2P: 0

Next

**Step 5.** Click “Next” to finish the setting. ( The default Password is “qj6x962k6” )

**Step 6.** Click “Device Status” to check connection status.

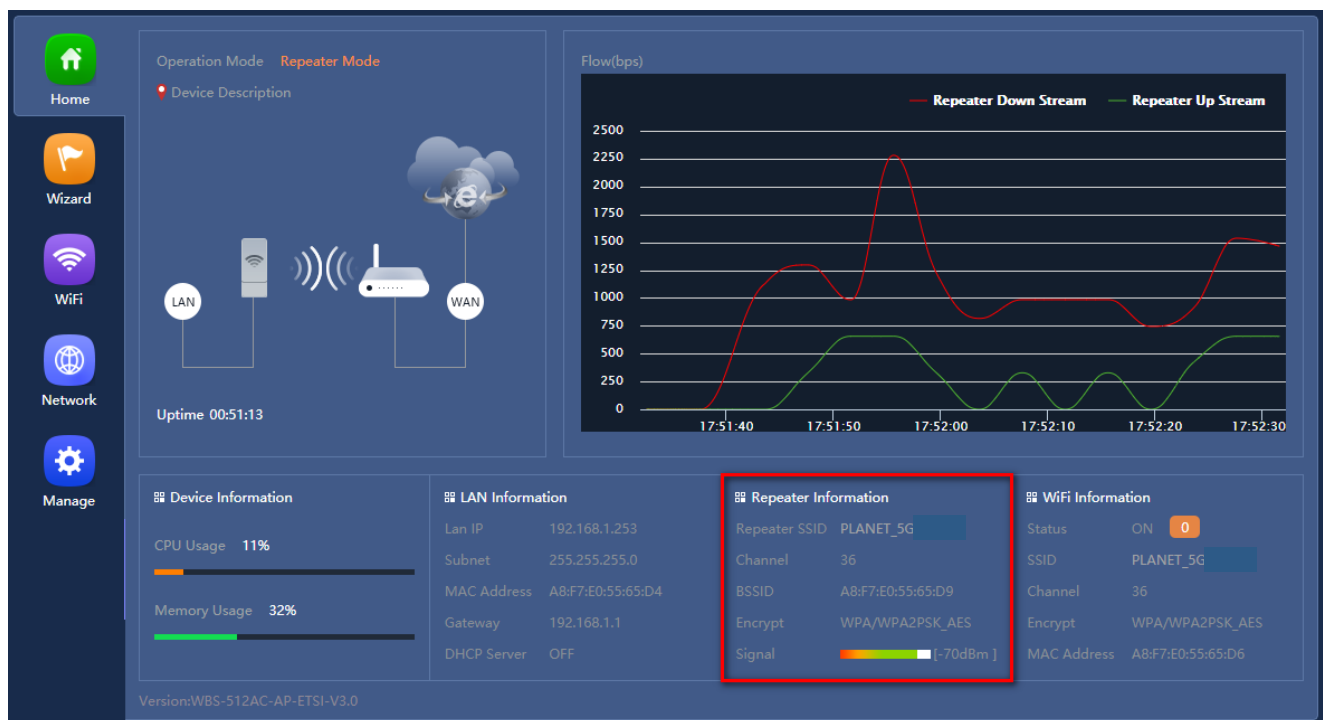



**Step 7.** Use command line tool to ping each other to ensure the link is successfully established.

From Site-1, ping 192.168.1.200; and in Site-2, ping 192.168.1.101.


```
C:\WINDOWS\system32\CMD.exe - ping 192.168.1.100 -t
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.0.101:
    Packets: Sent = 25, Received = 0, Lost = 25 (100% loss),
Control-C
^C
C:\Documents and Settings\Administrator>ping 192.168.1.100 -t


Pinging 192.168.1.100 with 32 bytes of data:

Request timed out.
Reply from 192.168.1.101: bytes=32 time=7ms TTL=128
Reply from 192.168.1.101: bytes=32 time=1ms TTL=128
Reply from 192.168.1.101: bytes=32 time=2ms TTL=128
Reply from 192.168.1.101: bytes=32 time=1ms TTL=128
Reply from 192.168.1.101: bytes=32 time=2ms TTL=128
Reply from 192.168.1.101: bytes=32 time=2ms TTL=128
Reply from 192.168.1.101: bytes=32 time=1ms TTL=128
Reply from 192.168.1.101: bytes=32 time=1ms TTL=128
Reply from 192.168.1.101: bytes=32 time=1ms TTL=128
```

**Step 8.** Configure the TCP/IP settings of Site-2 to “Obtain an IP address automatically”.

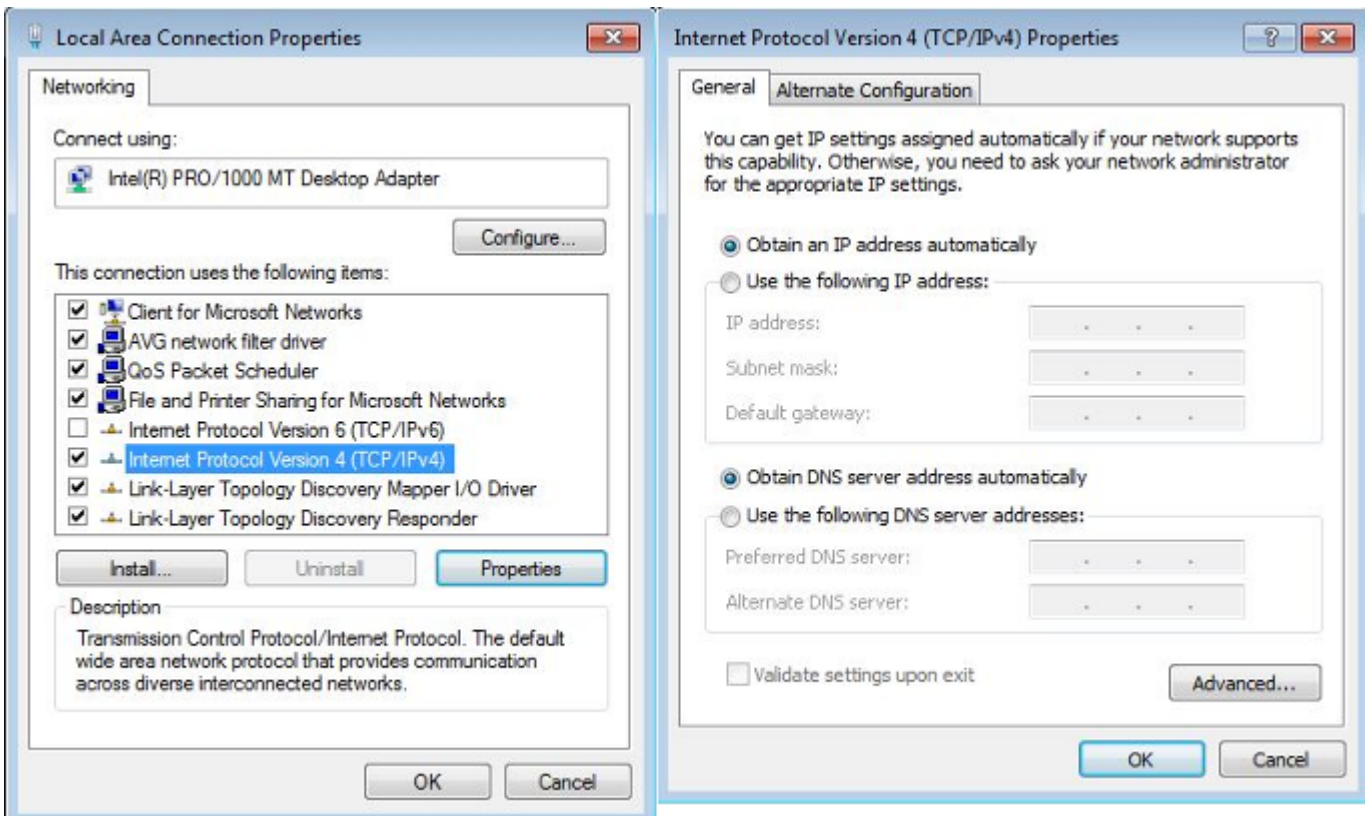

**Step 9.** Use command line tool to ping the DNS (e.g., Google) to ensure Site-2 can access internet through the wireless connection.

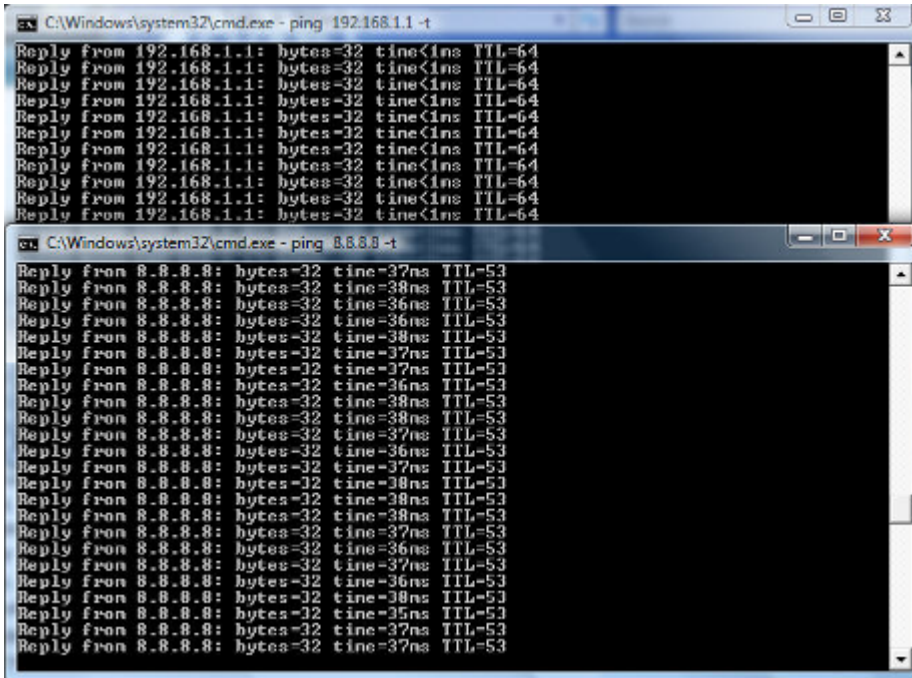

```
C:\Windows\system32\cmd.exe - ping 192.168.1.1 -t
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64

C:\Windows\system32\cmd.exe - ping 8.8.8.8 -t
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=36ms TTL=53
Reply from 8.8.8.8: bytes=32 time=36ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=36ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=36ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=36ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=36ms TTL=53
Reply from 8.8.8.8: bytes=32 time=38ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=35ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
Reply from 8.8.8.8: bytes=32 time=37ms TTL=53
```


The following hints should be noted:




- 1) The encryption method must be the same as that of both sites if configured.
- 2) Both sites should be Line-of-Sight.
- 3) For the short distance connection less than 1km, please reduce the "RF Output Power" of both sites.
- 4) For the long distance connection over 1km, please adjust the "Distance" to the actual distance or double the actual distance.

## Q2: How to set up the WDS Connection

### Topology:

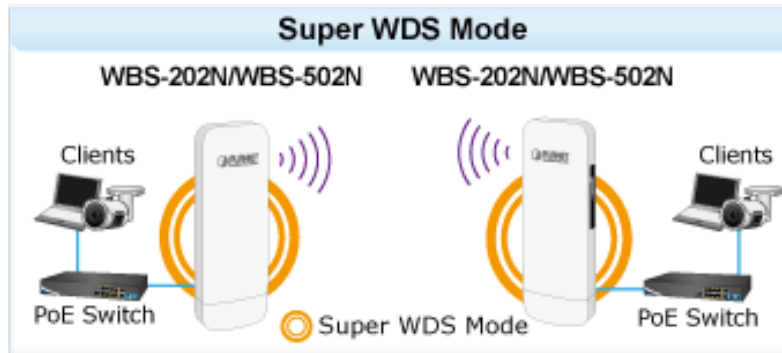

**Step 1.** Use static IP in the PCs that are connected with AP-1 (Site-1) and AP-2 (Site-2). In this case, Site-1 is “192.168.1.100”, and Site-2 is “192.168.1.200”.

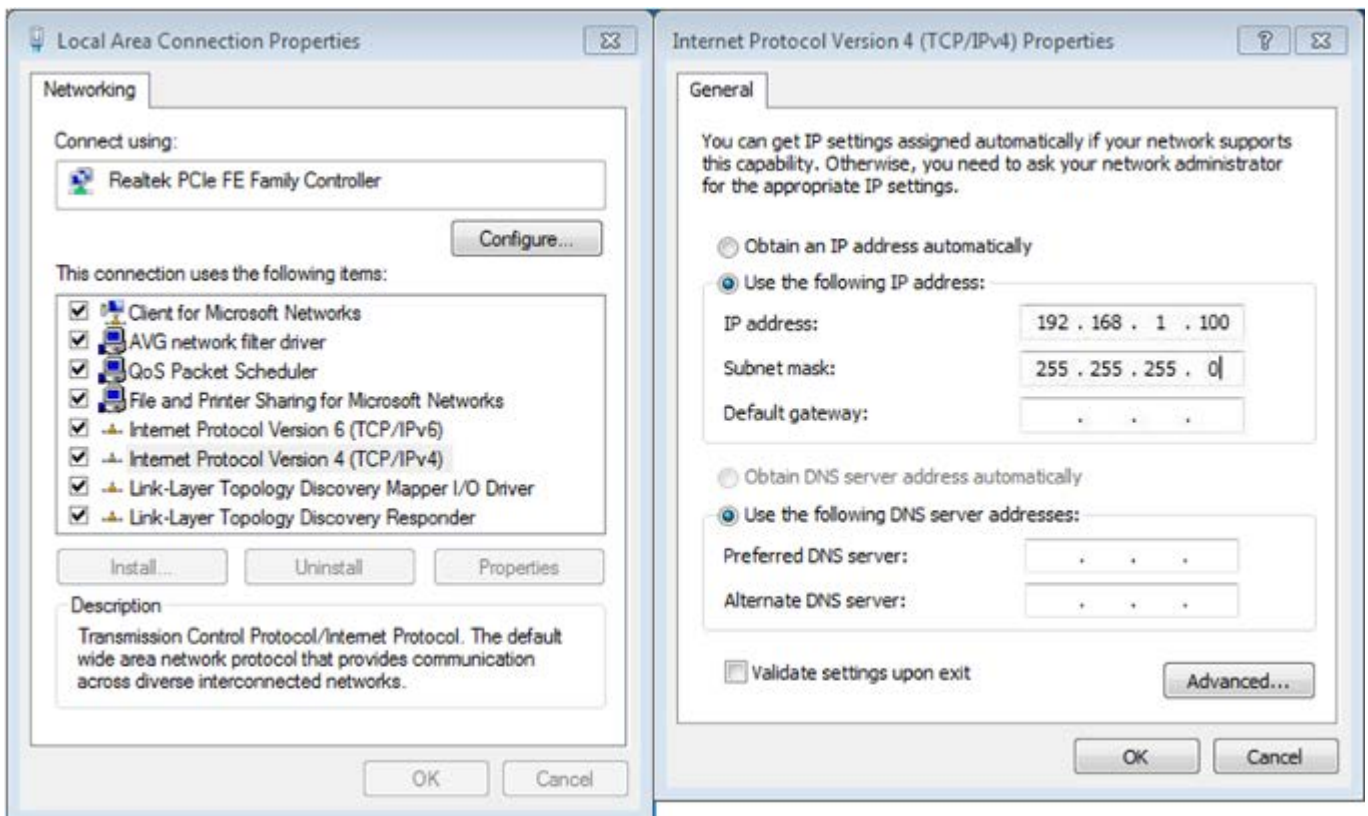

**Step 2.** In AP-2, change the default IP to the same IP range but different from AP-1. In this case, the IP is changed to **192.168.1.252**.




**LAN Settings**

IP Mode	Static IP
Lan IP	192.168.1.252
Subnet	255.255.255.0

**Step 3.** In both APs, go to “**Wizard**” to configure it in **Super WDS** Mode.




**Step 4.** In AP1 set up WDS SSID, for example WDS-1. Select Encrypt for WEP and enter password.

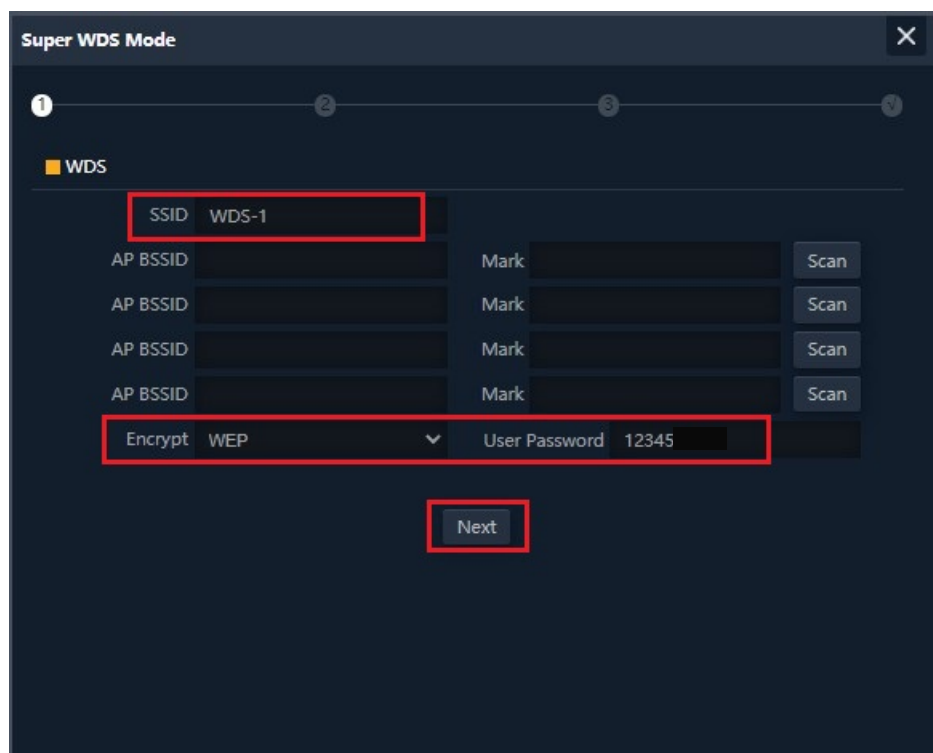

The screenshot shows the 'Super WDS Mode' configuration window. It has a progress bar at the top with four steps. The 'WDS' section is active. The 'SSID' field is set to 'WDS-1' (highlighted with a red box). Below this are four rows for 'AP BSSID' and 'Mark', each with a 'Scan' button. The 'Encrypt' dropdown is set to 'WEP' and the 'User Password' field contains '12345' (both highlighted with a red box). At the bottom, there is a 'Next' button (highlighted with a red box).

**Step 5.** Finish the 2.4G/5G Wi-Fi and LAN setting.

**Step 6.** Click “Home” to check WDS status.

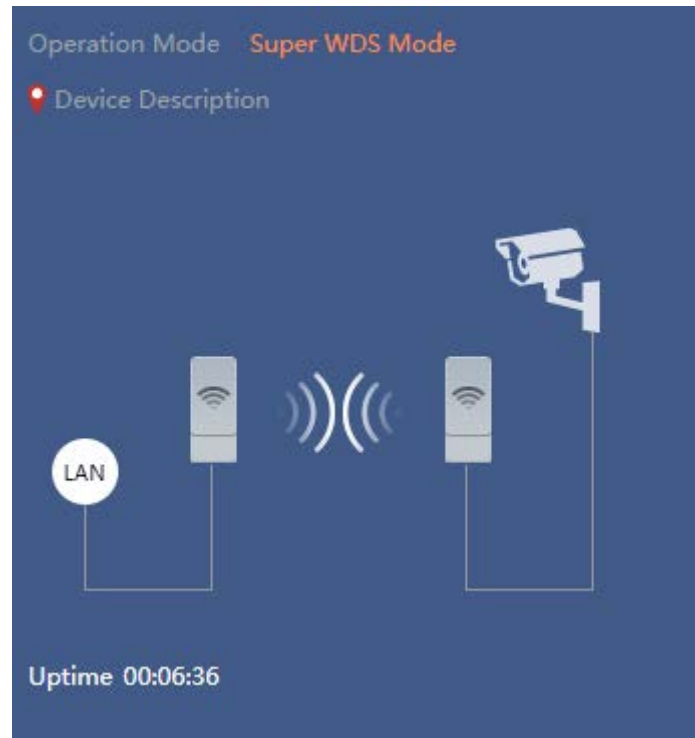


**Step 7.** In AP2 scan AP1 WDS SSID, for example WDS-1. Select Encrypt for WEP and enter password.

Wireless List	
	<b>C7200E-5-1</b> Channel[ 100 ] MAC[ A8:F7:E0:55:41:7C ] Signal[ -39dBm ] WPA/WPA2PSK_AES
	<b>WDS-3</b> Channel[ 100 ] MAC[ C2:F7:E0:55:41:7C ] Signal[ -46dBm ] WEP
	<b>scap-ap</b> Channel[ 100 ] MAC[ BA:F7:E0:55:65:D9 ] Signal[ -50dBm ] Open
	<b>WDS-1</b> Channel[ 100 ] MAC[ C2:F7:E0:55:65:D9 ] Signal[ -52dBm ] WEP
	<b>512AC-1</b> Channel[ 100 ] MAC[ A8:F7:E0:55:65:D9 ] Signal[ -52dBm ] WPAPSK_AES
<b>VAP 5G</b>	



**Step 8.** Confirm SSID and MAC. Select Encrypt for WEP and enter password.

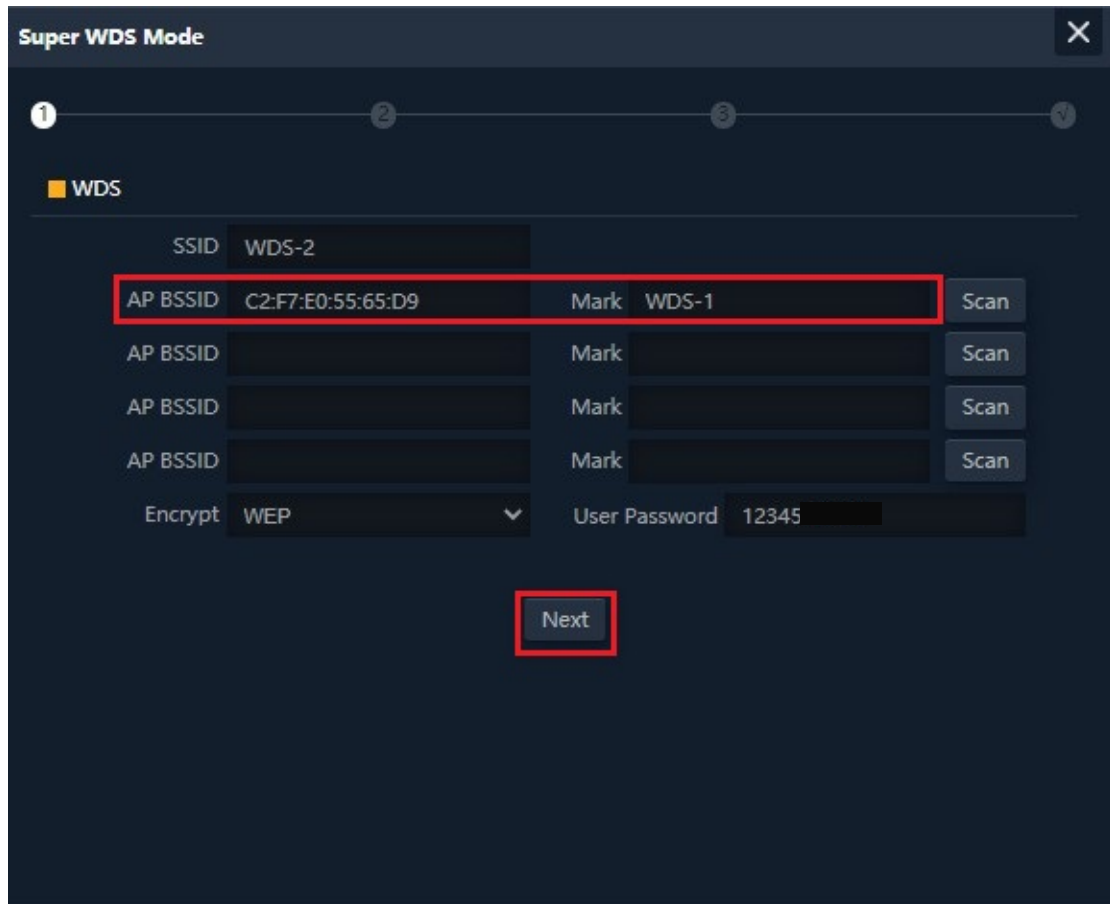

**Super WDS Mode**

1 2 3 4

WDS

SSID WDS-2

AP BSSID C2:F7:E0:55:65:D9 Mark WDS-1 Scan

AP BSSID Mark Scan

AP BSSID Mark Scan


AP BSSID Mark Scan

Encrypt WEP User Password 12345

Next


**Step 9.** Finish the 2.4G/5G Wi-Fi and LAN setting.

**Step 10.** Go to “WDS Information” to check connection status.

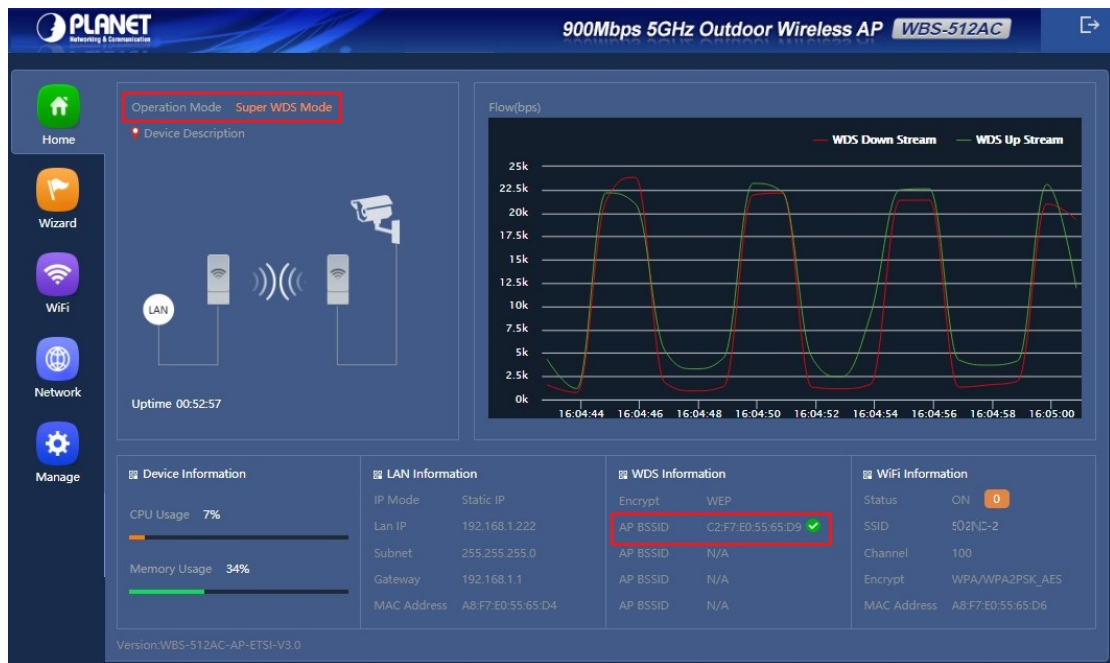

**Step 11.** Use command line tool to ping each other to ensure the link is successfully established.

From Site-1, ping 192.168.1.200; and in Site-2, ping 192.168.1.100.

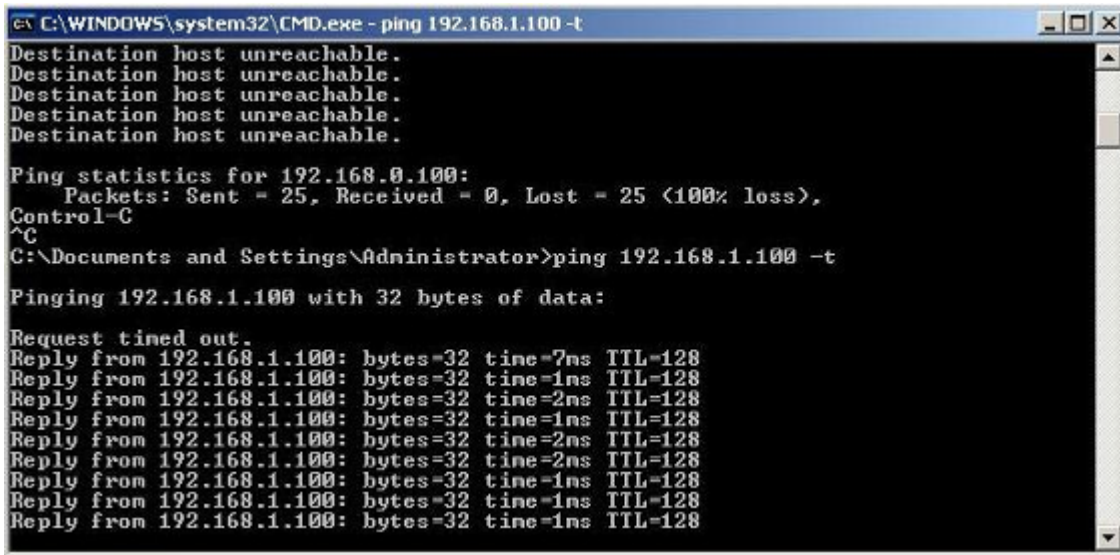

```
C:\WINDOWS\system32\CMD.exe - ping 192.168.1.100 -t
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.
Destination host unreachable.

Ping statistics for 192.168.0.100:
    Packets: Sent = 25, Received = 0, Lost = 25 (100% loss),
Control-C
^C
C:\Documents and Settings\Administrator>ping 192.168.1.100 -t

Pinging 192.168.1.100 with 32 bytes of data:

Request timed out.
Reply from 192.168.1.100: bytes=32 time=7ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=2ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
Reply from 192.168.1.100: bytes=32 time=1ms TTL=128
```

---

The following hints should be noted:



- 1) The encryption method must be the same as that of both sites if configured.
  - 2) Both sites should be Line-of-Sight.
  - 3) For the short distance connection less than 1km, please reduce the "RF Output Power" of both sites.
  - 4) For the long distance connection over 1km, please adjust the "Distance" to the actual distance or double the actual distance.
-

## Appendix C: Troubleshooting

If you find the AP is working improperly or stop responding to you, please read this troubleshooting first before contacting the dealer for help. Some problems can be solved by yourself within a very short time.

Scenario	Solution
The AP is not responding to me when I want to access it by Web browser.	<ol style="list-style-type: none"> <li>Please check the connection of the power cord and the Ethernet cable of this AP. All cords and cables should be correctly and firmly inserted into the AP.</li> <li>If all LEDs on this AP are off, please check the status of power adapter, and make sure it is correctly powered.</li> <li>You must use the same IP address section which AP uses.</li> <li>Are you using MAC or IP address filter? Try to connect the AP by another computer and see if it works; if not, please reset the AP to the factory default settings by pressing the 'reset' button for over 7 seconds.</li> <li>Use the Smart Discovery Tool to see if you can find the AP or not.</li> <li>If you did a firmware upgrade and this happens, contact your dealer of purchase for help.</li> <li>If all the solutions above don't work, contact the dealer for help.</li> </ol>
I can't get connected to the Internet.	<ol style="list-style-type: none"> <li>Go to 'Status' -&gt; 'Internet Connection' menu on the router connected to the AP, and check Internet connection status.</li> <li>Please be patient, sometimes Internet is just that slow.</li> <li>If you've connected a computer to Internet directly before, try to do that again, and check if you can get connected to Internet with your computer directly attached to the device provided by your Internet service provider.</li> <li>Check PPPoE / L2TP / PPTP user ID and password entered in the router's settings again.</li> <li>Call your Internet service provider and check if there's something wrong with their service.</li> <li>If you just can't connect to one or more website, but you can still use other internet services, please check URL/Keyword filter.</li> <li>Try to reset the AP and try again later.</li> <li>Reset the device provided by your Internet service provider too.</li> </ol>



	<ul style="list-style-type: none"> <li>i. Try to use IP address instead of host name. If you can use IP address to communicate with a remote server, but can't use host name, please check DNS setting.</li> </ul>
I can't locate my AP by my wireless device.	<ul style="list-style-type: none"> <li>a. 'Broadcast ESSID' set to off?</li> <li>b. Both two antennas are properly secured.</li> <li>c. Are you too far from your AP? Try to get closer.</li> <li>d. Please remember that you have to input ESSID on your wireless client manually, if ESSID broadcast is disabled.</li> </ul>
File downloading is very slow or breaks frequently.	<ul style="list-style-type: none"> <li>a. Are you using QoS function? Try to disable it and try again.</li> <li>b. Internet is slow sometimes. Please be patient.</li> <li>c. Try to reset the AP and see if it's better after that.</li> <li>d. Try to know what computers do on your local network. If someone's transferring big files, other people will think Internet is really slow.</li> <li>e. If this never happens before, call you Internet service provider to know if there is something wrong with their network.</li> </ul>
I can't log into the web management interface; the password is wrong.	<ul style="list-style-type: none"> <li>a. Make sure you're connecting to the correct IP address of the AP!</li> <li>b. Password is case-sensitive. Make sure the 'Caps Lock' light is not illuminated.</li> <li>c. If you really forget the password, do a hard reset.</li> </ul>
The AP becomes hot	<ul style="list-style-type: none"> <li>a. This is not a malfunction, if you can keep your hand on the AP's case.</li> <li>b. If you smell something wrong or see the smoke coming out from AP or A/C power adapter, please disconnect the AP and power source from utility power (make sure it's safe before you're doing this!), and call your dealer of purchase for help.</li> </ul>

## Appendix D: Glossary

- **802.11ac** - 802.11ac is a wireless networking standard in the 802.11 family (which is marketed under the brand name Wi-Fi), developed in the IEEE Standards Association process, providing high-throughput wireless local area networks (WLANs) on the 5 GHz band.
- **802.11n** - 802.11n builds upon previous 802.11 standards by adding MIMO (multiple-input multiple-output). MIMO uses multiple transmitter and receiver antennas to allow for increased data throughput via spatial multiplexing and increased range by exploiting the spatial diversity, perhaps through coding schemes like Alamouti coding. The Enhanced Wireless Consortium (EWC) [3] was formed to help accelerate the IEEE 802.11n development process and promote a technology specification for interoperability of next-generation wireless local area networking (WLAN) products.
- **802.11a** - 802.11a was an amendment to the IEEE 802.11 wireless local network specifications that defined requirements for an orthogonal frequency division multiplexing (OFDM) communication system. It was originally designed to support wireless communication in the unlicensed national information infrastructure (U-NII) bands (in the 5–6 GHz frequency range) as regulated in the United States by the Code of Federal Regulations, Title 47, Section 15.407.
- **802.11b** - The 802.11b standard specifies a wireless networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.
- **802.11g** - specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.
- **DDNS (Dynamic Domain Name System)** - The capability of assigning a fixed host and domain name to a dynamic Internet IP Address.
- **DHCP (Dynamic Host Configuration Protocol)** - A protocol that automatically configure the TCP/IP parameters for the all the PC(s) that are connected to a DHCP server.
- **DMZ (Demilitarized Zone)** - A Demilitarized Zone allows one local host to be exposed to the Internet for a special-purpose service such as Internet gaming or videoconferencing.
- **DNS (Domain Name System)** - An Internet Service that translates the names of websites into IP addresses.
- **Domain Name** - A descriptive name for an address or group of addresses on the Internet.
- **DSL (Digital Subscriber Line)** - A technology that allows data to be sent or received over existing traditional phone lines.
- **ISP (Internet Service Provider)** - A company that provides access to the Internet.

- **MTU (Maximum Transmission Unit)** - The size in bytes of the largest packet that can be transmitted.
- **NAT (Network Address Translation)** - NAT technology translates IP addresses of a local area network to a different IP address for the Internet.
- **PPPoE (Point to Point Protocol over Ethernet)** - PPPoE is a protocol for connecting remote hosts to the Internet over an always-on connection by simulating a dial-up connection.
- **SSID - A Service Set Identification** is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name.
- **WEP (Wired Equivalent Privacy)** - A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.
- **Wi-Fi** - A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see <http://www.wi-fi.net>), an industry standards group promoting interoperability among 802.11b devices.
- **WLAN (Wireless Local Area Network)** - A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.

## EC Declaration of Conformity

English	Hereby, <b>PLANET Technology Corporation</b> , declares that this <b>300Mbps 802.11n Wireless Outdoor CPE</b> is in compliance with the essential requirements and other relevant provisions of Directive <b>2014/53/EU</b> .	Lietuviškai	Šiuo <b>PLANET Technology Corporation</b> ,, skelbia, kad <b>300Mbps 802.11n Wireless Outdoor CPE</b> tenkina visus svarbiausius <b>2014/53/EU</b> direktyvos reikalavimus ir kitas svarbias nuostatas.
Česky	Společnost <b>PLANET Technology Corporation</b> , tímto prohlašuje, že tato <b>300Mbps 802.11n Wireless Outdoor CPE</b> splňuje základní požadavky a další příslušná ustanovení směrnice <b>2014/53/EU</b> .	Magyar	A gyártó <b>PLANET Technology Corporation</b> , kijelenti, hogy ez a <b>300Mbps 802.11n Wireless Outdoor CPE</b> megfelel az <b>2014/53/EK</b> irányelv alapkövetelményeinek és a kapcsolódó rendelkezéseknek.
Dansk	<b>PLANET Technology Corporation</b> , erklærer herved, at følgende udstyr <b>300Mbps 802.11n Wireless Outdoor CPE</b> overholder de væsentlige krav og øvrige relevante krav i direktiv <b>2014/53/EU</b>	Malti	Hawnhekk, <b>PLANET Technology Corporation</b> , jiddikjara li dan <b>300Mbps 802.11n Wireless Outdoor CPE</b> jikkonforma mal-ħtiġijiet essenzzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva <b>2014/53/EU</b>
Deutsch	Hiermit erklärt <b>PLANET Technology Corporation</b> , dass sich dieses Gerät <b>300Mbps 802.11n Wireless Outdoor CPE</b> in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie <b>2014/53/EU</b> befindet". (BMW i)	Nederlands	Hierbij verklaart , <b>PLANET Technology Corporation</b> , dat <b>300Mbps 802.11n Wireless Outdoor CPE</b> in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn <b>2014/53/EU</b>
Eestikeeles	Käesolevaga kinnitab <b>PLANET Technology Corporation</b> , et see <b>300Mbps 802.11n Wireless Outdoor CPE</b> vastab Euroopa Nõukogu direktiivi <b>2014/53/EU</b> põhinõuetele ja muudele olulistele tingimustele.	Polski	Niniejszym firma <b>PLANET Technology Corporation</b> , oświadcza, że <b>300Mbps 802.11n Wireless Outdoor CPE</b> spełnia wszystkie istotne wymagania i klauzule zawarte w dokumencie „Directive <b>2014/53/EU</b> ”.
Ελληνικά	<i>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ , <b>PLANET Technology Corporation</b>, ΔΗΛΩΝΕΙ ΟΤΙ ΑΥΤΟ <b>300Mbps 802.11n Wireless Outdoor CPE</b> ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ <b>2014/53/EU</b></i>	Português	<b>PLANET Technology Corporation</b> , declara que este <b>300Mbps 802.11n Wireless Outdoor CPE</b> está conforme com os requisitos essenciais e outras disposições da Directiva <b>2014/53/EU</b> .
Español	Por medio de la presente, <b>PLANET Technology Corporation</b> , declara que <b>300Mbps 802.11n Wireless Outdoor CPE</b> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva <b>2014/53/EU</b>	Slovensky	Výrobca <b>PLANET Technology Corporation</b> , týmto deklaruje, že táto <b>300Mbps 802.11n Wireless Outdoor CPE</b> je v súlade so základnými požiadavkami a ďalšími relevantnými predpismi smernice <b>2014/53/EU</b> .
Français	Par la présente, <b>PLANET Technology Corporation</b> , déclare que les appareils du <b>300Mbps 802.11n Wireless Outdoor CPE</b> sont conformes aux exigences essentielles et aux autres dispositions pertinentes de la directive <b>2014/53/EU</b>	Slovensko	<b>PLANET Technology Corporation</b> , s tem potrjuje, da je ta <b>300Mbps 802.11n Wireless Outdoor CPE</b> skladen/a z osnovnimi zahtevami in ustreznimi določili Direktive <b>2014/53/EU</b> .
Italiano	Con la presente , <b>PLANET Technology Corporation</b> , dichiara che questo <b>300Mbps 802.11n Wireless Outdoor CPE</b> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva <b>2014/53/EU</b> .	Suomi	<b>PLANET Technology Corporation</b> , vakuuttaa täten että <b>300Mbps 802.11n Wireless Outdoor CPE</b> tyypinen laite on direktiivin <b>2014/53/EU</b> oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Latviski	Ar šo <b>PLANET Technology Corporation</b> , apliecina, ka šī <b>300Mbps 802.11n Wireless Outdoor CPE</b> atbilst Direktīvas <b>2014/53/EU</b> pamatprasībām un citiem atbilstošiem noteikumiem.	Svenska	Härmed intygar, <b>PLANET Technology Corporation</b> , att denna <b>300Mbps 802.11n Wireless Outdoor CPE</b> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv <b>2014/53/EU</b> .

